

# MOXI<sup>®</sup> HD DVR

## User Guide

# Contents

<b>Welcome.....</b>	<b>1</b>	<b>Using the SuperTicker™ .....</b>	<b>47</b>
Moxi Orientation.....	2	Using SuperTicker .....	48
Using Your Remote.....	9	<b>Viewing Photos.....</b>	<b>51</b>
<b>Watching TV.....</b>	<b>15</b>	Flickr Photos .....	52
Channels .....	16	Mosaic .....	58
TV Filters .....	17	<b>Listening to Music.....</b>	<b>59</b>
Flip Bar.....	18	<b>Using Media Link.....</b>	<b>73</b>
Controlling Live TV.....	20	Accessing Your Media .....	74
<b>Finding a Show.....</b>	<b>23</b>	<b>Using eControls.....</b>	<b>79</b>
Finding a Show .....	24	Automating your home .....	80
What's On Next .....	28	<b>Playing Games.....</b>	<b>87</b>
Preview Paddle.....	28	Playing Games.....	88
<b>Recording TV.....</b>	<b>33</b>	<b>Surfing MoxiNet.....</b>	<b>91</b>
Record a Show.....	34	MoxiNet.....	92
<b>Enjoying Your Recordings....</b>	<b>43</b>	<b>Messages.....</b>	<b>97</b>

Viewing Messages..... 98

**Moxi Settings.....101**

Parental Controls..... 102

Guide Data..... 105

Skip..... 107

Storage Information..... 107

Closed Caption..... 108

Secondary Audio..... 108

TV Setup..... 109

Aspect Ratio..... 110

Audio Output..... 110

External Hard Drive..... 111

Sound Effects..... 111

Front Panel Lights..... 111

External Hard Drive..... 111

Storage Information..... 112

**Installation - Configuration..115**

Ventilation..... 118

Configuration Alternatives..... 119

Video Connection..... 121

Audio Cable Connection..... 122

Audio Receiver Connection..... 122

Broadband Internet Connection..... 124

**Installation - Feature Setup.127**

External Storage Device..... 132

Moxi.com..... 139

**Safety Instructions.....141**



# 1


## Welcome

Congratulations on purchasing your new Moxi HD DVR. We're sure that you two will be very happy together. Let's get you started with all your Moxi HD DVR can do.

# Moxi Orientation

Your Moxi experience starts with pressing the **Moxi** button on your remote. You'll then see the fully HD Moxi Menu. The top level of the Moxi Menu is a horizontal band that runs across the middle of the screen. This horizontal band gives you access to all of the options your Moxi HD DVR has to offer.



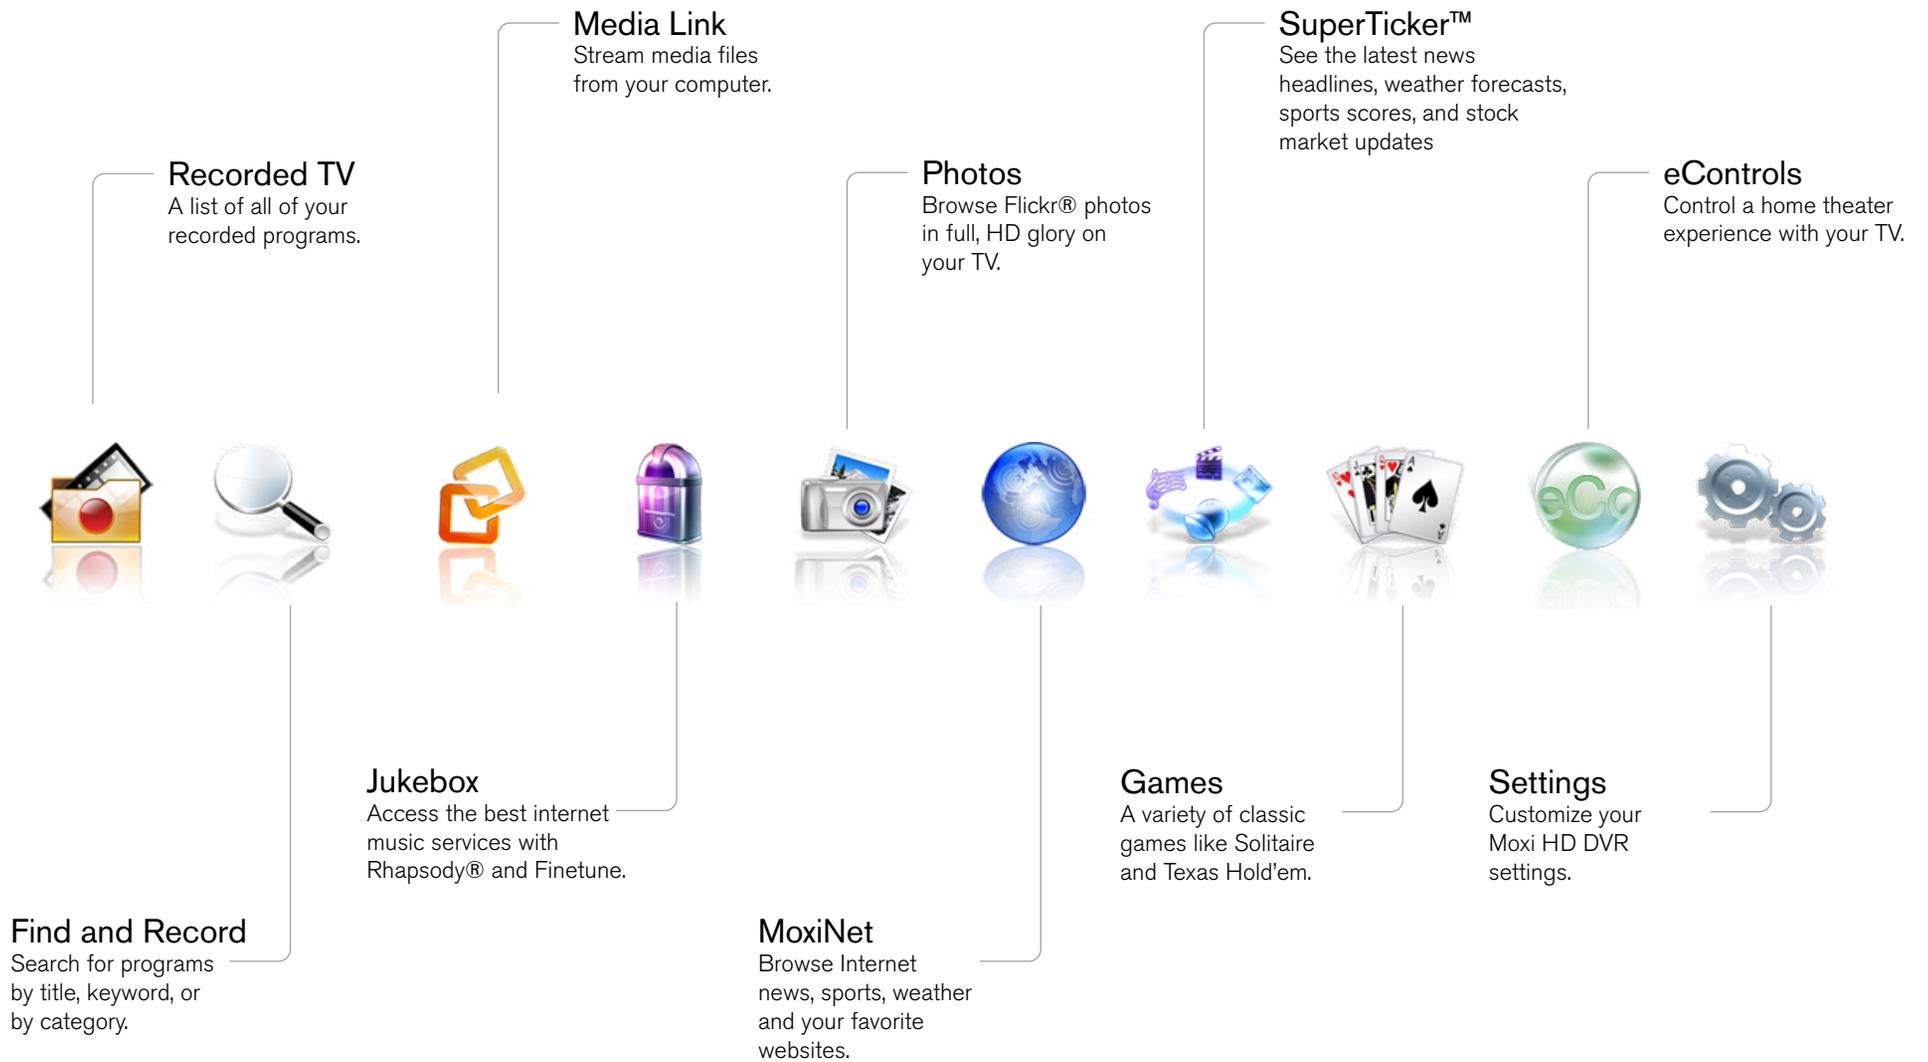



## LEARNING THE LINGO

Here are some terms that will help us stay on the same page:

- **Horizontal categories** – the cards that run along the horizontal axis of the screen
- **Vertical lists** – the cards in each category along the vertical axis
- **Center focus** – the location on the screen where you can select a card
- **Action menus** – the list of choices for a particular card that appears when you press **OK**
- **Flip bar** – the program guide information that appears when you are watching media full screen
- **Player bar** – the progress graphic that appears when you fast-forward, rewind, pause or play a show
- **Mini TV** – the TV in the upper right that appears in the Moxi Menu.

## Horizontal Categories

Once you've pressed the **Moxi** button to bring up the Moxi Menu, the top level of choices will appear in a horizontal menu; use the left and right arrow buttons to browse your choices. There are a couple of features to be aware of with the horizontal categories:

1. **Auto Expand** - When you bring a horizontal card into center focus, all of the choices in that category will open up in a vertical list.
2. **Navigation Fade Back** - When a vertical list appears, the Moxi Menu horizontal navigation fades back. Simply pressing the left or right arrow buttons will bring the menu right back.

## Vertical Lists

Use the up and down arrow buttons to scroll through a vertical list.


In the vertical list, there are two special cards:

1. **End of List Marker** – A thin, colored line that defines the beginning and end of a vertical list.
2. **Option Card** – Some categories contain cards that allow you to take action on the entire vertical list. Pressing **OK** on these option cards will reveal all of the actions available. Option cards will differ in appearance from the rest of the cards in the list. In some areas of the Moxi Menu, such as Rhapsody or Find by Category, the option card will allow you to jump to a deeper level in the menu.

## Turbo Scroll

If you hold down an arrow button, you can increase your browsing speed. The icons will help you quickly recognize media as it scrolls by.

# The Moxi Menu

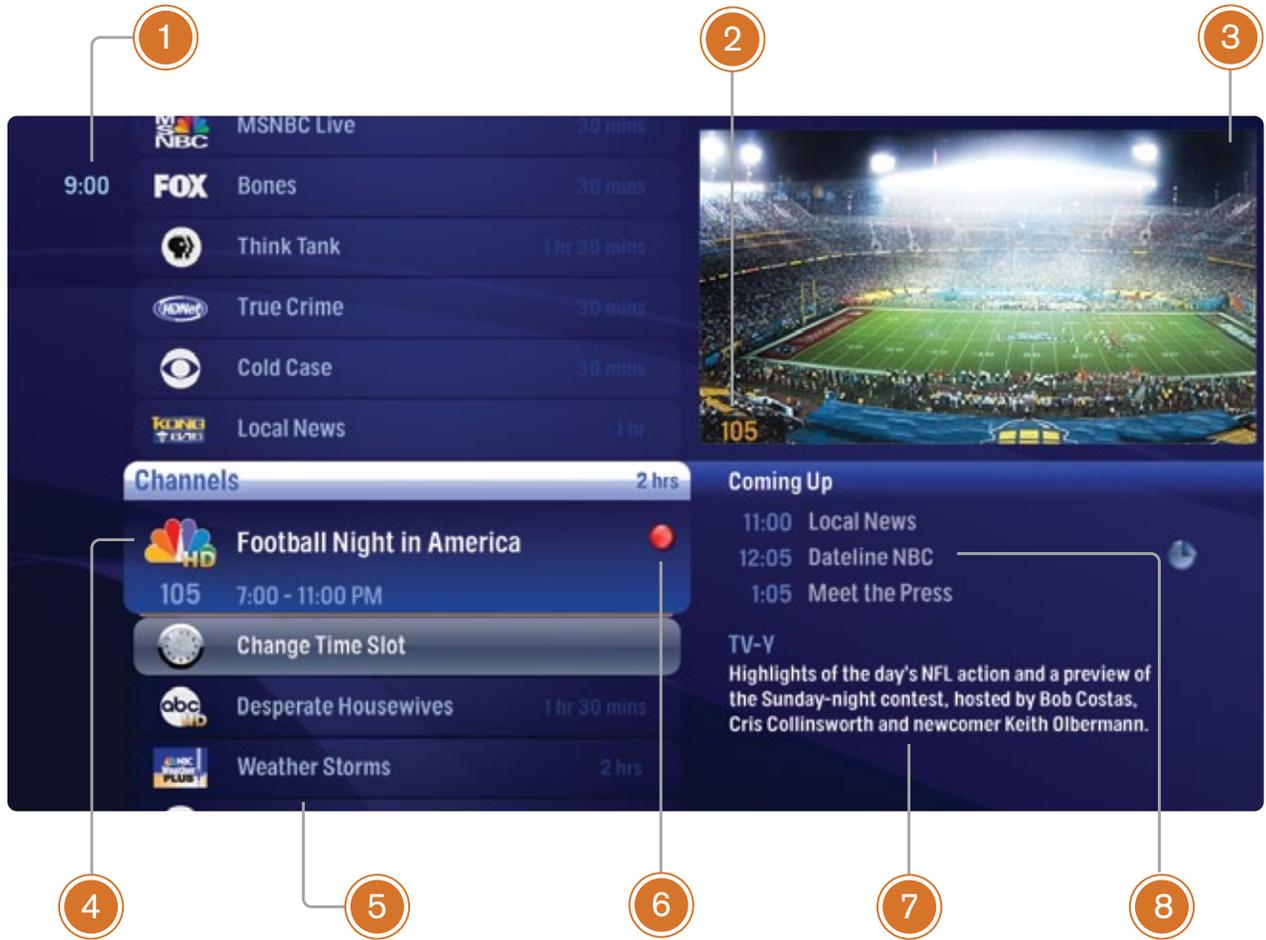

## Welcome to Moxi

- 1 TIME**  
With the current time, you'll know when your show begins.
- 2 CURRENT CHANNEL**  
Displays the channel that is playing in Mini TV. If the program is recorded, an icon will display the current status - i.e.: play or pause..
- 3 MINI TV**  
Even when channel surfing, Mini TV always keeps you in the action.
- 4 CENTER FOCUS**  
The current selection is in the center of the menu. Pressing **OK** on this item brings up an action menu.
- 5 VERTICAL LIST**  
When you're in channels, the vertical list displays all available shows.
- 6 PROGRAM STATUS**  
These small icons let you know the status of a recorded show or scheduled recording.
- 7 PROGRAM INFORMATION**  
The program information about the item in center focus.
- 8 PREVIEW PANEL**  
Displays the shows coming up on the channel in center focus.

## CENTER FOCUS

Center focus refers to the highlighted area that forms the largest card on the screen.

Bringing an item into center focus will allow you to select it in order to view a list of options.

## Center Focus

When you see something that interests you in the Moxi Menu, use the arrow buttons to bring it into center focus; you'll see more information about that option. The following diagram outlines the center focus elements when a TV program is currently selected.




- 1 CATEGORY**  
The name of the category moved into center focus
- 2 SHOW TITLE**  
The name of the program or item
- 3 TIME REMAINING**  
The time remaining in the program
- 4 PROGRAM STATUS**  
If the program is recording or scheduled to record
- 5 PROGRAM LENGTH**  
The time the program begins and ends
- 6 CHANNEL NUMBER**  
The channel the program is on
- 7 CHANNEL LOGO**  
The logo of the channel the program is on

## Action Menus

When you press **OK** on an item in center focus, you'll get a list of options for that item in an action menu.

Use the up and down arrow buttons to scroll through your action menu options. Action menus have a center focus, just like the Moxi Menu. To select an option, bring it into center focus, and press **OK**.



To close the action menu, either select **close** or press the left arrow button.

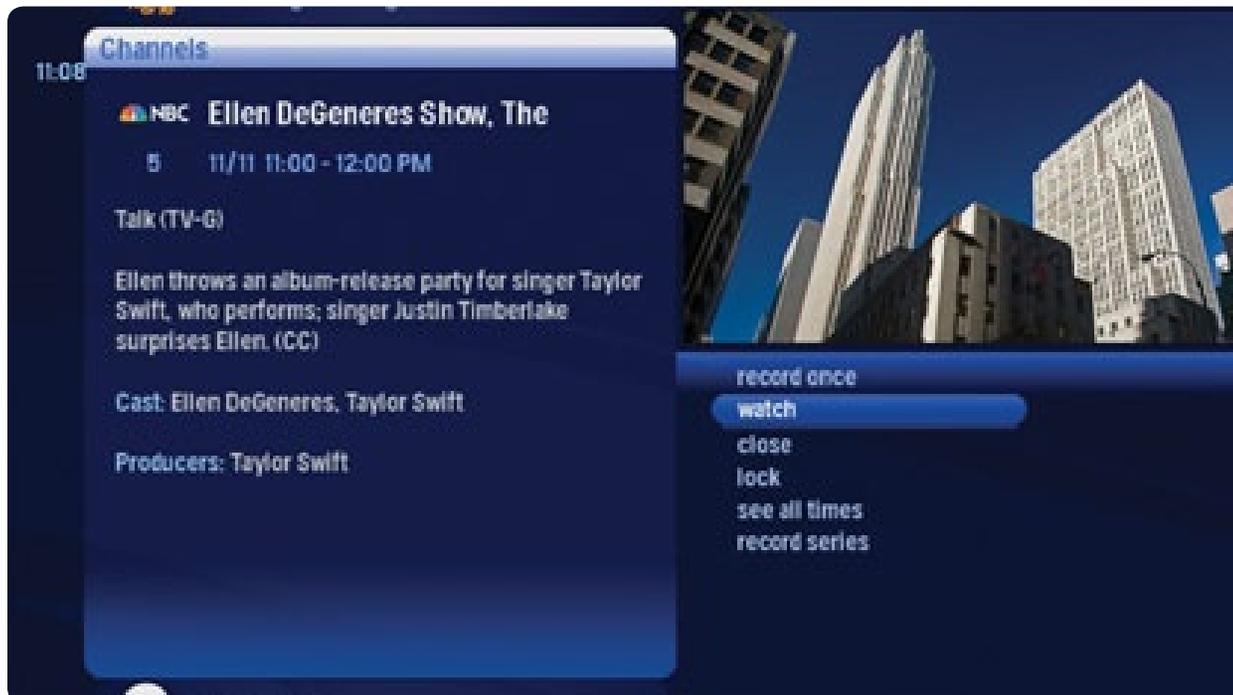

## Mini TV

The Mini TV lets you keep an eye on what you're watching while you're browsing the Moxi Menu. The Mini TV will show you what's currently playing, whether it's a photos slideshow, TV program or Jukebox album.

- To enjoy the media in the Mini TV full-screen, press **Zoom** on your remote control.
- To watch Live TV regardless of what's playing in the Mini TV, press **Live TV**.

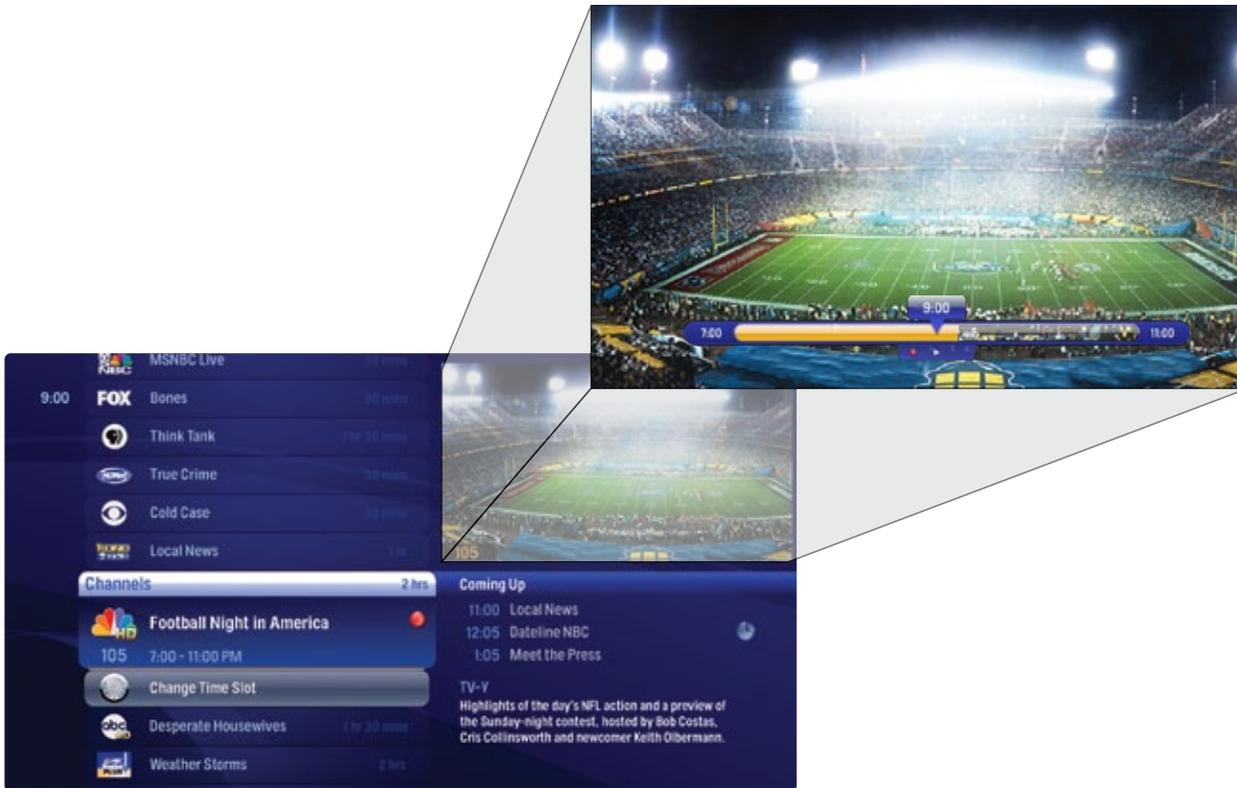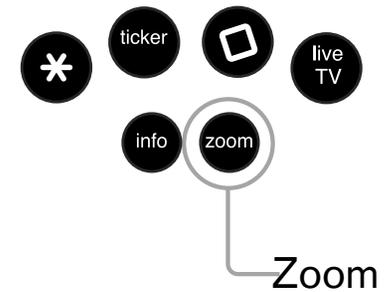

# Using Your Remote

Your remote will automatically allow you to control the Moxi Menu. See the Installation section of this guide for instructions on programming your remote to control the volume and power of your TV and an audio receiver.

Buttons on the remote are organized by function:

## Direct access buttons

The top remote buttons allow you to access special functions.

### 1 ASTERISK

Locks and unlocks topics and items on the SuperTicker. When viewing Web pages in the MoxiNet, asterisk brings up the virtual mouse.

### 2 TICKER

Alternates between displaying and hiding the SuperTicker

### 3 MOXI LENS ICON

Jumps you to your Recorded TV folder

### 4 LIVE TV


Jumps you directly to full-screen, Live TV, regardless of what's playing in the Mini TV

### 5 INFO

Displays additional information about the item in center focus

### 6 ZOOM

Alternates between full-screen and the place you were at in the Moxi Menu while continuing to play the same media. If you're currently viewing the SuperTicker, Zoom will alternate between turning it on and off.

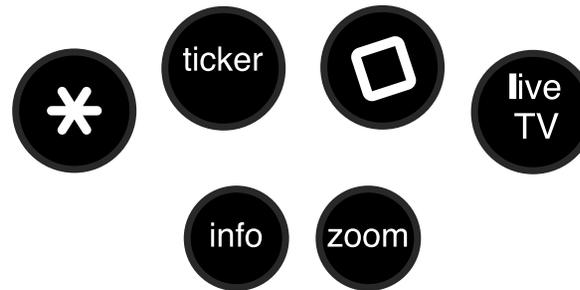

## REMOTE FUNCTIONS

Some buttons have different functions depending on what you're currently doing.

For example, in the Moxi Menu, the **ch+** button scrolls through Channels, but in live TV, it opens the Flip Bar and tunes to the next channel.

## REMOTE BATTERIES

When replacing batteries, use only high quality, alkaline batteries designed for use in electronic equipment.

## Moxi Menu Navigation

### 1 ARROWS

Move the horizontal or vertical bands one card backward or forward one item. Holding them down activates Turbo Mode and increases your browsing speed.

### 2 OK


Selects the item in center focus or executes an option in an action menu.

### 3 BACK

Takes a vertical list displaying TV programming back to the previous half hour. Also pages back through an info note.

### 4 NEXT

Takes a vertical list displaying TV programming forward to the next half hour. Also pages forward through an info note.

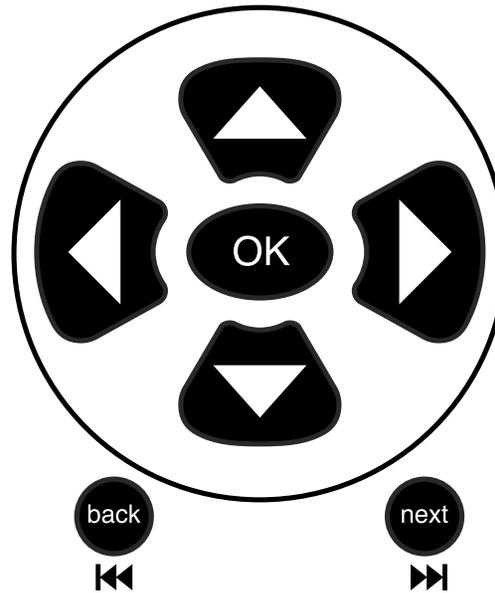

## Advanced keypad

### 5 NUMBER KEYS

Entering numbers will take you directly to the corresponding channel.

In Find By Keyword or Title:


- Numbers **2-9** enter letters.
- **Clear** clears the entire entry.
- **0** adds a space.
- **1** backspaces.



## Player controls

Control your recorded or live program with the following buttons:

- 1 MOXI**  
From recorded or Live TV, MOXI takes you back to Moxi menu.
- 2 PLAY**  
View the show at the point of fast forwarding or rewinding.
- 3 SKIP**  
Skips forward in your program the number of seconds that you predefine in Settings.
- 4 REPLAY**  
Rewinds the program seven seconds, so you can check out what you missed.
- 5 REWIND**  
Press up to three times (for three speeds) to rewind the show.
- 6 FAST-FORWARD**  
Press up to three times (for three speeds) to fast-forward.
- 7 RECORD**  
Press record while watching a show or with a show in center focus to record.
- 8 STOP**  
Exits out of a recorded show or stops a recording in progress if you're watching that show full screen.
- 9 PAUSE**  
Pauses the show you are watching.

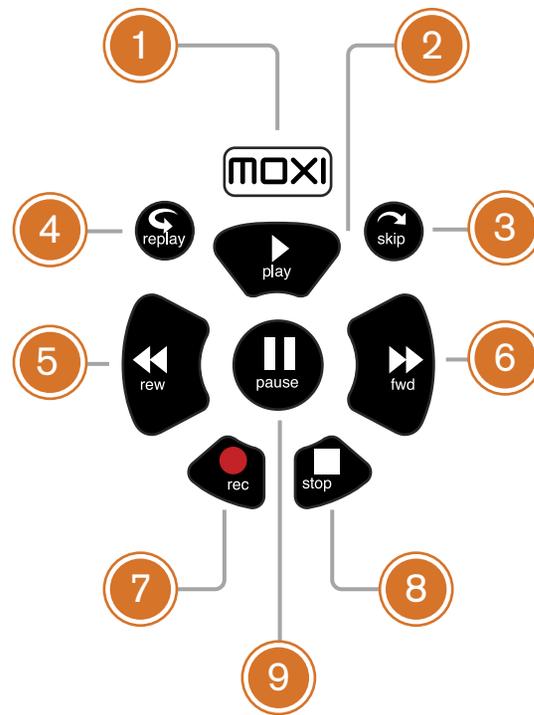

## Welcome to Moxi

### SKIP SETTING

Pressing the **skip** button on the remote moves you forward in recorded or stored programs in set increments.

You can change the increment by adjusting the skip options in the Settings category.

### ACTIVATE SLOW MOTION

To activate slow motion, press **pause**, and then press **fast-forward** once.

### FRAME ADVANCE


To activate frame advance, press **pause**, and then the **skip** button once for each frame.

## Moxi.com

To access your Moxi user account, go to the same Website you used for registration:  
<http://www.moxi.com>. You can change any of the information associated with your account there.

You'll have a chance to personalize your Moxi HD DVR and include some of the additional services that are available, such as Flickr, Finetune and Rhapsody. Moxi.com is also where you'll schedule programs to record on your DVR if you're away from home.

There are other reasons for coming back as well. At [moxi.com](http://moxi.com), you'll be able to learn about and enable new features for your DVR as they become available. Our tips and tricks section, troubleshooting guide, and FAQ are continually updated and will help you get the most out of your DVR.

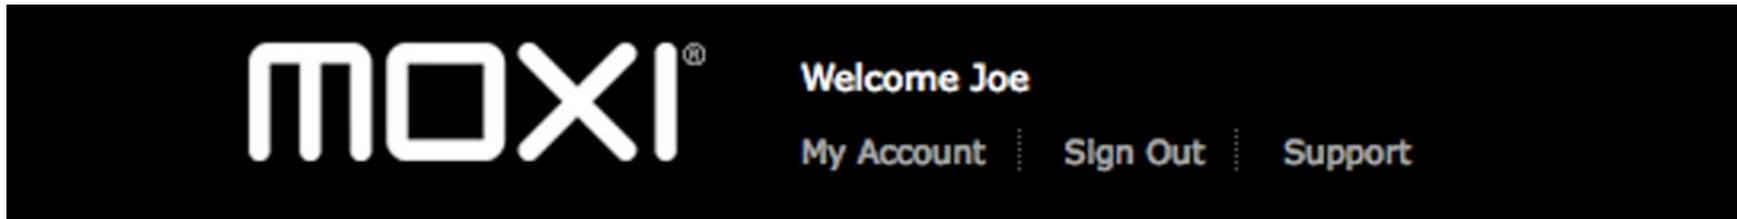





# 2

## Watching TV

With all of the channels available these days, it's tough to know what all of your options are. Your Moxi HD DVR gives you many ways to find what you want to watch.



# Channels

When you first press the **Moxi** button, you'll be in the Channels category on the horizontal menu. The Channels category lists all of the shows currently in your TV lineup. When you see a show you like, press the **OK** button to see a program info note with an action menu of options.

## Program Info Note

- 1 CHANNEL LOGO**  
The logo for the program's channel
- 2 SHOW TITLE**  
The name of the program or item
- 3 PROGRAM LENGTH**  
The time the program begins and ends
- 4 PROGRAM INFORMATION**  
Additional show information, such as show title, repeat, cast and crew
- 5 NOTE PAGES**  
Number of pages of program information
- 6 NEXT & BACK**  
Tips to use the **Back** and **Next** buttons to page through the note
- 7 OPTIONS**  
The list of options available for the selected piece of media

The screenshot shows a TV interface with a dark blue background. At the top, there's a 'Recorded TV' header. Below it, the NBC peacock logo is next to the show title '30 Rock'. The channel '5.1' and the time '12/10 10:00 - 12:30 PM' are displayed. The program information includes 'Sitcom (TV-PG)' and 'Expired: 10/6 8:30 PM'. A synopsis follows: "'Seinfeld Vision' Jack tells Liz that, despite what she thinks, she is not over Floyd; Jack has a plan to insert 'Seinfeld' footage into the network's current shows. (CC)'. Below the synopsis is the cast list: 'Cast: Tina Fey, Alec Baldwin, Tracy Morgan, Jane Krakowski, Jack McBrayer, Scott Adsit, Jerry Seinfeld, Lonny Ross, Judah Friedlander, Keith Powell, Katrina Bowden, Maulik Pancholy'. At the bottom, there are navigation buttons: '1 of 2' and 'next'. On the right side, there is an action menu with options: 'delete', 'play' (highlighted), 'close', 'lock', 'see all times', 'keep until', and 'recording options'. Numbered callouts 1 through 7 point to these various elements.

## TV Filters

The Moxi Menu contains a group of filter cards: News, Sports, Movies, HD, Music and Kids, that only show you the types of programs you want to see. So, if you're only interested in HD, for example, the HD card will show you all of the HDTV programs available now and up to two weeks in the future.




## Favorites

The Favorites filter automatically populates with the fifteen channels you watch the most frequently.

The favorites list builds from channels that appear in the Channels category and excludes any channels blocked by parental controls. You can delete a single channel at a time by selecting the channel and choosing remove channel from the action menu. You can also press clear on the remote control.

Clear the entire favorites list by selecting the options card (you might need to scroll down to see it), and then choosing **clear all** from the action menu.

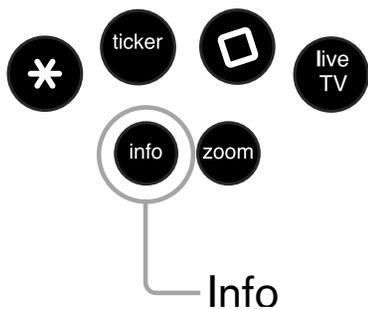

### PROGRAM INFO NOTES

Just like in the Moxi Menu, you can press the **Info** button with the Flip Bar displayed to bring up a program info note, which will give you more detailed information on the selected show.

## Flip Bar

When you're watching full-screen TV, the Flip Bar is your mini Moxi Menu. Pressing an arrow or the **OK** button or changing the channel will bring up the Flip Bar, giving you program information about what you're watching, what's on next, and what's on other channels.

The main panel of the Flip Bar gives you the program name, air time, and channel. Use the up and down arrows to change the channel displayed in the Flip Bar without leaving the program you're watching.


On the right, you'll see what's coming up next for the channel displayed in the Flip Bar. You can see further into the future by pressing the right arrow button to highlight that panel and then using the up and down arrow buttons to scroll through programming.

Just like the Moxi Menu, pressing **OK** will give you an action menu for the selected show.

The Flip Bar will automatically disappear after five seconds, but you can make it go away by pressing **Clear**.



If you press the Info button with the Flip Bar visible, you'll get more information about the show displayed.

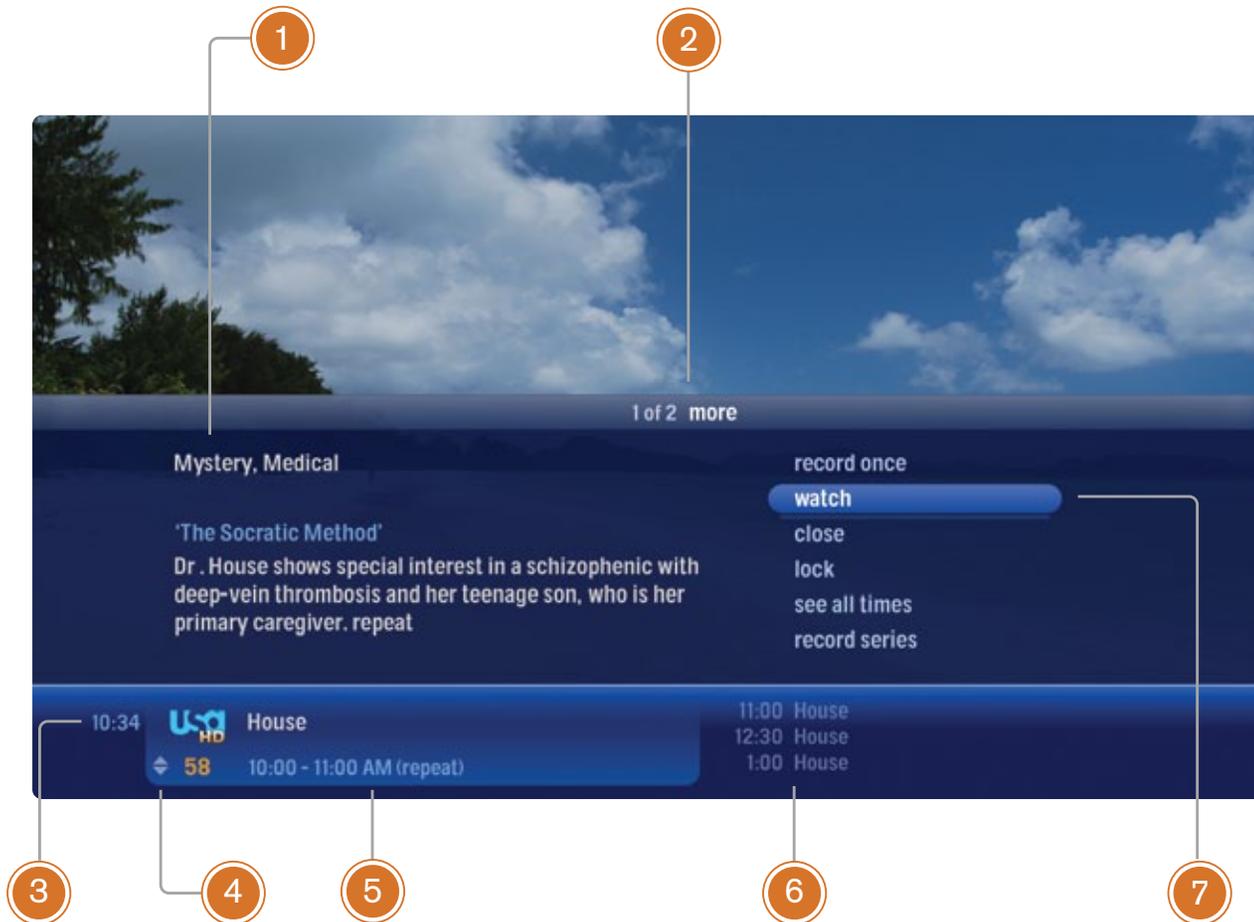

## Watching TV

- 1 GENRE**  
The type of show selected
- 2 INFO PAGES**  
Press **Next** or **Back** on your remote to page through the show information
- 3 CLOCK**  
The current time
- 4 LOGO AND CHANNEL NUMBER**  
Displays the logo and channel number of the show
- 5 PROGRAM LENGTH**  
The time the program begins and ends
- 6 COMING UP**  
Displays the next three shows coming up on the selected channel
- 7 ACTION NOTE**  
The list of options available for the selected show



## Controlling Live TV

### Get live TV on your terms with the following buttons:


- Press **Pause** to alternate between pausing and resuming the show you're watching.
- Press **Rewind** up to three times (for three speeds) to rewind the show.
- Press **Fast-Forward** up to three times (for three speeds) to fast-forward the show up to the point of broadcast.
- Press **Play** to stop fast-forwarding or rewinding or resume from a pause.
- Press **Live TV** to jump to the point of broadcast for the last channel you watched.
- Press **Replay** to view the previous 7 seconds of the show
- Press **Skip** to skip forward in the show up to the moment of broadcast. You can decide how many seconds to skip with this button in the Settings menu.
- Press **Pause** and then **fast-forward** once to activate slow motion. Press **Record** bring up all of your options for recording your current show; record once will record the entire contents of the temporary memory or buffer for the show you are watching.
- Press **Pause** and then skip to advance forward one frame.

### THE BUFFER

When you start watching a show, Moxi will start storing it in temporary memory, called a buffer. The amount of temporary memory varies, but it is never less than 30 minutes for standard definition or 10 minutes for HDTV.

Whenever you press one of the player control buttons, you'll see the Player Bar, which gives you status information about the program you're currently watching. You'll see a version of the player bar no matter what type of media you're enjoying, whether it's recorded or live TV, photos, or music.

## Player Bar

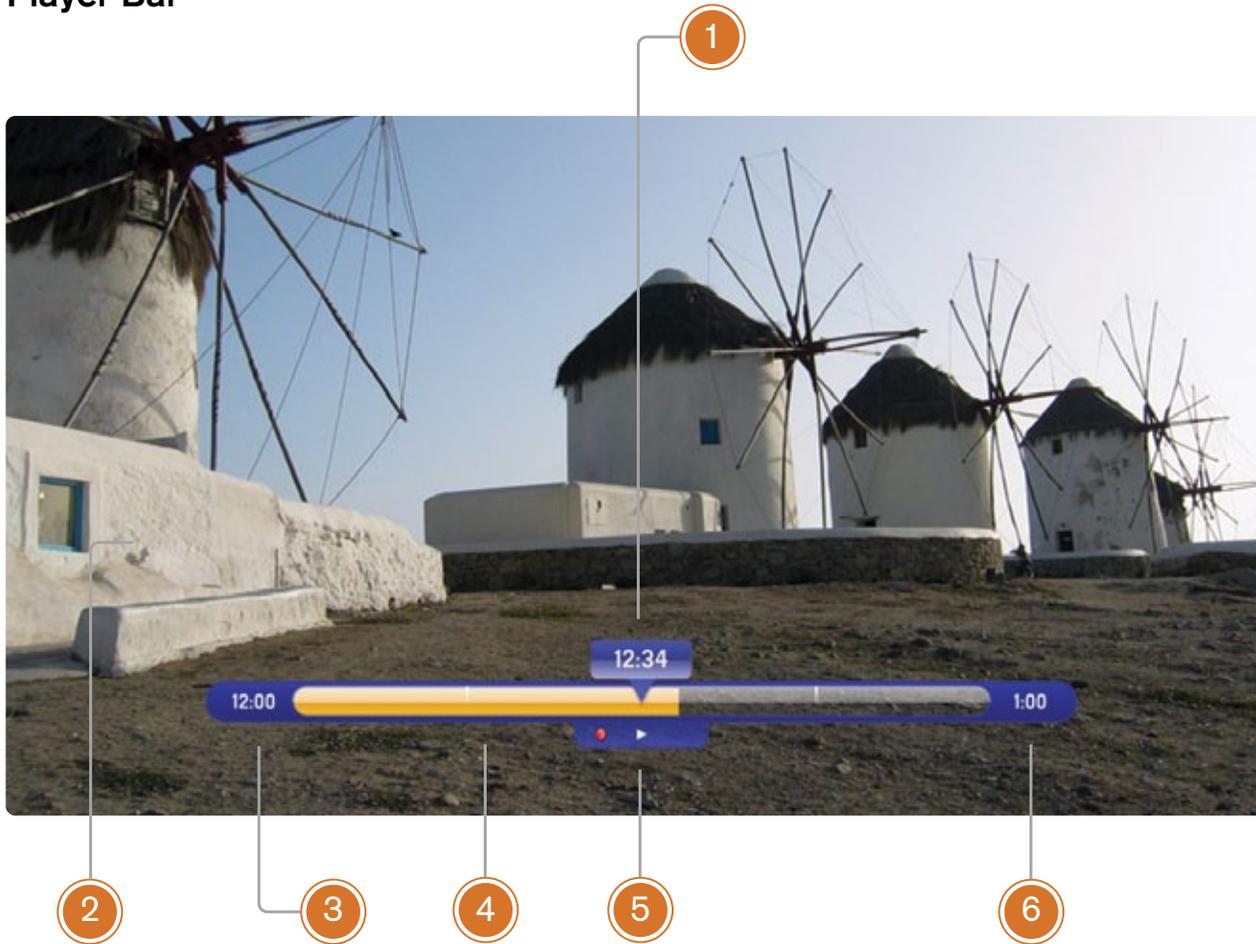

## Watching TV

- 1 CURRENT TIME**  
The current time or location in the current program.
- 2 PROGRAM**  
The current live or recorded program being played back
- 3 SHOW START TIME**  
The start time of the recorded or Live TV program
- 4 STORED IN MEMORY**  
While watching live TV, this area displays the part of the show recorded in temporary memory. While watching recorded TV, it shows the entire contents of the show available for viewing.
- 5 PLAYER BAR STATE**  
The current state of the program controls, such as play, pause, rewind, and fast forward
- 6 SHOW END TIME**  
Displays the end time of the Live TV program or the duration of a recorded TV program



# 3

## Finding a Show

Sometimes you know the title. Sometimes you just know what night it's on. Sometimes you're in the mood for a certain type of show. The Moxi Menu has you covered to help you find what you're looking for.


## Finding a Show



The Find & Record category in the Moxi Menu contains three different ways to search for programming: By Title, By Keyword, and By Category.

### FIND & RECORD


Find & Record also contains some recording management options. Find details about these options in the Recording TV chapter.

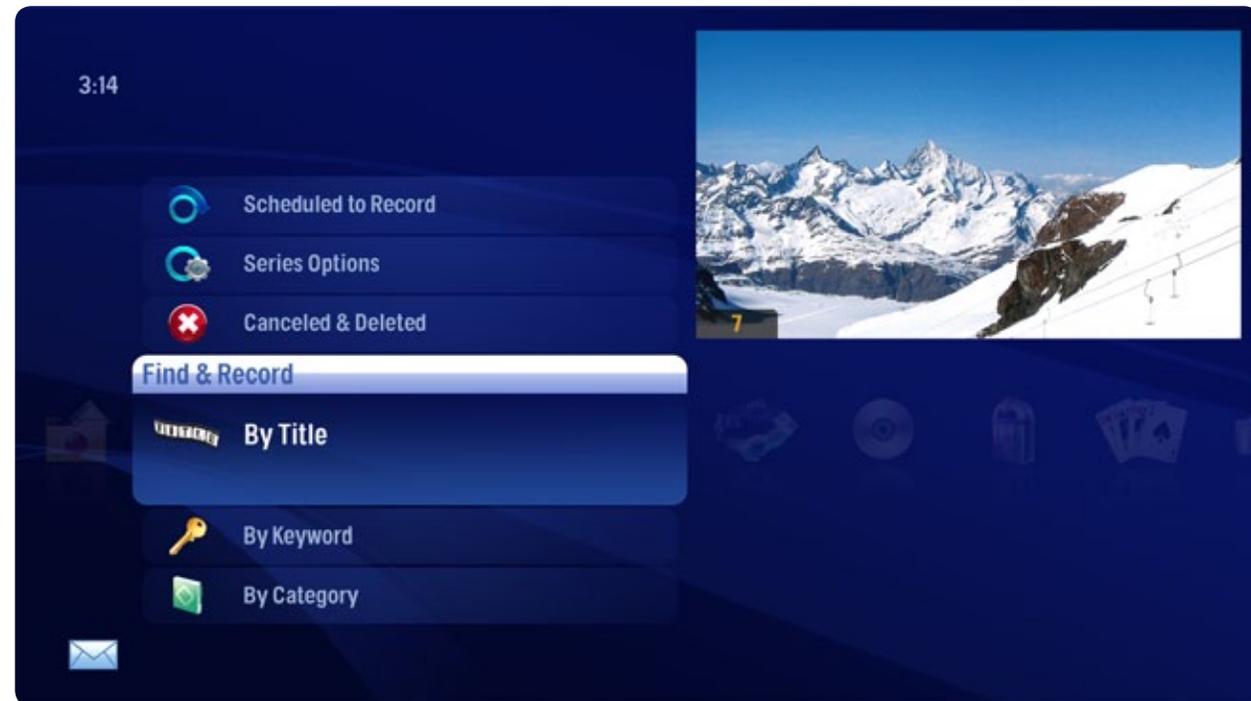

## Find by Title

When you select Find By Title, a screen will open that allows you to enter your title and browse through results. Use the arrow buttons to navigate the onscreen keyboard; to enter a letter, press OK with that letter highlighted. To browse the list, press the left arrow until that panel is in focus.

**Tip:** Find by Title will find your show even if you don't know the complete title. For example, if you search on Leno, we'll find you "The Tonight Show with Jay Leno."

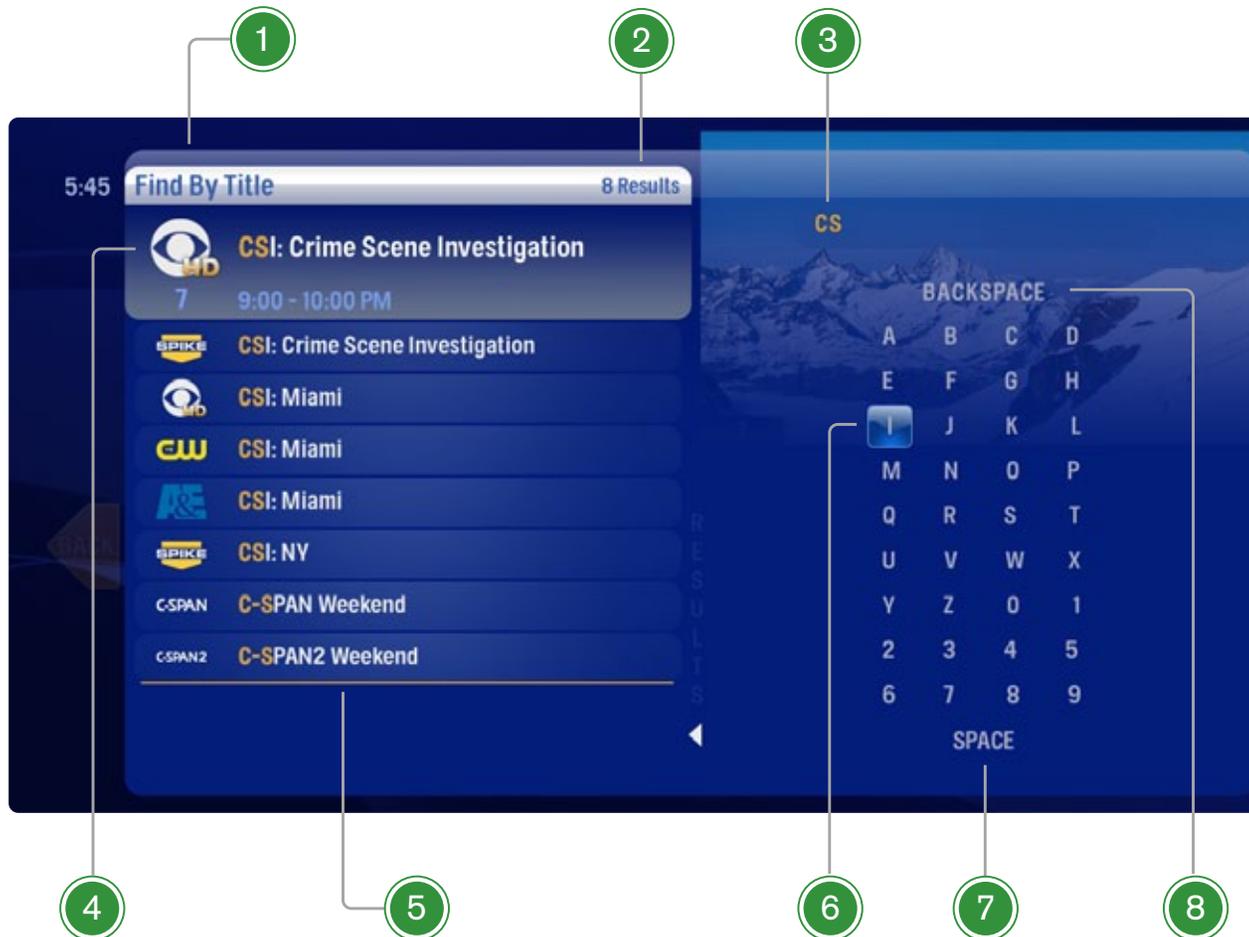

## Finding a Show

### 1 SEARCH TYPE

This bar describes the type of search you're doing.

### 2 SEARCH RESULTS

As you enter characters on the right, the list on the left will filter down to only display shows that match your entry.

### 3 SEARCH BOX

As you select characters, the characters are entered in the search box.

### 4 FOCUS

The details for the channel and show are displayed in the focus card.

### 5 VERTICAL LIST

The vertical list fills with shows that match your criteria. Pressing the up or down arrows brings these shows into focus.

### 6 SELECTOR

To enter a letter, move the selector to it, and press **OK**; each character is entered into the search box. You can use texting-style letter entry as a shortcut.

### 7 SPACE

Use a space to separate words in your search entry.

### 8 BACKSPACE

Removes a character from the search box.

## Find by Keyword

A Keyword search lets you search for any word contained in a show's program information. For example, if you know the actor in a show, but can't remember the title, you can search on the actor's name, and all programs featuring that actor will appear in the list.

To search by keyword, enter each letter by selecting it and pressing **OK**. You'll see results on the left filter down with each letter you enter. Arrow left and use the up and down arrows to scroll through them.



### SEARCHING TIP

Did you know that you can use your remote control keypad like a mobile phone keypad?

For example, by pressing **222** on your remote control you will enter the letter **C**. By pressing **33** you will enter the letter **E**.

- **CLEAR**  
Clears the entire entry
- **0**  
Enters a space
- **1**  
Enters a backspace

## Find By Category

If you're in the mood for a certain type of show, Find by Category gives you a way to browse what you're looking for. Go to Find & Record, scroll down to Find by Category, and press **OK**. The vertical lists will display the shows in each category. An Option card in each category will take you one level deeper in the menu and allow you to browse subcategories.




## Finding a Show

- 1 CATEGORY**  
Category describes the type of search you're currently doing.
- 2 SHOW CATEGORY**  
The different types of shows run along the horizontal axis.
- 3 SHOW LIST**  
Each show airing over the next twenty-four hours that falls into the selected category
- 4 SUB CATEGORY OPTION CARD**  
Each category will contain a card labeled "Press OK to see more..." Selecting this card will take you to another screen with subcategories along the horizontal axis.
- 5 BACK CARD**  
Select this card and press **OK** to jump back up one level in the menu.

# What's On Next

The Moxi Menu gives you several ways to check out what's coming on next:

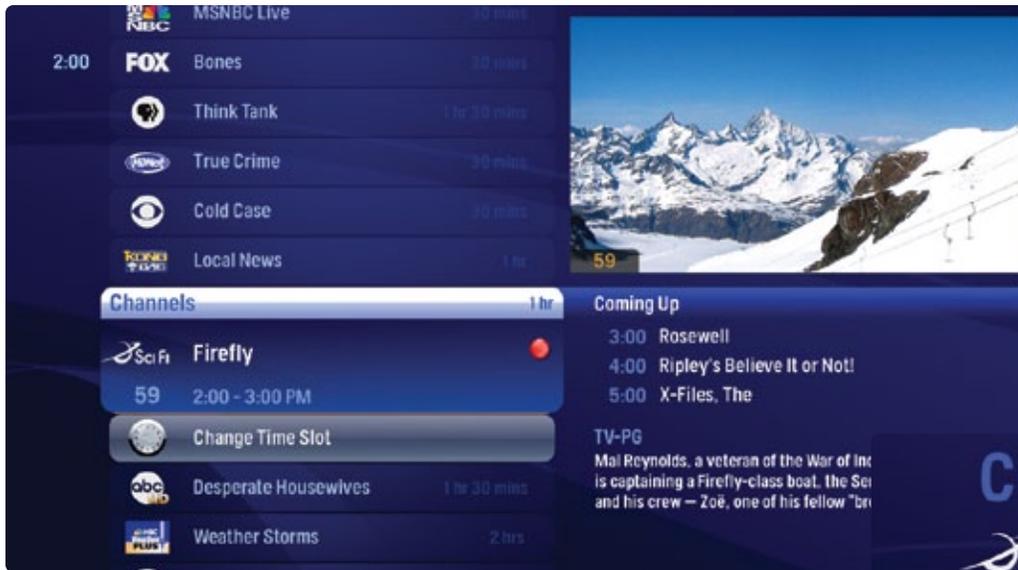

## Preview Paddle

Notice that when you're in the Channels or TV Filters categories, a paddle appears to the right that lists the shows coming up on the selected channel. Press the right arrow button to select the paddle, and then use the up and down arrows to browse through up to two weeks of programming for that channel.



## The Preview Paddle



## Finding a Show

- 1 CHANNEL LOGO**  
The channel the program is on
- 2 PROGRAM LENGTH**  
The time the program begins and ends
- 3 TIMESLOT**  
Indicates the day and time that the preview panel is currently displaying
- 4 PROGRAM INFORMATION**  
Detailed show information, such as title, rating, whether it's a repeat, cast and crew
- 5 TIME**  
Displays the time corresponding to each show
- 6 SELECTED SHOW**  
The currently selected show. Pressing **OK** on the selected show brings up a program info note with action menu options.

## Vertical Lists


If you want to compare what's on in the future across multiple channels, start from Channels or one of the TV Filters, press the **Next** button, and the entire vertical list will show the next half hour's programming. Shows that have not started airing yet will appear slightly gray, while currently-airing shows will be blue.

You can use the **Next** button to view up to two weeks of upcoming shows. The **Back** button will take you one half hour earlier. The **Skip** button advances the category forward 24 hours, and the **Replay** button goes back 24 hours. To return to the current time, just press the **Moxi** button.

You can also use the Change Time Slot card to jump the category to a future time slot.



## Back & Next

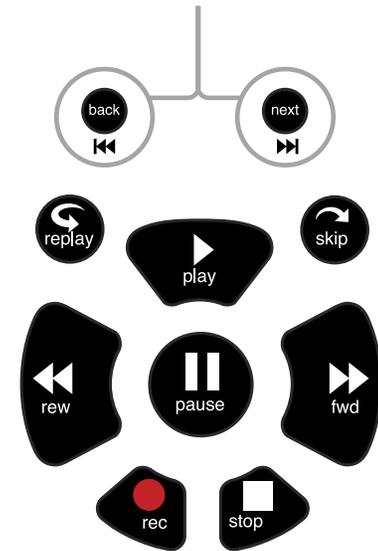

Currently-airing show



Future show



## Full Screen TV

The Flip Bar also has the capability to display upcoming programs for each channel. While viewing full screen TV, press **OK** to display the Flip Bar, which will display information about the current program. The up and down arrows will scroll Flip Bar through other channels.

The panel on the right lists what's coming up next for the channel currently in the flip bar. Press the right arrow to highlight the panel, and then the up and down arrows will let you browse through up to two weeks of programming.



## See All Times

One of the options you'll see in a show's action menu is See All Times. Select it to see a list of all of the times that the selected show airs. Select the Back card to return to your original show listing.



# 4

## Recording TV

The Moxi HD DVR makes it easy to record and manage your favorite shows. And you've got plenty of room for recordings, even High Definition, with the combination of your hard drive and an external drive.



### STORAGE SPACE

Your Moxi HD DVR provides up to 166 hours of SD storage space and up to 75 hours of HD storage space.

### RECORDING LIVE TV

If you are watching a Live TV program and have to run out the door, simply press **Record** on your remote control. You'll then get an action menu that will give you the option of recording the show you are currently on, including anything that is in the recorded temporary memory.

## Record a Show

If you're browsing the Moxi Menu, and you see a show that interests you, you can:

- Press the **Record** button
- Press the **OK** button

An action menu will appear, giving you all of the options for the selected show, including record.

### Record a Series

Scheduling an entire series to record is just as easy as an individual show. To record a series:

1. Press **OK** with one of the episodes selected
2. Choose record series

### Conflict Management

Your Moxi HD DVR comes with two live TV tuners, which means that you can record two different shows at once. In the event that there is a tuner conflict, such as when you have two recordings scheduled and are watching another live show, your DVR will bring up an action menu that outlines your options and lets you make a choice.

### Scheduled to Record

Confirm that a show is set to record using the Scheduled to Record category, located in Find & Record.

In Scheduled to Record, you can also cancel a recording and access your recording options for each show. Just pick the show you want to manage, and press **OK**. The action menu gives you all of your choices, including:


- Cancel Recordings
- Recording Options
- Lock
- See All Times

## Series Options

Series Options is also in the Find & Record category, and lists the series you have scheduled to record in priority order. With one of the series selected, press **OK**, and you'll be able to:

- Change Recording Options
- Delete the series from the recording list
- Change the Priority Order
- See All Times the series airs



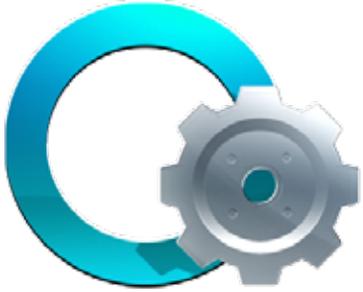

## Recording Options (individual show)

If, as you're browsing the Moxi Men, you select a show that is scheduled to record or is currently recording, you'll be able to access the recording options action menu. Recording options gives you the following choices for the recording of an individual program:

- Stop the show from recording
- Decide how long to keep the show
- Record the entire series
- If the recording hasn't started yet, you can start it early or stop it late

## Recording Options (series)

If the show is a series, choosing series options provides some additional choices:

- Stop and start each episode recording early or late
- Decide how long to keep the episodes
- Decide how many episodes to keep
- Choose to record only episodes on at a particular timeslot
- Accept repeats or first-run only
- Decide the priority for recording the series in case of a conflict
- Delete the series

## Changing Priority Order

You can put your series recordings in priority order so that if any of them ever conflict with one another, your Moxi HD DVR will automatically manage that conflict for you. To change a show's priority order:

1. Select recording options/series options and then priority.
2. Press **OK** on priority
3. Use the up and down arrows to select the new priority number for the selected show
4. Press **OK**

## Recording Icons

Your Moxi HD DVR includes the following recording icons for DVR status at a glance. The following icons appear on center focus cards and vertical capsules throughout the Moxi menu:



The show is recording right now.



The show is scheduled to be recorded.



The show is recorded and may be deleted when space is needed for newer shows.




The show will not delete and can only be deleted manually.

## Recording TV

### RECORDING LEDs

If a show is currently recording, the orange LED light will appear on the front of your Moxi HD DVR below the glowing white Moxi logo.

If you are recording two programs, two orange LEDs will appear.

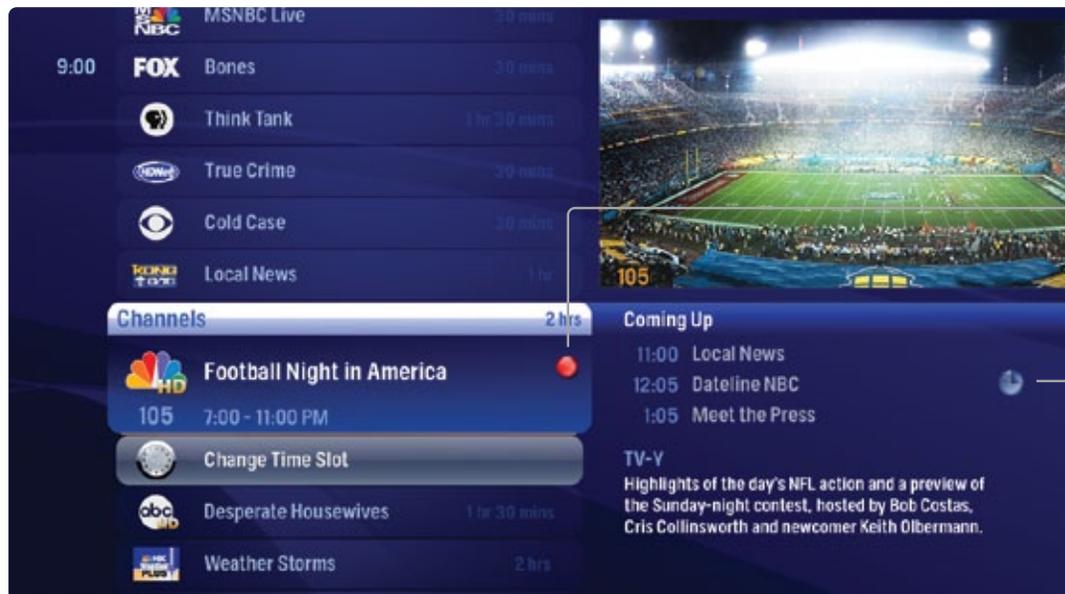

**Recording**  
Moxi is recording the show "Football Night in America" right now.

**Scheduled to Record**  
The show "Dateline NBC" is scheduled to record.



## Storage Info

You can add extra storage space to your Moxi HD DVR with an external hard drive. The storage meter lets you know how much space you have left for more recorded programs. It's located in the Settings category on the horizontal menu. Press **OK** on the Storage Info card to view details.



## External Hard Drive

If you can external hard drive, your Moxi HD DVR will store your recorded programs on the drive.

For instructions on purchasing and connecting an external hard drive, please see the External Hard Drive section of the Installation chapter. Not all hard drives are supported.





## Online Scheduling

If you realize as you're headed out the door that you forgot to record your favorite show, don't worry! You can sign in to your Moxi account from anywhere that has Internet access and schedule that recording remotely.

1. Go to <http://www.moxi.com> and sign in
2. Choose Online Scheduling
3. Browse through the program guide or search for your show
4. Highlight the show and select record or record series

**Device**  
Choose the device for the program listings.

**Scheduling**  
Choose the date and time for the grid guide.

**Grid Guide**  
Choose a tab to filter the guide.


**Search**  
Search the grid guide by title.

The screenshot displays the Moxi website's online scheduling interface. At the top, there is a navigation bar with 'HOME', 'PRODUCTS', 'EXPERIENCE', and 'SUPPORT'. Below this is a 'Web Scheduling' section. Under 'TV LISTINGS LOCATION', a dropdown menu is set to 'Living Room's'. Below that, there is a 'TV SCHEDULE' section with a date/time selector set to '11/17 Monday' and '08:00 PM'. A 'Grid Guide' section shows a list of channels (HD, MOVIES, NEWS, KIDS, SPORTS, TOP 10) and a grid of program listings for the selected date and time. A search bar is visible in the top right corner.

# Online Management

You can also use your online Moxi account to check the list of shows you have scheduled to record.

Once you've signed in to your account, you'll see a list of shows you have scheduled to record on your account summary page.

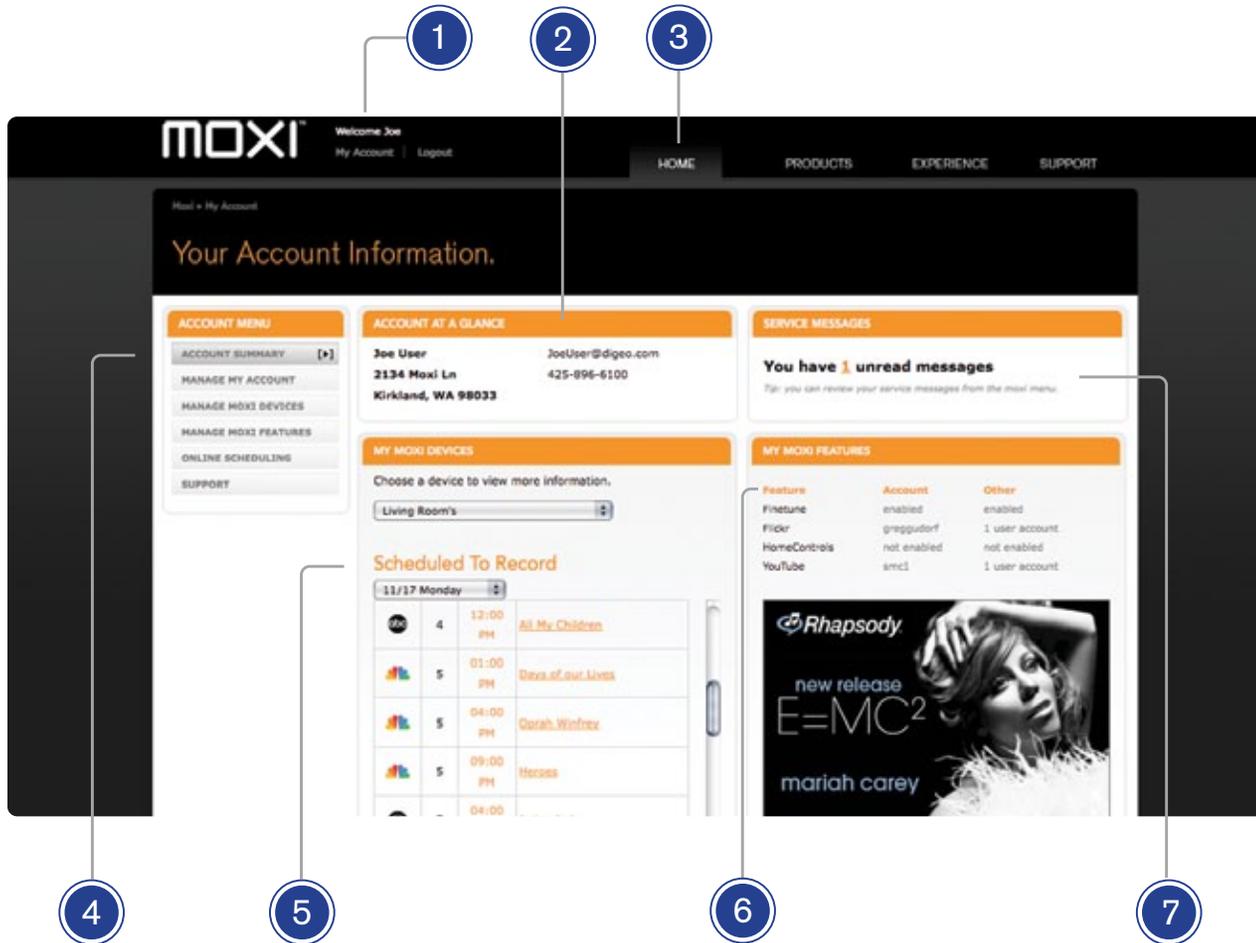

## 1 ACCOUNT LOGIN

Login to your account or activate your Moxi unit.

## 2 ACCOUNT AT A GLANCE

This area provides a summary of your account information.

## 3 WEB SITE NAVIGATION

Access all of Moxi.com with an easy to use drop down menu.

## 4 ACCOUNT MENU

Clicking on an item may open up additional items. Click on the item to load it into the main area.

## 5 SCHEDULED TO RECORD

Quickly see what your Moxi unit is set to record.

## 6 MOXI FEATURE STATUS

Enable Moxi features like Finetune, and Flickr'.

## 7 SERVICE MESSAGES

Check out or delete your service messages. Note these service messages are the same messages in your Moxi menu.






# 5

## Enjoying Your Recordings

Your DVR makes it easy to enjoy and manage your recordings from one place in the Moxi Menu: Recorded TV.

## Watch a Show

In the horizontal menu, you'll find the Recorded TV category. All of your recorded shows and shows that are currently recording are in the vertical axis in alphabetical order. Episodes of a series are grouped into folders; you'll see the individual episodes in the paddle to the right. To watch a show, select it, and press OK. And if you've already watched half of the show, you can choose whether to resume where you left off or start over from the beginning.

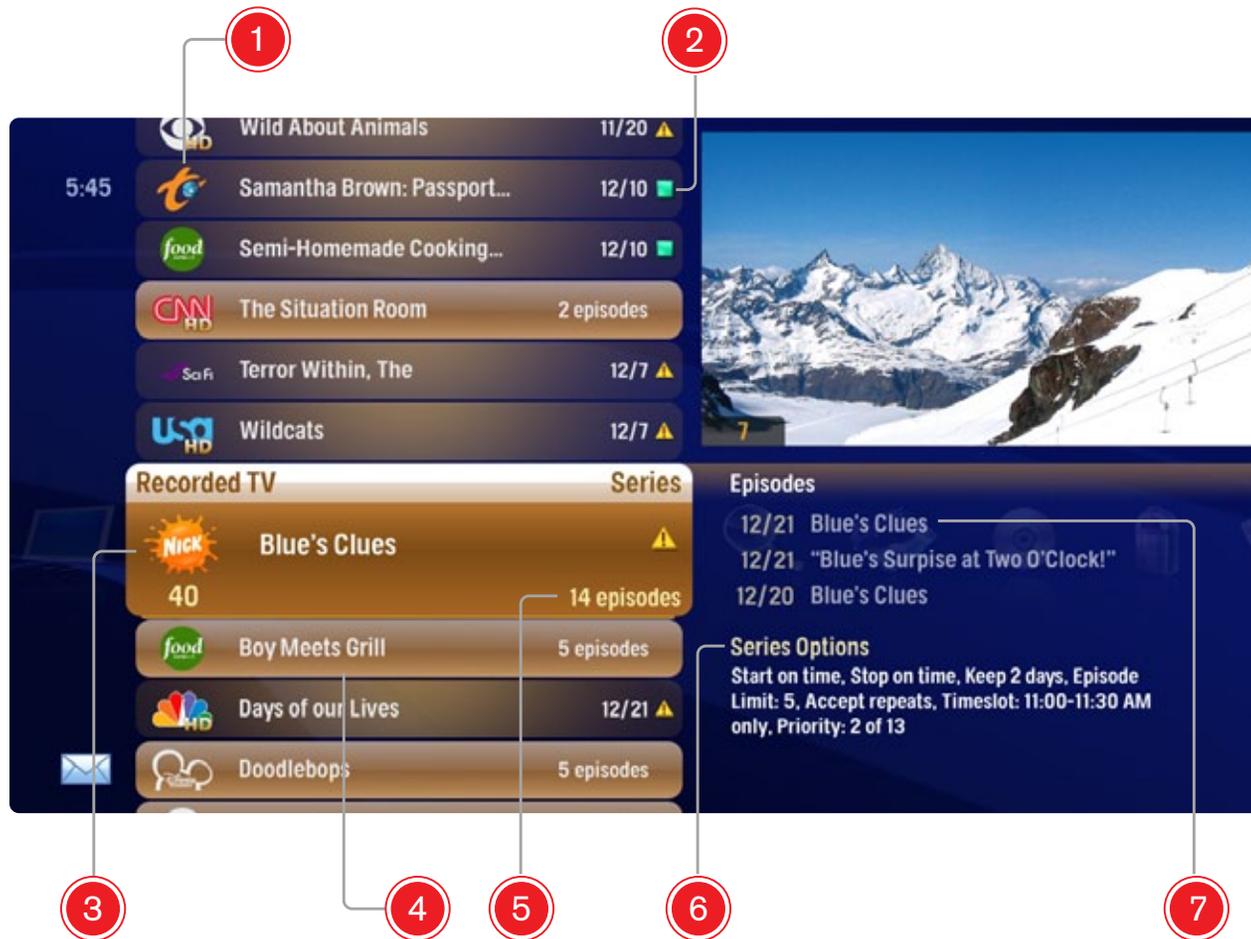

### 1 CHANNEL LOGO

Displays the channel of the recorded show..

### 2 RECORDED SHOW ICONS

Let you know if the show is in danger of deletion or protected against deletion.

### 3 CENTER FOCUS

Displays the channel number, logo and whether the show is part of a series. Series shows also display the number of episodes.

### 4 SERIES FOLDER

Episodes of a series are held within a folder listing the number of recorded episodes.

### 5 EPISODES OR DURATION

If the show is a series, center focus lists the number of episodes. If it's an individual show, it lists the show's duration.

### 6 INFORMATION

A series in center focus shows the current recording options for the series, a single recorded program shows a summary of the show information.

### 7 SERIES

Individual episodes in a series are shown in the preview panel. Arrow to the right and select an episode to see that episode's action menu.

## Recorded TV Management

When you press OK with a recorded program in center focus, you'll get the following list of options in the action menu:

- Play/Start Over - Launches the program full screen from the beginning.
- Resume - This option only appears if you've watched a portion of the program. Launches the program full screen from the point you left off.
- See all times - Displays all of the times that particular show airs.
- Delete - Delete removes the program from Recorded TV.
- Recording options - Lets you access the recording options menu.
- Keep Until - Moxi will automatically delete the oldest shows in your Recorded TV folder as you need the room for new recordings. Keep Until lets you set the program to be deleted at the point of your choosing.
- Lock - prevents someone from watching the recorded program without a PIN.

## Canceled and Deleted

When you chose to record one show over another due to a conflict, (or someone in your household does) sometimes it's hard to remember why that canceled show isn't showing up in Recorded TV. Moxi keeps a list of shows that you have scheduled that will not record as well as shows that did not record.

The shows above center focus have not aired yet, while the shows below center focus have already aired.



# 6

## Using the SuperTicker™

The Moxi SuperTicker is a great way to keep one eye on the latest news and the other eye on your favorite show.



### VIEW THE WHOLE STORY

If you see a headline that interests you, you can read the whole story by pressing OK and choosing more info. You can also press the info button. An info note will open up that displays the story.

Use the back and next buttons to scroll through pages of the story.

## Using SuperTicker

To open the SuperTicker, press OK on the SuperTicker card in the horizontal menu, or press the Ticker button on your remote.

The SuperTicker runs along the bottom of full screen media and displays information on the latest news headlines, sports scores, financial news, entertainment news, and weather. These are called Topics. An individual story in each topic is called an Item.

Sports scores and stock market index numbers in the SuperTicker update every 3 minutes. All other SuperTicker information updates every 15-20 minutes.

### Navigation


The SuperTicker will automatically scroll through each topic, subtopic, and news item. If you're interested in a particular topic, you can use the left and right arrow buttons to browse through topics and the up and down arrows to scroll through items in each topic.

### Lock a Topic or Item

The SuperTicker lets you lock on a topic or item in case you want to keep an eye on the DOW or a baseball score.


Press OK on the topic or item you're interested in. If you choose lock item, the SuperTicker will stop automatic navigation, but continue to update that item. If you select lock topic, the SuperTicker will scroll through the items in that topic.

The Asterisk button on the remote will alternate between locking a topic, locking an item, and unlocking everything. You'll know that a topic is locked because the horizontal arrows turn red. When an item is locked, the vertical arrows turn red.

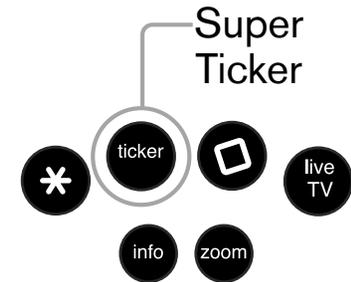

## SuperTicker Displaying Weather

## Using the SuperTicker

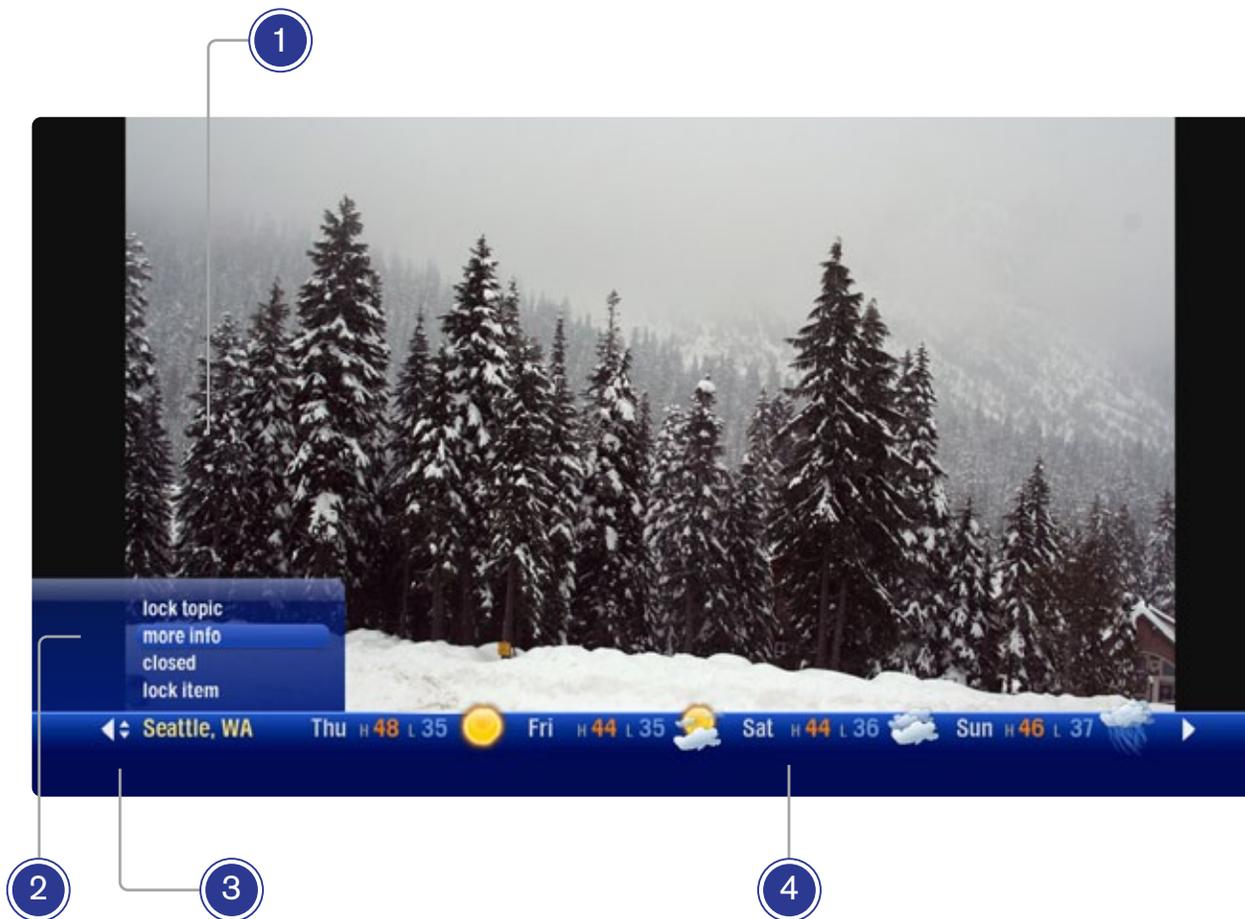

### 1 PROGRAM

The current live or recorded program being played back.

### 2 ACTION Menu

Pressing OK on an item in the ticker brings up an action menu with that item's options.

### 3 NAVIGATION

You can navigate ticker topics by using the left and right arrows on your remote control. You can navigate topics by using the up and down buttons on your remote control.

### 4 TICKER ITEMS

The ticker items are shown on one line.



# 7

## Viewing Photos

When we say high definition, we're not talking about just TV. Now you can enjoy your photos in HD glory from the comfort of your living room.



## Viewing Photos

### Flickr Photos

Flickr is a photo sharing community. With our Flickr partnership, you can view photos stored on Flickr from your Moxi HD DVR. That means that your friends and family can upload photos to Flickr, and you can view them on your TV, or you can play back your own online Flickr Photos.

#### To add a Flickr user's photos to your Moxi Photos application:

1. Go to <http://www.moxi.com> and sign in.
2. Click Manage Moxi Features from the left menu, and then choose Flickr.
3. Search for the Flickr user whose photos you would like to view.
4. Click Submit to add that user to your account. That user's publicly-shared photos will now appear in your photos application.

Flickr has a great feature called Interestingness, which rates photos based on their appeal. If you click "Add Interestingness" from the Flickr page of your Moxi account, you'll add a collection of the photos with the highest "Interestingness" ratings to your Moxi HD DVR Photos category.

The screenshot displays the Moxi account management interface. On the left is an 'ACCOUNT MENU' with options: ACCOUNT SUMMARY, MANAGE MY ACCOUNT, MANAGE MOXI DEVICES, MY MOXI FEATURES, Rhapsody, Media Link, Flickr (selected), eControls, MoxiNet, Finetune, ONLINE SCHEDULING, and SUPPORT. The main content area features the Flickr logo and a promotional message: 'Upload your photos to Flickr's online photo service and then view them on your Moxi HD DVR. Access any publicly-shared Flickr photo from your TV.' Below this is an 'INTERESTINGNESS' section with a checkbox to 'Add Interestingness to my Moxi'. At the bottom is an 'ADD A FLICKR MEMBER' section with a search box for a Flickr member name and a 'SEARCH' button, followed by a field to 'Add a Flickr User ID'.

**Flickr Users**

Once you have added a Flickr user to your account, that user will appear in the vertical list of the Photos category, along with Interestingness, if you've included it.

When you select a Flickr user, you'll see the following options:

- open sets - allows you to view that user's photos by set
- play slideshow - plays the user's photos in a full-screen slideshow
- slideshow music - allows you to change the options for the slideshow music
- play as mosaic - displays the user's photos in an easy-to-navigate grid

When you have a Flickr user in center focus that has his/her photos organized into sets, those sets will appear in the paddle. If you arrow right and select a set, you'll see the same options, only those options apply only to the selected set rather than all of the user's photos.

## Open Sets

When you open a user's sets, you'll see that user's sets along the horizontal menu and the photos in each set in the vertical lists. The action menu for each photo will allow you to full the photo full screen or launch a slideshow of the set.





### SLIDESHOW TIP

If you use one of the player controls while watching a slideshow, you'll see the Photos version of the Player Bar.

If you use one of the arrow buttons while watching a slideshow, you'll see the Photos version of the Flip Bar.

## Play Slideshow

Moxi Photo's slideshow functionality makes it fun and easy to browse your photos full screen. Try playing a slideshow in the background at your next party!

During the slideshow, your photos will advance automatically:

- Use the left and right arrow buttons to move manually through photos full screen.
- Use the up and down arrow buttons to change the photo displayed on the flip bar.
- Rewind and fast-forward speed up or slow down the speed of the slideshow.
- Pause, play, or stop the slideshow with the player controls.
- Skip and next will advance the slideshow forward one photo.
- Back and replay will rewind the slideshow one photo.




## Slideshow Music

Photo albums in Moxi Photos are associated with a default music selection. If you select slideshow music, you can turn this default music off or add Rhapsody music.

If you do not currently have a Rhapsody subscription, you can associate any of the Rhapsody free channels with the slideshow. Select Rhapsody channels, and pick your favorite from the list.

If you have a Rhapsody subscription or are using your 30 day free trial, you can put together a custom playlist within the Rhapsody application. Those playlists will then appear as options for your slideshow music. For details on how to create a custom playlist, see Chapter 8 - Listening to Music.

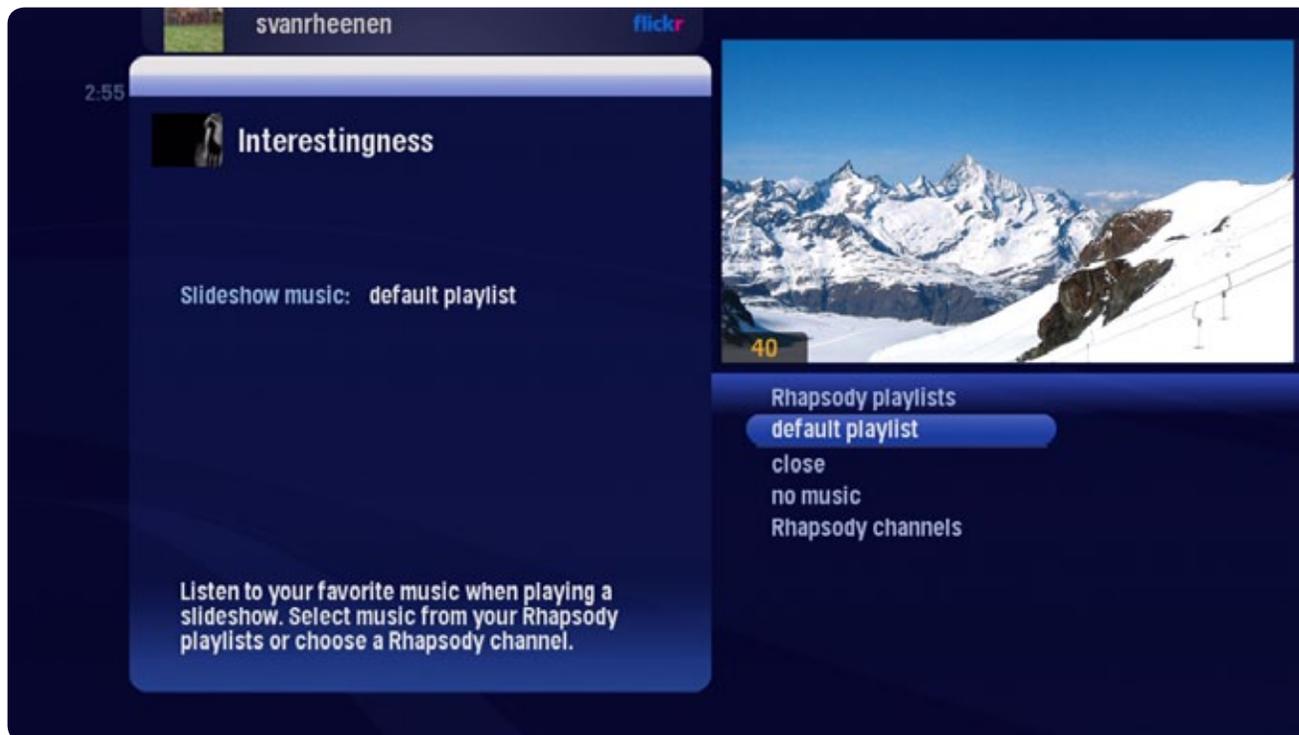







## Listening to Music

The Moxi Jukebox brings the best of Internet music services to your TV: Rhapsody and Finetune.




## Listening to Music

Your Moxi HD DVR has two options for bringing the best of Internet music services to your TV: Finetune and Rhapsody. To access them, bring the Jukebox card into center focus; both options will appear in the vertical menu. Select either one, and you're ready to listen.

The Moxi HD DVR provides you with a 30 day trial to enjoy Rhapsody's service. If you're enjoying Rhapsody after that point, you can sign up for a Rhapsody subscription through your account at <http://www.rhapsody.com/moxi/go>

The Finetune service gives you immediate access to much of Finetune's features and library. If you create a free Finetune account at <http://www.finetune.com> and enter that account at <http://www.moxi.com>, you'll be able to create personalized playlists and add music to your library, which you can then access from your TV.

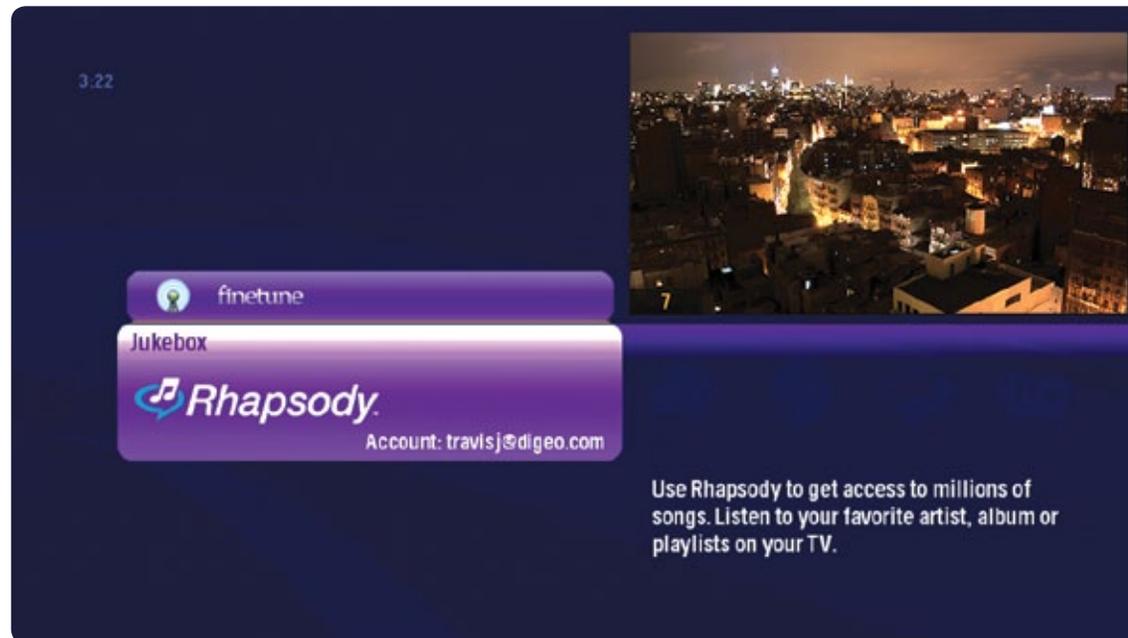



## Use Rhapsody


The Moxi HD DVR offers the award-winning Rhapsody membership, which gives music lovers access to Rhapsody's commercial-free, CD-quality library of over five million songs. Once you have a Rhapsody account, you can access your music from your Moxi HD DVR, your PC, or your stereo.

For best performance, the Rhapsody service requires a wired connection: 10/100 Mbit/s, Ethernet or Higher connection speed, RJ-45.

### To get started:

When you activated your Moxi HD DVR online, you had the option to sign up for or enter a current Rhapsody subscription. If you decided to take advantage of a 30 day free trial instead, you can sign up for a Rhapsody account at any time at <http://www.rhapsody.com/moxi/go>. Once you have your account, just pair it with your Moxi Account at <http://www.moxi.com>.

Whether you're using a 30 day trial or you already have an account, you'll be able to listen to Rhapsody's library right away. Just select the Rhapsody card, and you'll see options along the horizontal menu that will give you a bunch of ways to find the music you're looking for.

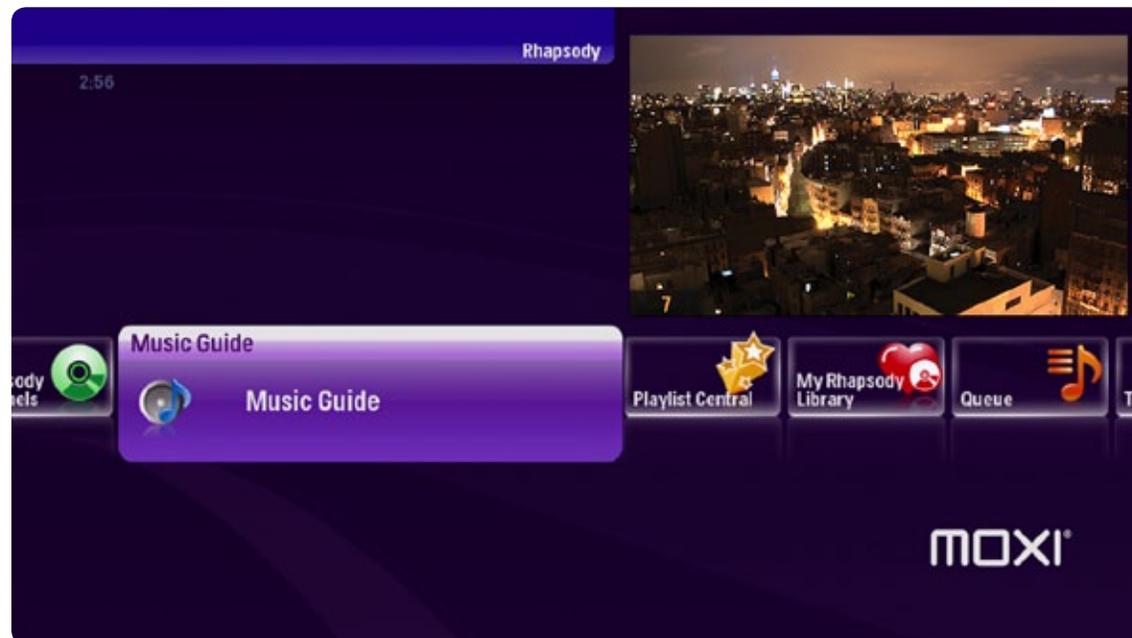

When you press OK, you'll get a list of options, depending on whether you've selected an artist, album, song, channel, or playlist:

- Play - begins playing the item in center focus
- Shuffle play - begins playing songs from the item in center focus in random order
- Stop - stops the currently-playing selection
- View similar artists - takes you to a list of artists who play similar music
- Play artist channel - begins playing a channel based on the selected artist
- Go to artist - takes you to that artist's section in the Music Guide
- Go to album - takes you to that album within the Music Guide
- Add to library - adds the selected item to your Rhapsody Library
- Add to queue - adds the selected item to the queue list

When you're listening to a piece of music, the following player controls will work on your remote:

pause - pauses music

- play - plays what's in center focus
- next - advances one song
- back - rewinds one song
- stop - stops playing the song

For a Rhapsody channel, only play, next and stop are functional. You can only skip a limited number of songs per hour.

## Search

Rhapsody allows you to search for an Artist, Album, or Song.

Select the type of search you would like to perform, and you'll get an onscreen keyboard, where you can enter your selection. As you enter each letter, a list of results on the left will filter down. To browse that list, press the left arrow until it's selected; you can then use the up and down arrows to browse through your choices. When you see something that interests you, select that item for a list of options.



## New Releases

The New Release category refreshes frequently with Rhapsody's latest albums. With an album selected, the track paddle will list the songs in each album.

## Rhapsody Channels

Rhapsody Channels puts a huge assortment of radio stations at your fingertips. When you select the Rhapsody channels category, the vertical menu will list Rhapsody's top channels. When you have a channel selected, the track paddle will give you the names of some artists typically showcased on that channel.

The Rhapsody Channels option card stays in center focus; if you select it, you'll get a new horizontal menu that will give you several different ways to browse through channels, including:

- genres
- top channels
- all channels




## Music Guide

The Rhapsody Music Guide is your gateway to the Rhapsody library. Browse through genres and subgenres and listen to the genre sampler. Check out what's topping the latest charts, or choose to listen to staff picks or Rhapsody exclusives. The Music Guide gives you a variety of ways to find what you're looking for or stumble on something new.

When you select the Music Guide category, you'll see a list of top albums in the vertical menu; the songs in each album will appear in the track paddle.

The Music Guide option card will stay in center focus; when you select it, you'll get a new horizontal menu that gives you a variety of ways to browse the library, including:

- genres
- new releases
- top artists
- top albums
- top tracks
- staff picks
- exclusives
- just added

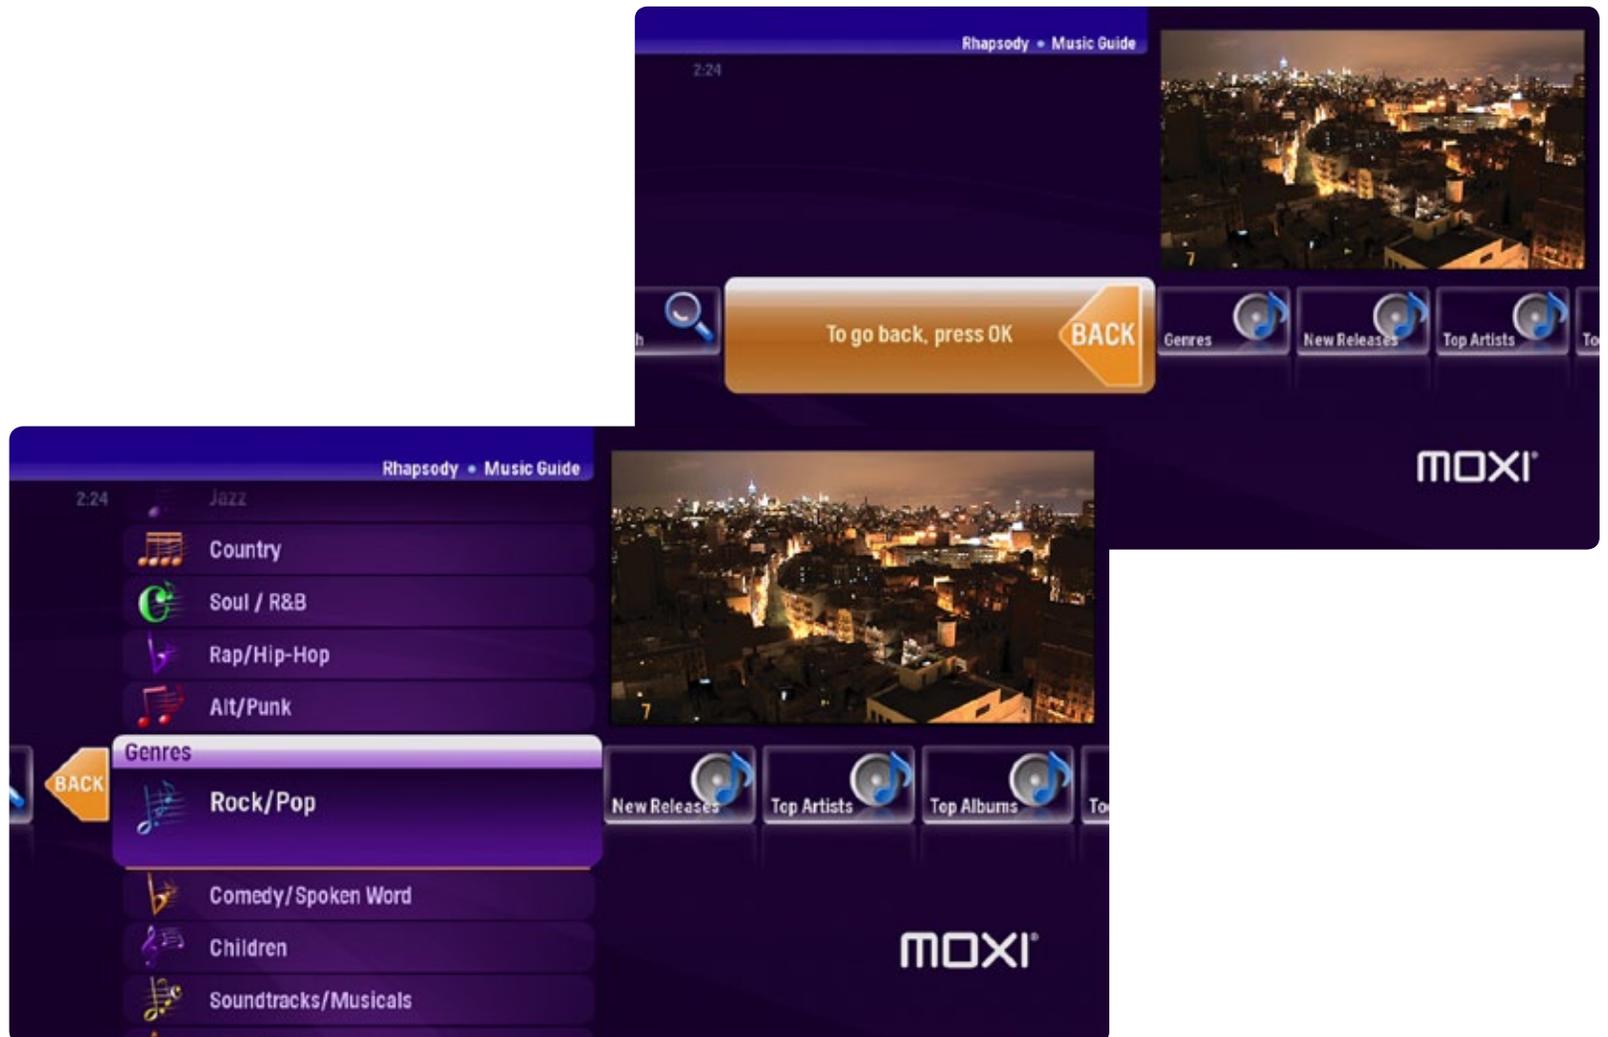


## Playlist Central

Playlists provide a great way to find new music, and Rhapsody gives you tons of ways to find playlists you enjoy. Playlist Central gives you a collection of playlists put together by Rhapsody users as well as Rhapsody staff and popular celebrities. You can also listen to a playlist based on your Rhapsody listening history.

When you bring the Playlist Central category into center focus, you'll get a list of top playlists in the vertical menu. When you have a playlist selected, the track paddle will display the songs included in that playlist.

The Playlist Central option card will remain in center focus, giving you access to a new horizontal menu with a variety of playlist categories, including:

- my instant playlist
- featured playlists
- dynamic playlists
- genre mixes
- decade mixes
- single artist mixes
- top playlists

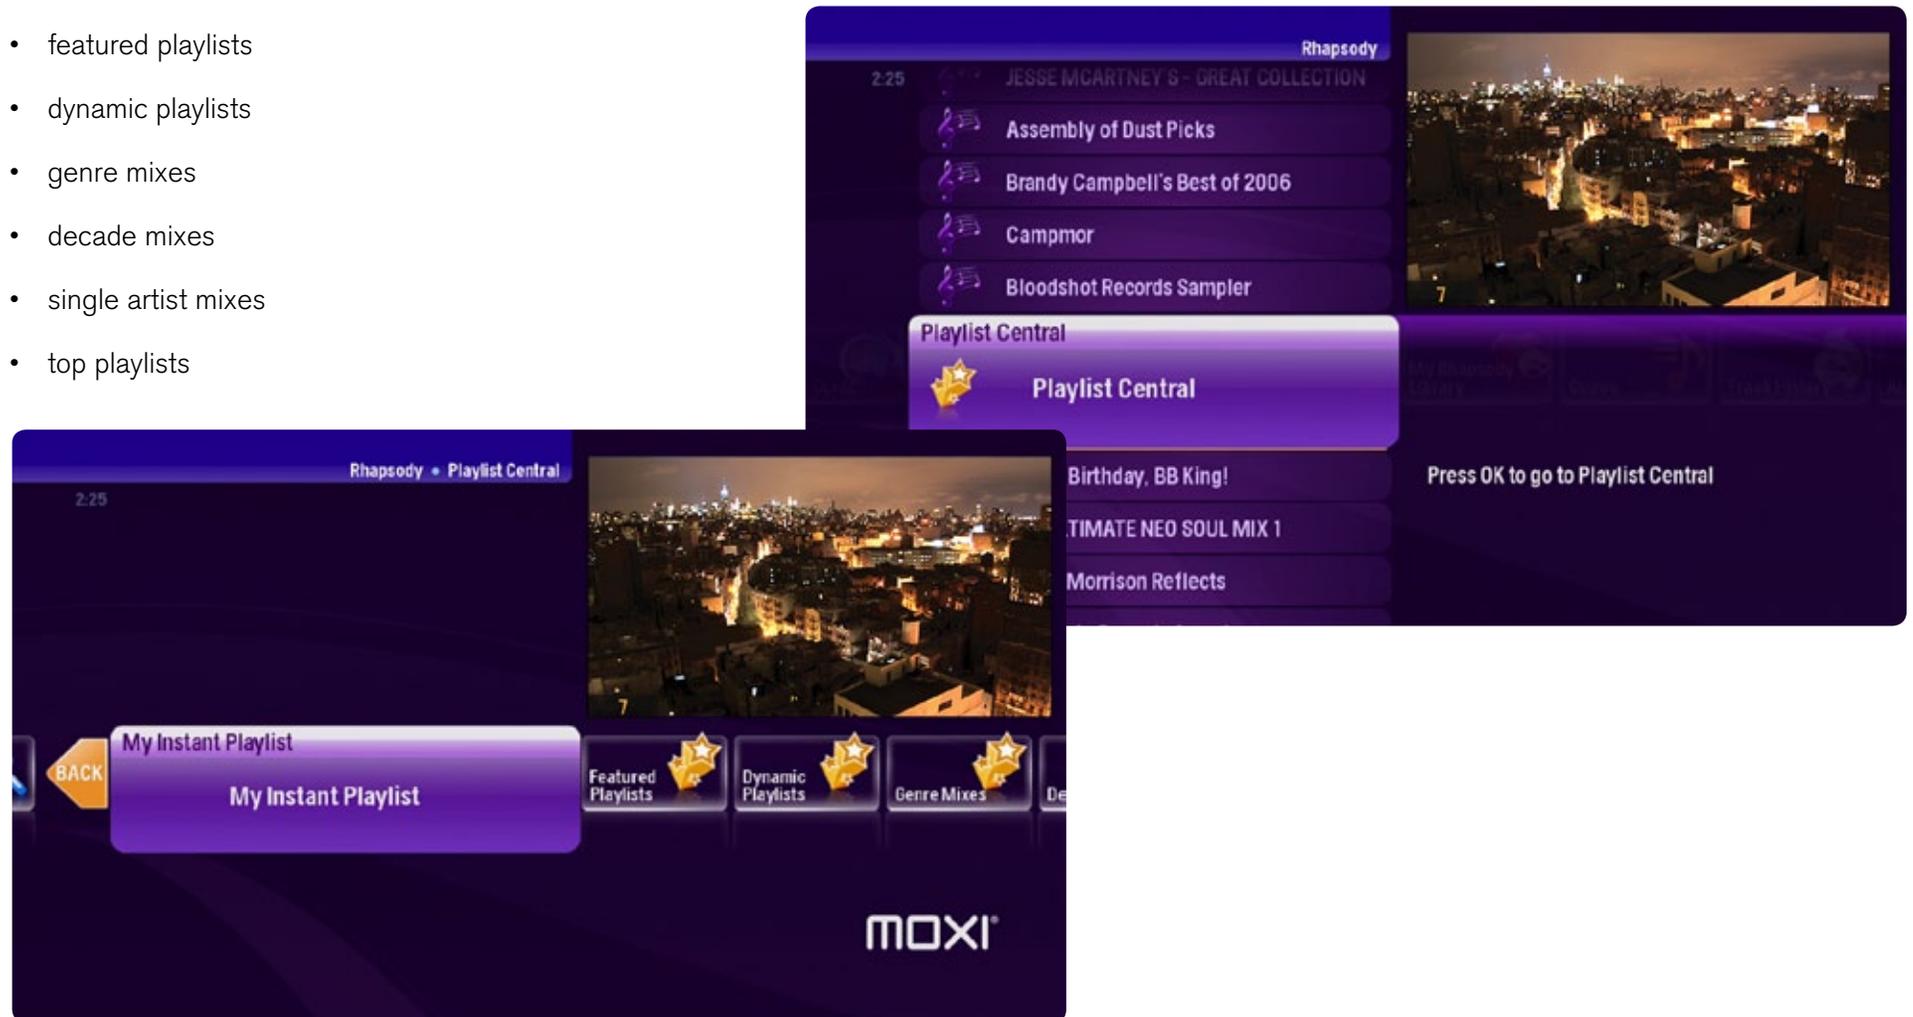


## My Library

Whenever you find music you enjoy, choose Add to Library from its action menu. The music will then be available in your Rhapsody Library for easy access, allowing you to put together a customized collection of your favorite tunes.

When you select My Library, you'll get a new horizontal menu has different ways to browse the contents of your library, including:

- artists
- albums
- genres
- playlists
- songs
- channels.

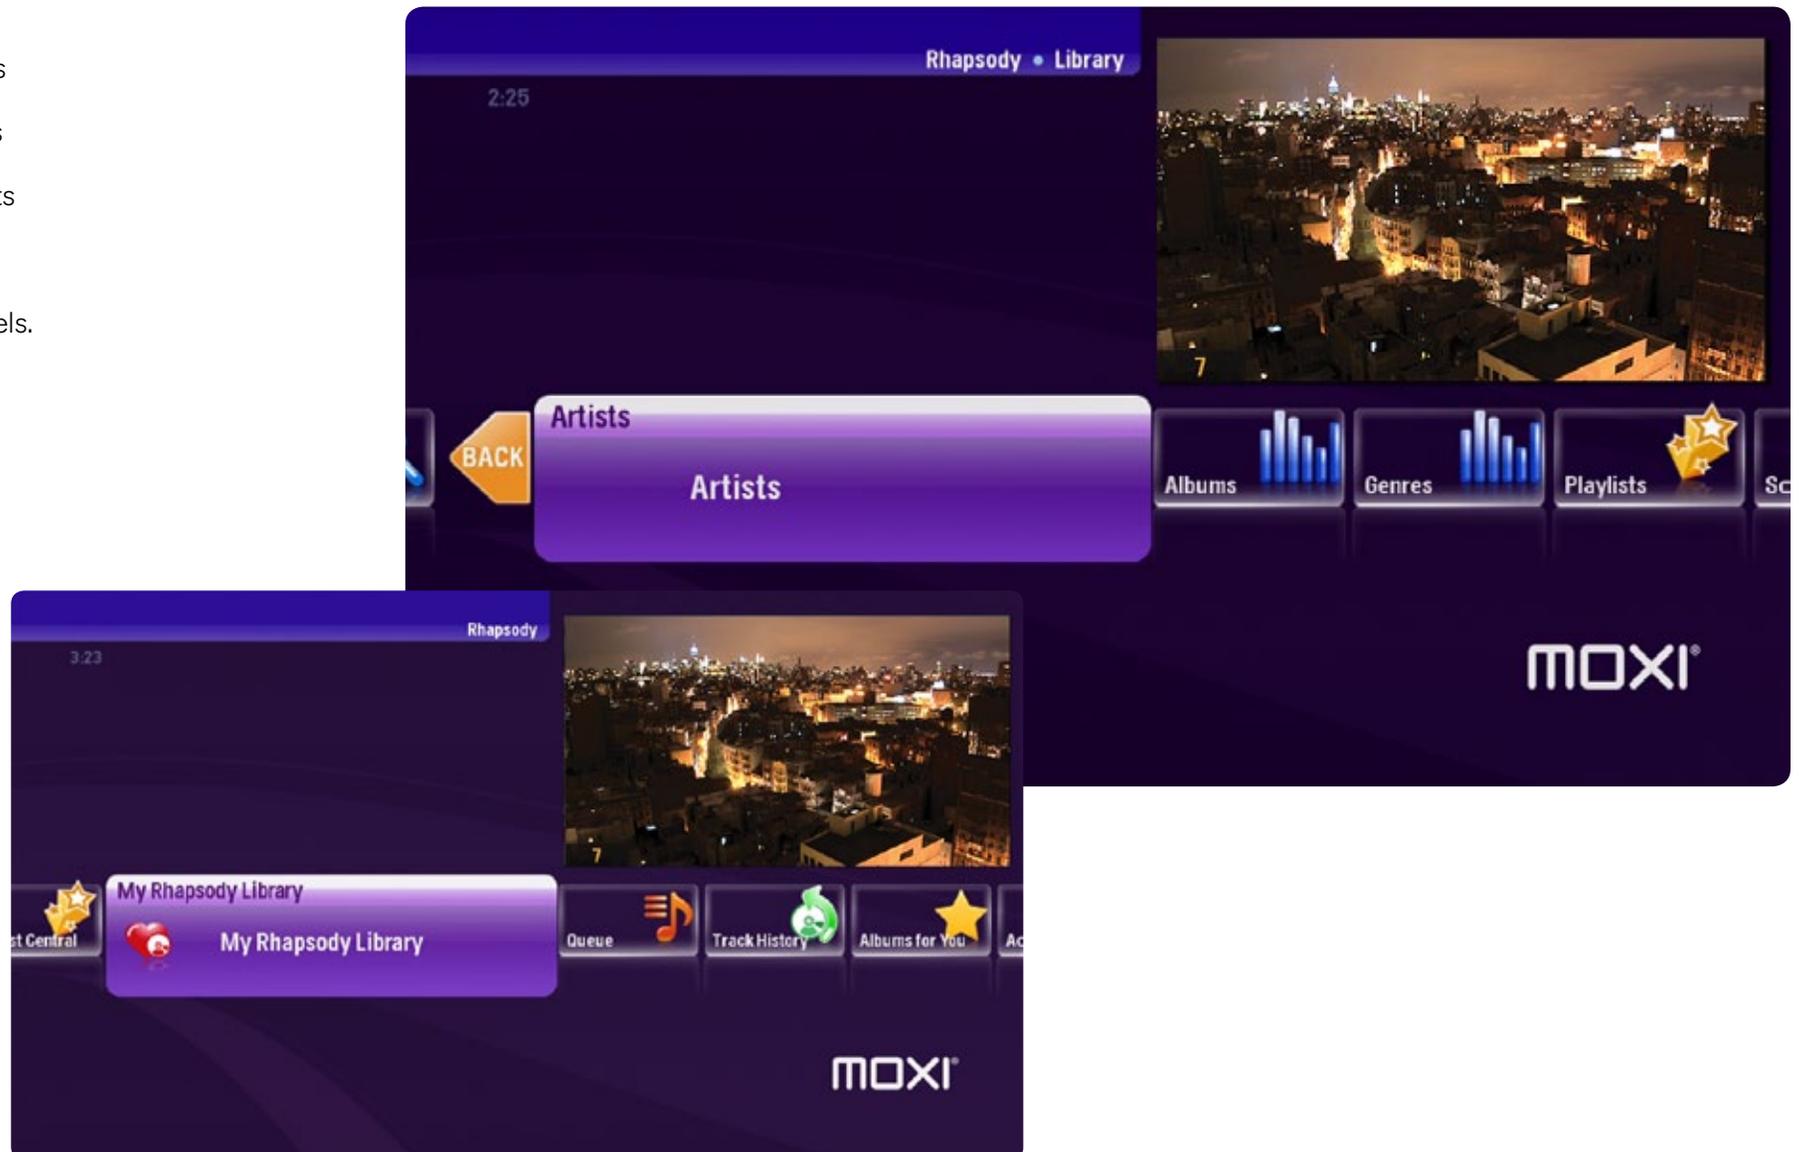

## Queue

The Queue contains a list of all songs played recently on your Moxi HD DVR. All of the songs you've listened to, including songs from a Rhapsody channel, are added to the Queue as soon as they begin playing. The Queue is limited to the 100 most recently-played songs.

The Queue has some additional options for the action menu, including:

- remove from queue - deletes the song from the queue
- move to end - moves the song to the end of the queue

## Track History


The Track History is similar to the Queue, except it tracks all songs played on your Rhapsody account, no matter whether you've listened to them on your Moxi HD DVR, your computer, or your stereo. That means that if you listened to a song online, within five minutes, you'll see that song in the Track History on your Moxi HD DVR. Only subscription content appears in the Track History, and each song is added after it is finished or after you click stop or next. Channel content is not included in the Track History.

## Albums for You

Albums for You provides a list of albums for you to enjoy based on your listening history. The songs in each album will appear in the track paddle.

## Account Info

This category lists your Rhapsody account type and account status.

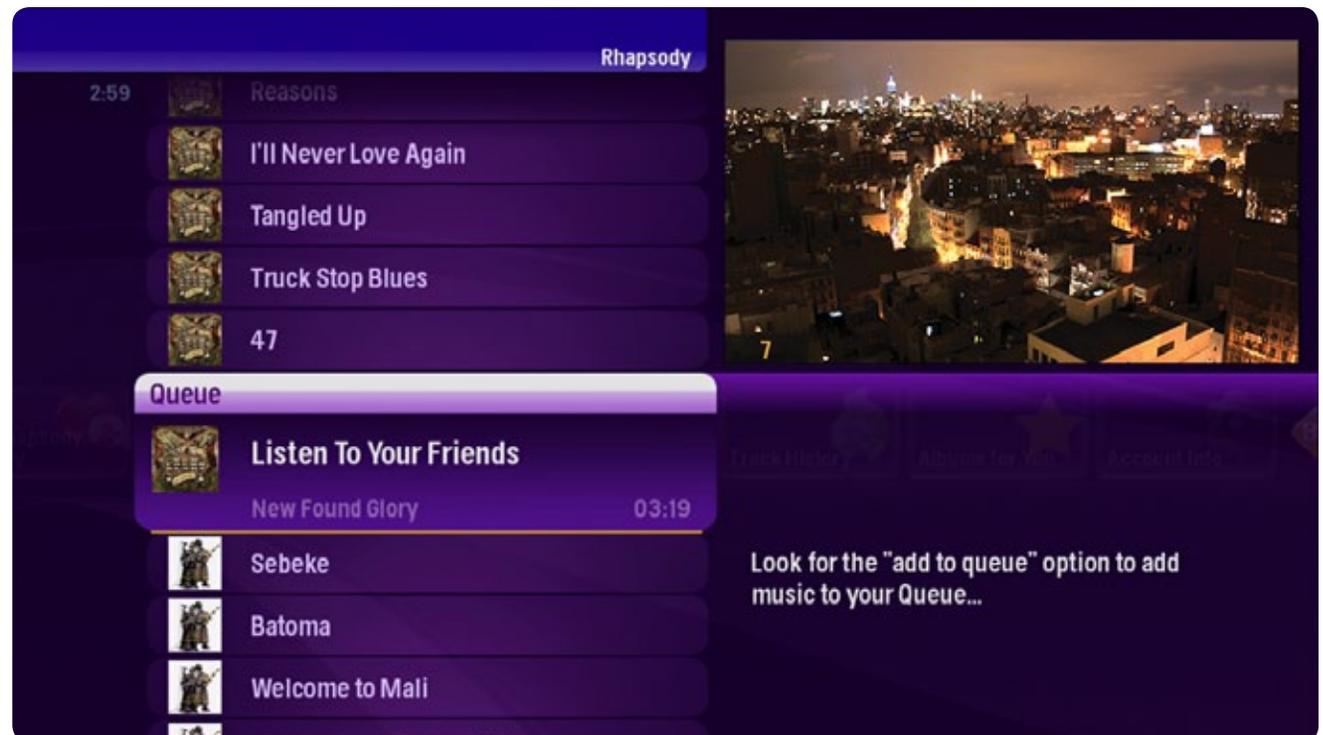

**To subscribe to Rhapsody when your 30 day trial expires:**

1. Visit moxi.com and sign in
2. Choose Manage Moxi Features
3. Click on Rhapsody
4. Click the Subscribe Now link. Another window will open that will take you to the Rhapsody sign up process.
5. Complete the Rhapsody sign up process and return to moxi.com
6. Enter your new Rhapsody user name and password

If you have an existing Rhapsody Unlimited or Rhapsody to Go account, just enter your username and password at moxi.com.

The screenshot shows the Moxi website interface. At the top, the Moxi logo is on the left, and navigation links for 'Welcome Simon', 'My Account', 'Sign Out', and 'Support' are on the right. Below this is a navigation bar with 'HOME', 'FEATURES', 'FAQ', and 'BUY A MOXI'. The main content area is titled 'Your Account Information.' and features an 'ACCOUNT MENU' on the left with options like 'ACCOUNT SUMMARY', 'MANAGE MY ACCOUNT', 'MANAGE MOXI DEVICES', 'MY MOXI FEATURES', 'Rhapsody', 'Media Link', 'Folder', 'eControls', 'MOXNET', 'Features', 'ONLINE SCHEDULING', and 'SUPPORT'. The 'Rhapsody' option is highlighted. The main content area displays the Rhapsody logo and text: 'Use your Moxi HD DVR to access Rhapsody's library of over five million songs.' Below this is a section titled 'RHAPSODY USERS' with a warning: 'You can only associate one Rhapsody account at a time with your Moxi HD DVR. To change accounts, remove the existing account and add a new one.' A table lists the associated Rhapsody user with columns for 'Username', 'Password', and 'Remove'. The username is 'bravisj@digoo.com' and the password is masked with 'xxxxxx'. A 'REMOVE' button is located below the table.

## Use Finetune

Finetune is an online music service that allows you to discover new artists and listen to your favorites. Our partnership with Finetune brings the fun of that service to your Moxi HD DVR.

Many of Finetune's features can be enjoyed immediately through the Moxi Menu. To create personalized playlists or choose your favorite music, you'll need to visit <http://www.finetune.com> and create an account, which you'll then associate with your Moxi account.



**To get started:**

Go to the Jukebox and choose Finetune. The Finetune application will open on top of the Moxi Menu; use the arrow and OK buttons to navigate.

**Search**

Finetune's search provides you with two ways to create custom playlists: by artist or by tag, or keyword.

To create a playlist:

1. Select Artist Radio or Tag Radio.
2. Enter the name of a favorite artist or a keyword describing the music you would like to listen to.
3. Hit Enter.
4. If the artist or tag is identified, your custom station will now begin playing.

**Featured Playlists**

This section presents a list of playlists based on the music of a particular artist. Use the up and down arrows to browse through the list of artists, and select one you like. The playlist will then begin playing.

**Stations**

The Stations section provides a list of radio stations grouped by music genre. Browse the list with the up and down arrow buttons, and select one you like. The skip option will let you skip over a certain number of songs, but there is a limit to how many you can skip per hour of listening.

**Profile**

The profile section is where you'll find the music you added from your account at <http://www.finetune.com>. Once you've created your finetune account, enter it in the profile section, and you'll see your personalized collection on your TV.

# finetune





# 9

## Using Media Link

With your Moxi HD DVR, you can sit in the comfort of your living room to access your music, videos, and photos.



## Accessing Your Media

Media Link allows you to stream videos, music, and photos from your home network-based computer to your TV. Once you have Media Link set up, accessing your computer's media is quick and easy. For instructions on setting up media link, please see chapter 16 Installation - Feature Setup.

### Finding and Adding Devices

Once your Moxi HD DVR is connected to your home network, a list of connected computers will appear in the Media Link vertical list. If you've just connected a new device, or you have a connected device that's not appearing in the list:

1. Select the Media Link card from the Moxi Menu
2. Scroll to Search for Media Servers
3. Press OK

Any new devices will then appear in the vertical axis. A message will inform you if no additional devices are found.

### Supported Files



- Photo JPEG, GIF\*, BMP\* and PNG\* files
- Music MP3, WMA, LCMP, WMA Pro, and WMA lossless\* files
- Video MPEG 2, MPEG 4\*, WMV, and H.264\* files

\*These files types are available through DLNA servers that support transcoding.

## Playing Media

1. Bring the computer you want to browse into center focus, and press OK. The specific folder and file structure you see will depend on the DLNA server you're using on your computer.
2. Locate the folder or file that interests you. To go deeper into that computer's hierarchy, press the OK or right arrow buttons. To go up one level in that computer's hierarchy, use the left arrow button.
3. If you've selected a folder that contains media you want to play, you can press the play button:
  - If the folder contains photos only, a slideshow will begin of the photos in that folder.
  - If the folder contains music only, the music in that folder will begin playing.
  - If the folder contains both music and photos, you'll be able to choose which you want to play.
4. If you've selected an individual piece of media, press the OK button to get a list of options.

## Using Media Link

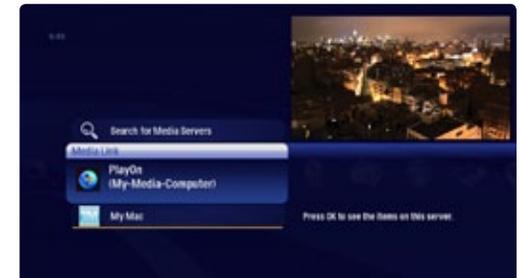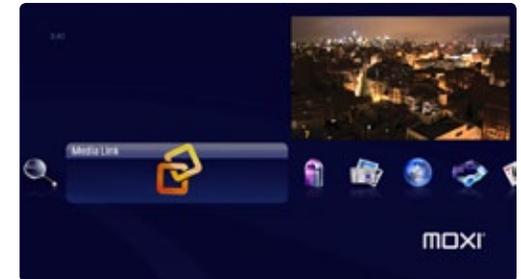

## Internet Video Content

If you choose to use PlayOn™ as the DLNA® server on your computer, you'll not only get access to your computers photos, music, and video. You'll also get access to some of the best Internet video content, including Netflix®, Hulu™, YouTube™, and more. PlayOn™ is a MediaMall Technologies product that you can download from the MediaMall website.

For details on setting up PlayOn, see Chapter 16 - Feature Setup.

Once you have PlayOn installed on your computer, you'll see that server in the vertical list of the Media Link category. If you select that server, you'll be able to browse the default set of content that PlayOn provides.

Netflix, Hulu, and YouTube

PlayOn lets you enter your Netflix and Hulu accounts so that your content shows up on your Moxi HD DVR. You can also enter the YouTube user names that post the videos you enjoy the most.

1. Click the PlayOn icon on the desktop of your computer.
2. Go to the Accounts tab.
3. Enter your Netflix and Hulu account information, as well as the YouTube posters whose videos you would like to see on your TV.



## Player controls

Once you are enjoying a piece of media, the following player controls can be used:

### Slideshow


1. PAUSE
2. PLAY
3. BACK
4. NEXT
5. SKIP
6. REPLAY
7. STOP

### Music

1. PAUSE
2. PLAY
3. STOP
4. BACK
5. NEXT

### Video

1. PLAY
2. PAUSE
3. STOP

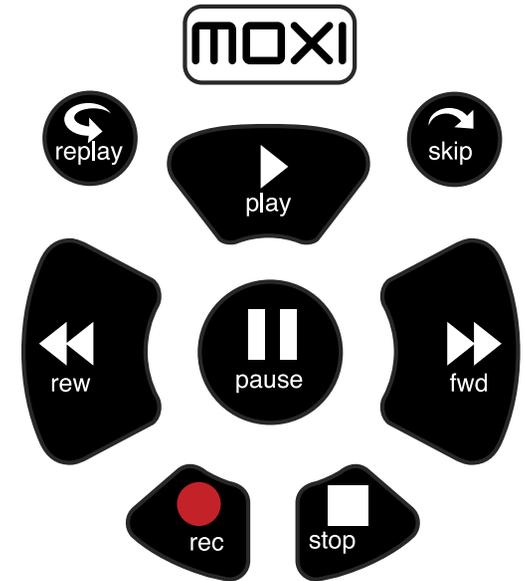



# 10

## Using eControls

Your Moxi HD DVR comes with automated home theater controls that allow you to set your viewing mood with the touch of your remote. eControls also lets you keep an eye on your IP cameras from your TV.



## Automating your home with eControls

With eControls, you can use your Moxi HD DVR to control and access a host of devices from your TV, including lighting, AV, and IP cameras. Control each device individually or set up “scenes” that control multiple devices at once with one button press. You can also use eControls to set a schedule for devices to turn on and off automatically. If you’re out of town, Internet access allows you to control your devices remotely.

### Getting Started

The first step towards getting started with eControls involves selecting, purchasing, and installing compatible devices. For details on this process, see Chapter 16 Installation - Feature Setup.

Once you have your individual devices installed, you’ll see them in the eControls category of the Moxi Menu. They will be grouped into two categories: devices and cameras. Before using your devices, please see the Safety Instructions at the end of this guide.


### Devices

To control an individual device, bring the devices card into center focus. You will then see a list of individual devices in the paddle on the right. Arrow right to activate this paddle, and then use the up and down arrows to select the device that interests you. Press OK, and you’ll get a list of options for that particular device.



## Cameras

To view an IP camera, bring the cameras card into center focus. You'll then see a list of cameras in the paddle on the right. Arrow right, and then use the up and down arrows to select a camera. Press OK, and you'll be able to view that camera's display.

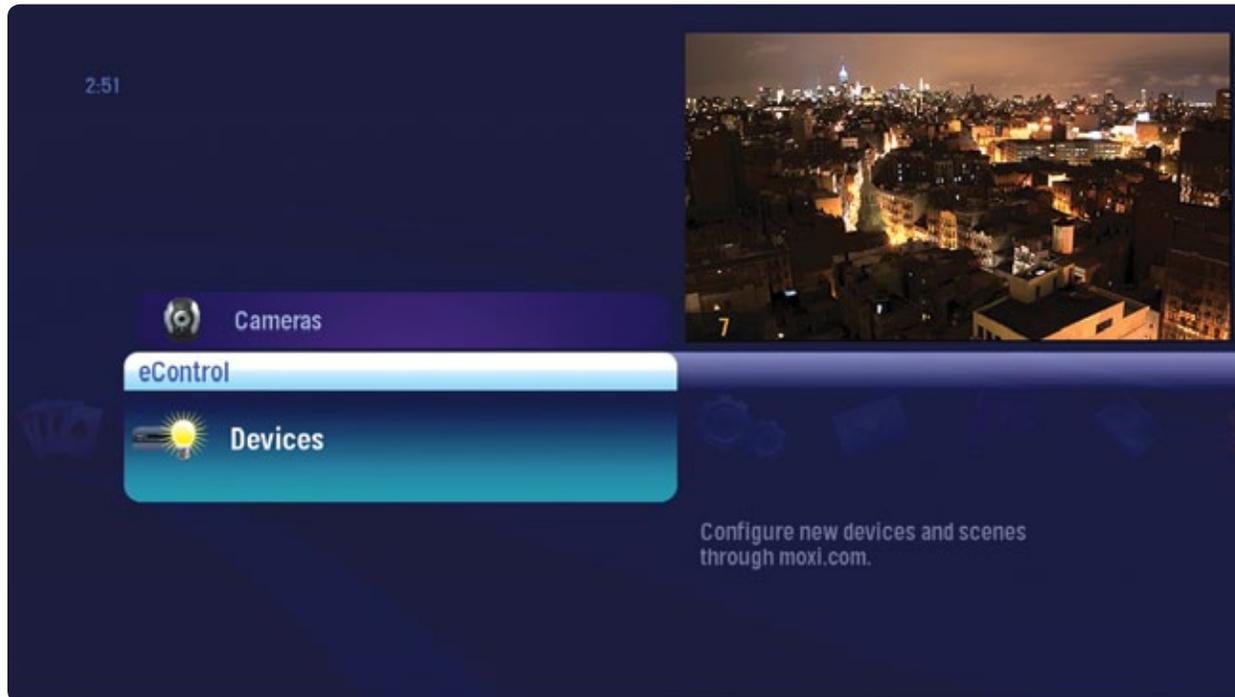

## Creating Scenes

Scenes allow you to set multiple devices for a particular purpose. A “movie” scene, for example, might be defined to play a DVD movie, dim the overhead lights, set the volume of the receiver, and raise the lights at a time corresponding to the end of an average DVD. Scenes are created online at your moxi.com account. Once you've created a scene, it will appear in your eControls vertical list, and you'll be able to turn it on and off with your remote.

### To create a scene:

1. Make sure that all of the devices you want to include in the scene are installed properly and added to your account. See Chapter 16 Installation - Feature Setup for specifics.
2. Sign in to <http://www.moxi.com>.
3. Go to Manage Moxi Features and choose eControls.
4. Select Set Up Devices and Scenes and choose the Moxi HD DVR, if you have multiple devices installed.
5. From the top menu, select Scenes and choose Add. Type a name for your scene and choose done.
6. Choose Click here to begin setting up this scene. You'll now be able to choreograph the timing and order of your scene.
7. In the left panel, the arrows at the top will allow you to browse through lighting devices, A/V Gear, and Delay timing. When you find an item you would like to include in your scene, drag it to the middle panel. To change the order of your scene, just drag an individual item to the correct position and drop it.

## Your Account Information.

The screenshot shows a web interface for creating a scene. At the top, there is a navigation bar with four tabs: "Simone Control", "Devices", "Scenes", and "Schedules". The "Scenes" tab is currently selected. Below the navigation bar, there are three main panels:

- Select Scene:** This panel has an "add" button at the top right. Below it, there is a button labeled "Movie Scene" with a small DVD icon to its left.
- Scene Items:** This panel has an "add" button at the top right. Below it, there is a message: "There are no members in this scene." followed by a link: "Click Here to begin setting up this scene."
- Tools:** This panel has a clapperboard icon and three options: "Duplicate Selected Scene", "Rename Selected Scene", and "Delete Selected Scene".

8. Adjust the settings for each particular device. For example, turn lighting on or off or add the specific number of seconds, minutes or hours to a delay.
9. You can test your scene by selecting Test Selected Scene from the right panel. When you're satisfied, click Apply.

You will now see an additional card in the eControls vertical list in the Moxi Menu called Scenes. The scene you just added will appear in the paddle on the right. To control the scene, press OK for a list of options.

To put a scene on a schedule, just follow the instructions for setting schedules. After the scene is applied, the Tools pane includes options to test, rename, or delete the selected scene.

## Your Account Information.

**Simone Control** | Devices | **Scenes** | Schedules

→ Movie Scene

**List Of Delays**

- Second Delay: 1 second
- Minute Delay: 1 minute
- Hour Delay: 1 hour

**Scene Items**

There are no members in this scene.

Drag from the list on the left to add members to this scene

Drag members in this list up and down to reposition.

Drag members from this list to remove them.

**Tools**


→ Back to Scene Selection

## Setting Schedules

You can put an individual device, groups of devices, or a scene on a set schedule that will automatically turn it on and off. The schedules option on the dashboard allows you to control the day of the week that the scene is executed, the time of day the scene starts and stops, and how often the scene occurs.

### To set a schedule:

1. Make sure that all of the devices you want to include in the scene are installed properly and added to your account. See Chapter 16 Installation - Feature Setup for specifics.
2. Sign in to your account at <http://www.moxi.com>.
3. Select Manage Moxi Features and choose eControls.
4. Select the Moxi HD DVR you would like to use.
5. Select Schedules from the dashboard toolbar and choose Add.
6. Type a name for your new schedule and choose Done. Select Click here to begin setting up this schedule.
7. In the left panel, the arrows at the top will allow you to browse through lighting devices, A/V Gear, Delay timing, and Scenes. When you find an item you would like to include in your schedule, drag it to the middle panel. To change the order of your scene, just drag an individual item to the correct position and drop it.

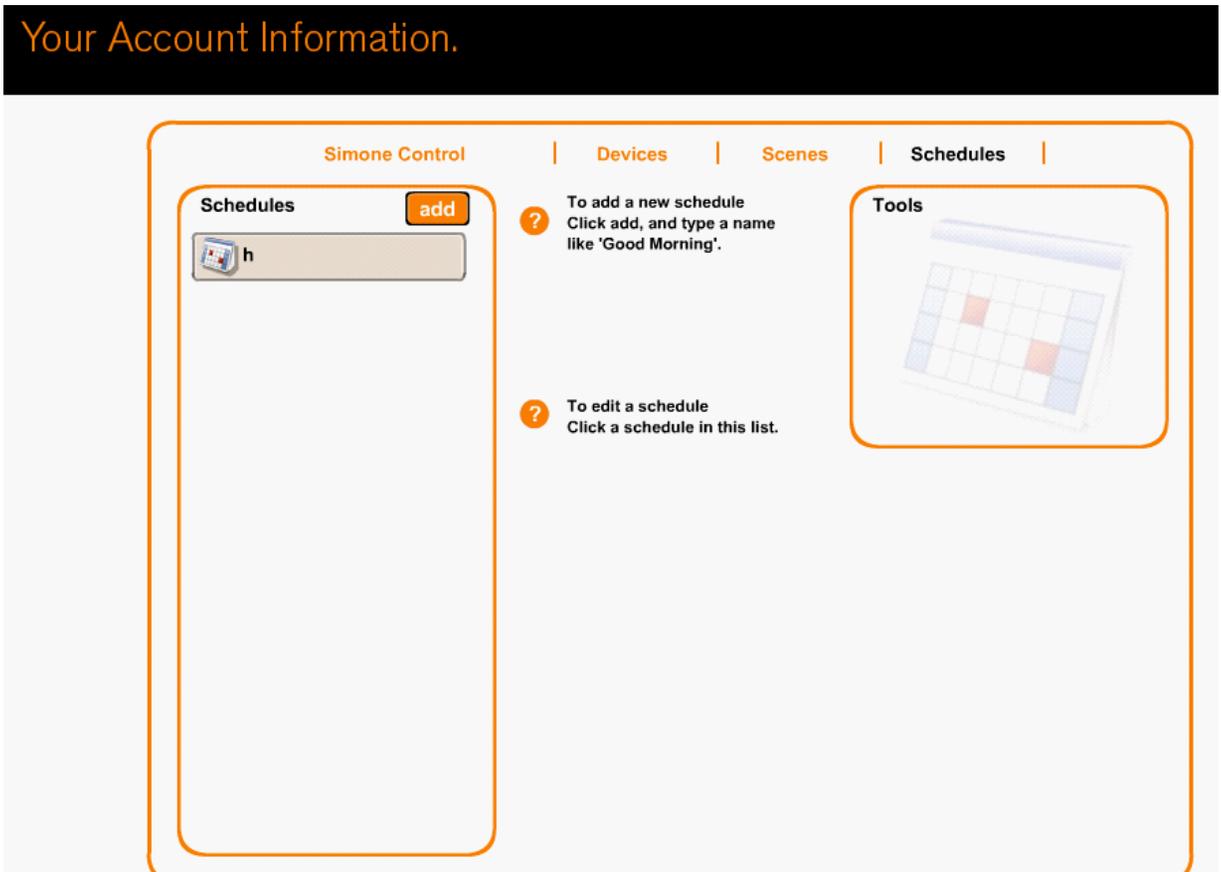

8. When you're done adding items, select Apply.
9. In the Tools pane on the right, select Back to Schedule Selection and then choose Show Time/Date Settings.
10. Select the Day of Week, Time of Day, and Occurrence in the center Settings panel. The Enable setting allows you to turn your schedule on and off.
11. When finished, choose Apply.

## Using eControls

### Your Account Information.

The screenshot displays the 'Simone Control' interface with three main panes: Schedules, Settings, and Tools. The Schedules pane on the left shows a list of schedules with an 'add' button. The Settings pane in the center includes 'Day Of Week' selection, 'Time Of Day' setting, and an 'Enable' toggle. The Tools pane on the right lists actions like 'Show Scheduled Items', 'Duplicate Selected Schedule', 'Rename Selected Schedule', and 'Delete Selected Schedule'.

**Simone Control** | Devices | Scenes | Schedules

**Schedules** add

- h
- Wake Up

**Settings**

**Day Of Week**

M T W Th F Sat Sun

Select the Days on which you want this schedule to run

**Time Of Day**

10:32 PM

Set the clock to the time you wish this schedule to run

**Enable**

No Yes

**Tools**

- Show Scheduled Items
- Duplicate Selected Schedule
- Rename Selected Schedule
- Delete Selected Schedule



# 11

## Playing Games


The Moxi HD DVR comes with a collection of games to help you pass the time between shows.

# Playing Games



Your Moxi HD DVR comes with:

- Tomato
- Bowling
- Video Poker
- Blackjack
- Invasian Wave
- Blast it
- Ping
- Blockbreaker
- Bubble Blast HD
- 21 Frenzy
- Mahjong
- Code Breaker
- Solitaire HD
- Slot Machine
- Texas Hold'em HD
- Sudoku HD
- QuizMaster HD

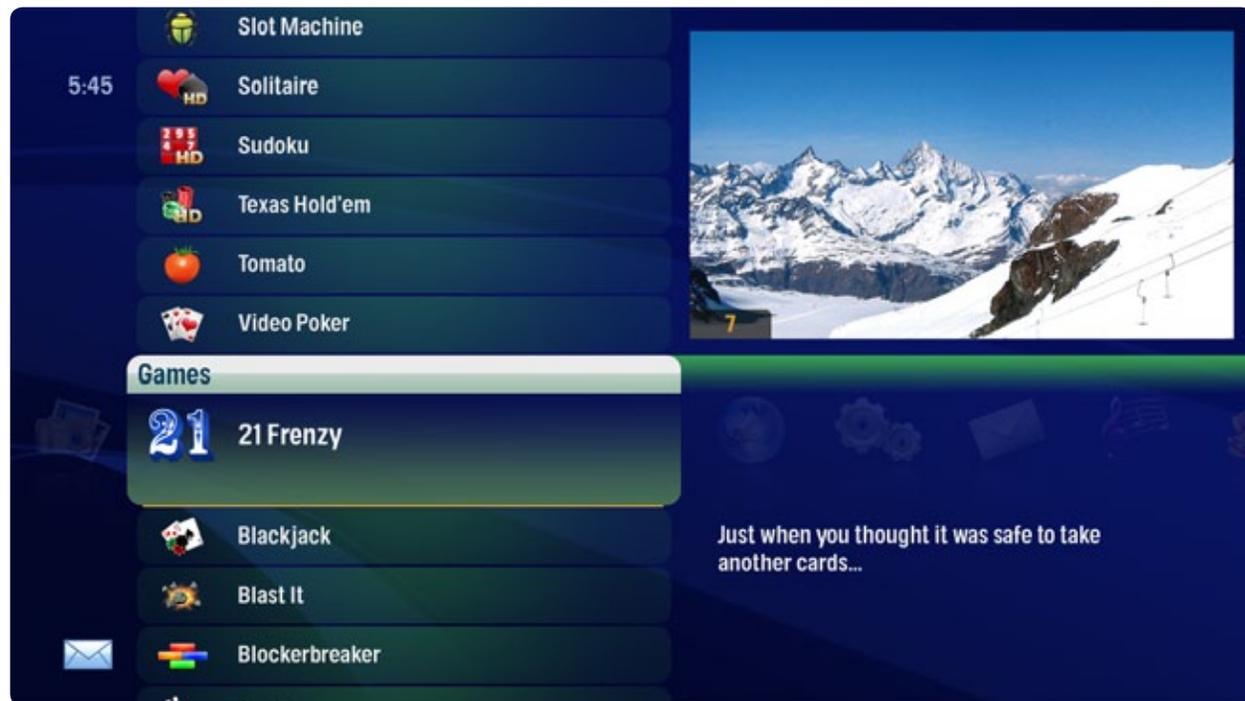

## Screensaver and game display behavior

After 30 minutes with no button-press activity, games exit and live TV appears in full screen. However, some games include a Mini TV and some do not. The screensaver behavior is slightly different for the two types:

### Games that include a Mini TV

After 30 minutes with no button-press activity exit, and the media playing in the Mini TV zooms to full screen. You can also press the zoom button on the remote control to toggle between the game and full screen of what is playing in the Mini TV.

### Full-screen games that do not include a Mini TV

After 30 minutes with no button-press activity, the game suspends, and a screensaver appears. The screensaver is a black screen displaying white text that reads, MOXI. Press any button to continue. Once you press a button, the game reappears and resumes.





# 12


## Surfing MoxiNet

Now you don't have to leave your TV to get the latest news.



## MoxiNet

MoxiNet gives you two great ways to find the Internet information you're looking for: MoxiNet content pages and bookmarking capability for your favorite Internet sites. MoxiNet is located in the Moxi Menu. When you bring the MoxiNet card into center focus, the MoxiNet categories, as well as your bookmarked sites, will expand in the vertical list. When you press OK to choose a category or site, a new window will open. To return to the Moxi Menu, press the Moxi button.

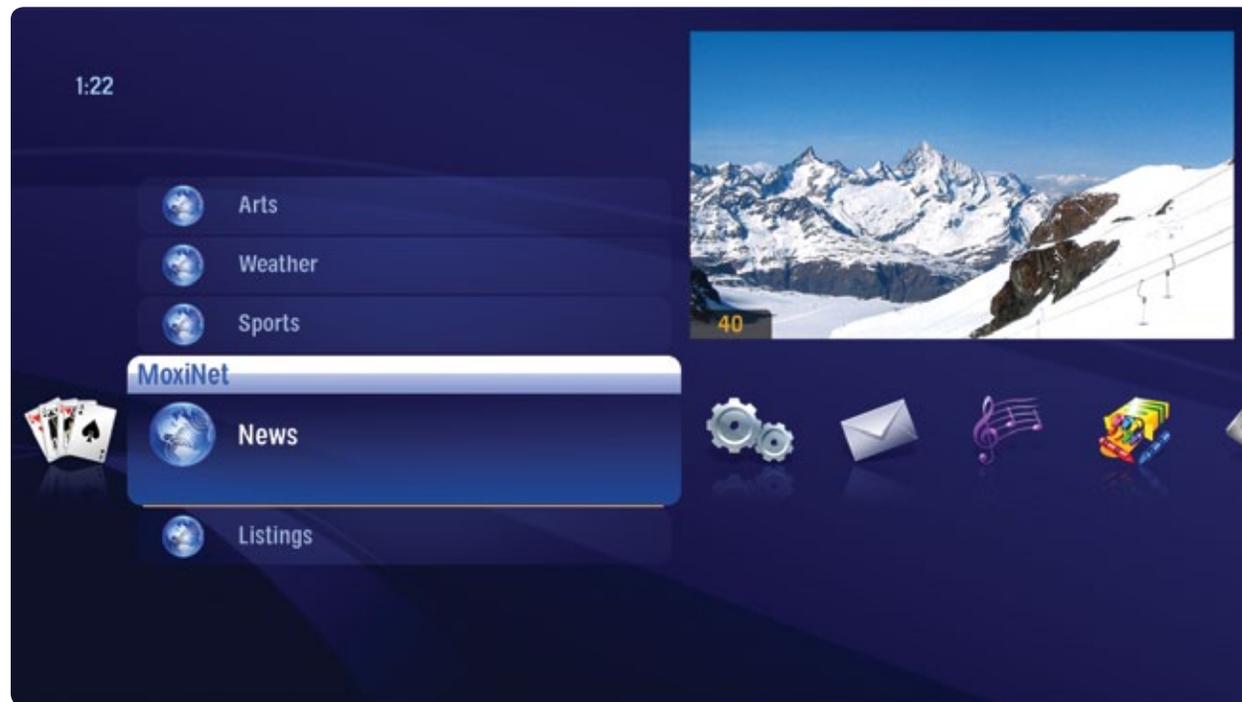

MoxiNet content pages like News, Sports, Weather, Arts and Listings provide you with pages that are specifically designed to be viewed and navigated on your TV with a remote control. See a breaking news story that you want to learn more about? Check the MoxiNet News page. See a movie trailer on TV that interests you? Check out where it's playing in the MoxiNet Listings. Once you've opened a MoxiNet category, you can move between categories with your remote.



You can also bookmark your favorite Internet sites so that they appear in the MoxiNet menu.

To add a site:

1. Go to <http://www.moxi.com> and sign in to your account
2. Select My Moxi Features and choose MoxiNet
3. Choose a title for your bookmark, and enter a url.
4. You should now see your bookmark in the MoxiNet category in the Moxi Menu.

To access a site, bring that card into center focus, and press OK. An Internet browser will overlay the Moxi Menu opened to the site you specified.

Use the arrow keys to navigate around the site. To select something on the page, press OK.

When you select a text entry box on a Web page, a virtual keyboard will appear. You can then use the arrow buttons to navigate, and press OK to enter a letter. Select Submit when you're done.

If you would prefer to navigate using an onscreen mouse, press the \* button, and the cursor will appear. You can then use the arrow buttons to move the cursor around the screen.

MoxiNet does not support popups or flash videos.

## Your Account Information.

### ACCOUNT MENU

ACCOUNT SUMMARY

MANAGE MY ACCOUNT

MANAGE MOXI DEVICES

MY MOXI FEATURES

Rhapsody

Media Link

Flickr

eControls

MoxiNet [▶]

Finetune

ONLINE SCHEDULING

SUPPORT

# MOXI<sup>®</sup> NET

Add your favorite Internet sites here for viewing on your Moxi HD DVR.



### BOOKMARKS

Title	URL	Remove
New York Times	<a href="http://www.nytimes.com">http://www.nytimes.com</a>	<input type="checkbox"/>

REMOVE

### ADD A BOOKMARK

Title

URL



# 13

## Messages

You'll receive a new message when there are new features available or a software update is necessary.

## NEW MESSAGE

Did you know that when you receive a new message, a mail icon appears at the bottom left of your Moxi menu?


As soon as you have read all your messages, the icon will disappear.

# Viewing Messages

The Messages category is located in the Moxi Menu. Bring Messages into center focus, and your messages will appear in the vertical axis. Press OK to view each message.

To read a message:

- Press the Moxi button to open the Moxi menu.
- Scroll to the message category.
- Use the up or down arrows to select the message, and then press OK to open it.
- Use the next and back buttons to page through the message.
- Once you have read the message, you can choose to exit the message, mark it as unread, or delete it.

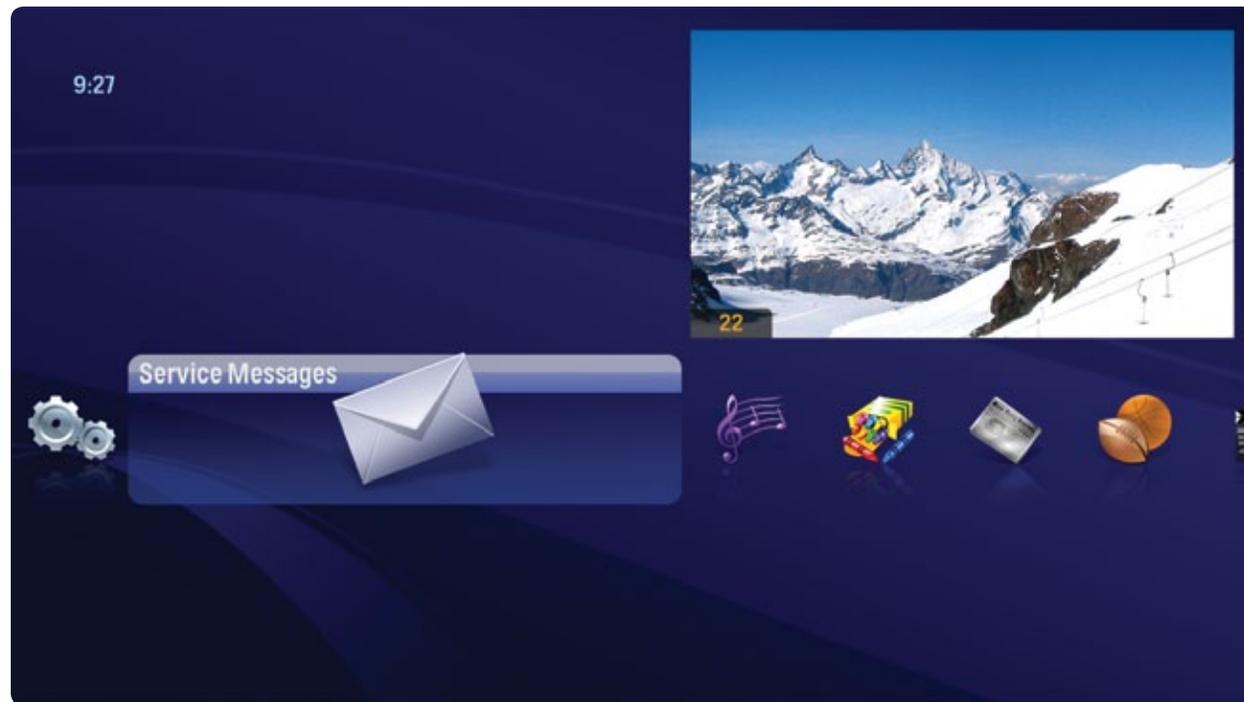





# 14

## Moxi Settings

Moxi Settings allows you to customize your Moxi HD DVR to your taste and provide details you'll need to get it set up.



## Parental Controls

The Moxi Menu provides robust parental controls, including the ability to lock shows by channel or by the same rating systems used by the V-Chip: MPAA ratings and TV Parental Guideline ratings. Parents choose a 4-digit PIN and then enter that PIN to manage their choices.

You can also lock out individual shows, including recorded programs, from the Moxi Menu. The Moxi system records scheduled shows that are blocked by parental controls, but you must enter the PIN before you can watch them.

### Working with your PIN

#### Creating a PIN

The first time you use parental controls, the Moxi system asks you to create a PIN.

1. In the Settings category, scroll to the Parental Controls card, and press OK.
2. Press the numbers on the remote to enter a four digit PIN and then enter the PIN again to confirm it.
3. Choose close

#### Changing a PIN

1. In the Settings category, scroll to the Parental Controls card, and press OK.
2. Choose settings, use the left arrow to scroll left to the Change PIN card, and then press OK.
3. Enter the old PIN, enter the new PIN, and then enter the new PIN again to confirm it.

#### If You Forget Your PIN

1. Go to [www.moxi.com](http://www.moxi.com), log in to your account, and click on the Moxi device whose PIN you want to reset.
2. When the selected Device summary screen opens, a Reset PIN button displays at the bottom left. Click on the Reset PIN button.
3. When the PIN reset is complete, a confirmation note appears. Parental Controls are now unlocked.
4. Go to the Moxi Menu and create a new PIN in order to re-lock Parental Controls.

## Locking and Unlocking Programs

Locking by Channels or by Rating

1. In the Settings category, scroll to the Parental Controls card, and then press OK.
2. Choose settings (within Parental Controls) and then use the right arrow to choose either TV Ratings, Movie Ratings or Lock By Channel.
3. Each card contains a list of the rating systems or a list of channels. Scroll to the format or channel you want to control.

Lock the rating or channel by choosing it, and then pressing OK on the remote. When you lock a rating, all ratings for more restrictive content are also locked. For example, if you lock the TVPG rating, then the TV14 and TVMA ratings are also locked automatically, because these ratings are for more mature audiences than TVPG. When unlocking, the reverse is also true.

If the V-Chip in your TV is enabled, you may see a black screen after tuning to a channel with blocked content. No Moxi Menu, flip bar, sound effects, or any other audio or video are shown or heard. To correct this, change to an unblocked channel, or disable all V-Chip functions and use the parental control features provided by the Moxi system to regulate viewing.

Turning Off Parental Controls


To unlock or change all parental control settings, go to the Settings category, scroll to the Parental Controls card, and then press OK. Follow these instructions to unlock selected items:

1. Press OK on any locked program.
2. Enter your PIN to unlock all programming temporarily or choose more options to only unlock the current channel.

### Unlock for a Specified Amount of Time:

1. In the Settings category, scroll to the Parental Controls card, and then press OK.
2. Choose settings (within Parental Controls), scroll to the Set Relock Timer card, and then press OK.
3. Enter your PIN, if prompted.
4. Choose the unlock duration between one and six hours.
5. Once set, the Parental Controls category card displays the selected relock time.



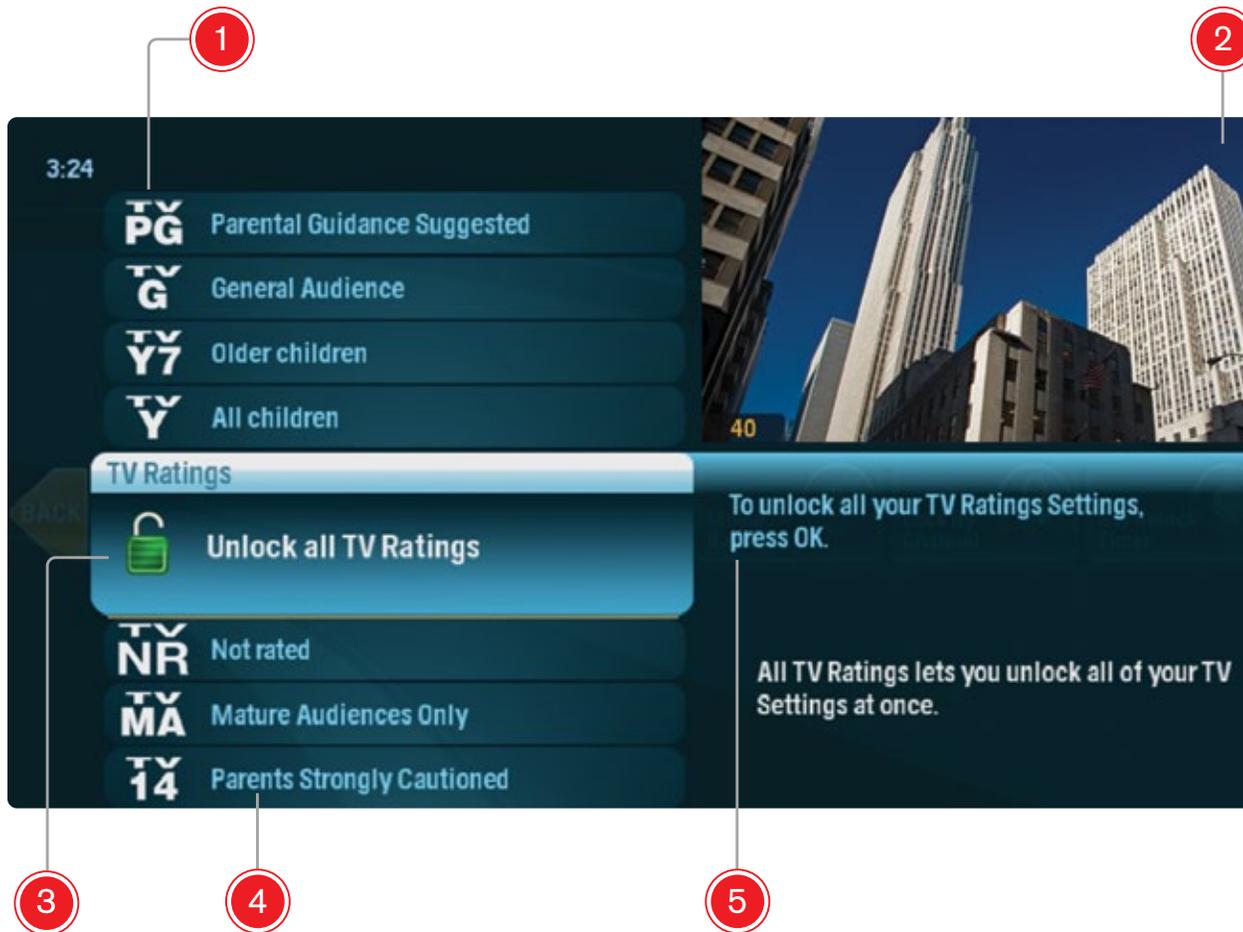

- 1 RATING**  
You can lock individual ratings by pressing OK on the center focus. Locking a higher rating locks all ratings above it.
- 2 MINI TV**  
Your current program will continue to play in the Mini TV.
- 3 LOCK ICON**  
The Lock icon displays if the item is locked or unlocked.
- 4 CATEGORY TITLES**  
Category titles display the parental control category.
- 5 HELP**  
Help explains details about the currently-selected rating.

# Diagnostics

The Diagnostics card in Settings provides the following information:

- Customer Information
- Network Status
- Service Status
- Hardware Status

## Customer Information

The Customer Information option displays information from your account on moxi.com. Check here to be sure your current information is accurate. Go to moxi.com to correct information if required.

1. Customer account name
2. Current status of the account
3. Last account update timestamp
4. Box nickname (assigned during registration) used to define which Moxi system you want to assign feature entitlements
5. Local account and device zip codes
6. Local cable provider
7. Channel lineup indicator
8. Moxi User ID

## Network Status

The Network Status option provides the following information about your network connection. You can choose refresh connection (if any connection does not show “active”) and to send logs to server (for Moxi customer care support assistance):

- Network interface (media access control address for the in-home network, Moxi system IP address, and gateway or router IP address)



### GUIDE DATA

If your channel guide data has not updated you can force Moxi to update. To do this go to Diagnostics, then Service Status and click OK on update guide data.

- Domain name system (DNS) address
- Status of the Home Network connection – must show “active” for the Moxi device to function properly.
- Status of the Internet connection. - must show “active” for the Moxi device to function properly.
- Status of the Moxi service connection - must show “active” for the Moxi device to function properly.

## **Service Status**

The Service Status option displays information about the Moxi service and your cable service provider.

- Local cable provider
- Channel lineup indicator
- Current software version number
- Date and timestamps for the last software download, the last electronic program guide download, the last feature capabilities download, and the last time the Moxi service logs were sent to the server
- Active operating time of the Moxi application since the last restart

### **Choose from the following actions to update service-related applications:**

- Update guide data – select this option to ensure you have the current guide data displaying in the Moxi Menu.
- Update info – select this option to update changes made to your cable provider or channel lineup in your account at moxi.com.
- Update resources – select this option to ensure you have up-to-date software and feature entitlements from Moxi.
- Send logs to server – select this option to send logs from your Moxi device to Moxi customer care for support assistance.
- If there is a software update currently available, you'll see Update Software as an option in the Customer Information action menu.

## Hardware Status

The Hardware Status option displays information about the hardware components in your Moxi device: Choose to Update info or send logs to server for Moxi customer care support assistance.

- Unique design identifier for Moxi system (Moxi ID located on the rear panel of the Moxi system)
- Hardware ID same as the Moxi ID
- Temperature of the central processing unit (normal, hot, very hot)
- Tuner 1 and 2 signal type (analog, digital, or unknown), the currently tuned channel, and the SNR in the database
- Authorization state
- CableCARD™ information

## Storage Info

The Storage Info card displays the amount of Recorded TV storage space used by recorded shows. In Settings, navigate to the Storage Info card and press OK.

## Skip

Pressing the skip button on the remote moves you forward in recorded or stored programs in set increments. In Settings, navigate to the Skip card and press OK. Select the increment you want to apply to the skip button on your remote.


## Moxi Settings



### STORAGE INFORMATION

The storage meter lets you know how much space you have left for more recorded programs. It's located in the Settings category on the horizontal menu.

Press OK on the Storage Info card to view details.

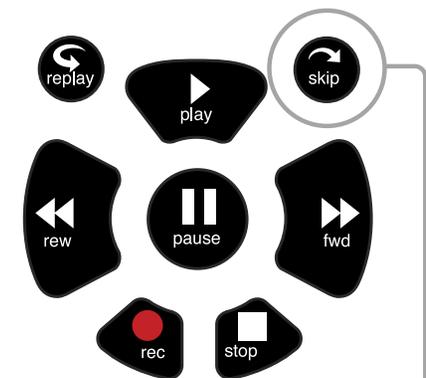

Skip  
107

# Closed Caption

Most viewers use these setting to toggle closed captioning on or off; however, you can select one of the following closed caption cards to set other preferences:

- **Display Preferences** - choose a font type, window background and color, and other similar close caption display settings.
- **Language Preferences** - set primary or secondary language display preferences.
- **Digital Services** - scroll through the additional digital stream service cards provided, and press OK to make a selection. Select one option at a time.
- **Basic Services** - scroll through the various basic service cards provided, and press OK to make a selection. Select one option at a time.

# Secondary Audio

When you watch a TV program on an analog channel that includes a secondary audio program (SAP) in a different language, the Moxi system application can pass that secondary audio stream to your TV or audio receiver.

1. To enable or disable secondary audio, go to the Settings category, and select the Secondary Audio card.
2. Choose enable (or disable), and then chose close.
3. Once you change to a channel carrying a secondary audio stream, you hear it immediately. If you tune to a channel that does not carry secondary audio, then you hear the primary audio only.

Note: To hear alternate audio on digital channels, open the flip bar, press OK, If alternate languages are available, there will be a language option on the action menu. Select language until you get the desired option.


# TV Setup


If you have connected the Moxi unit to your TV with an HDMI™ cable, your TV Setup will automatically set to the correct resolution.

If you are using alternate cables, including an HDMI to DVI cable, you must select the highest video resolution supported by your TV. The Moxi system then automatically adjusts the video output to match the broadcast format and the selections set in the TV Setup card. The video resolution options are 480i (non-HDTV), 480p, 720p (default), 1080i, and 1080p.

If your TV is standard definition (SD), make sure 480i is the only box checked. All other video resolutions will be output at 480i. You can still watch HD channels and they may look considerably better than their SD counterparts.

Refer to the Installation chapter for TV Setup instructions.

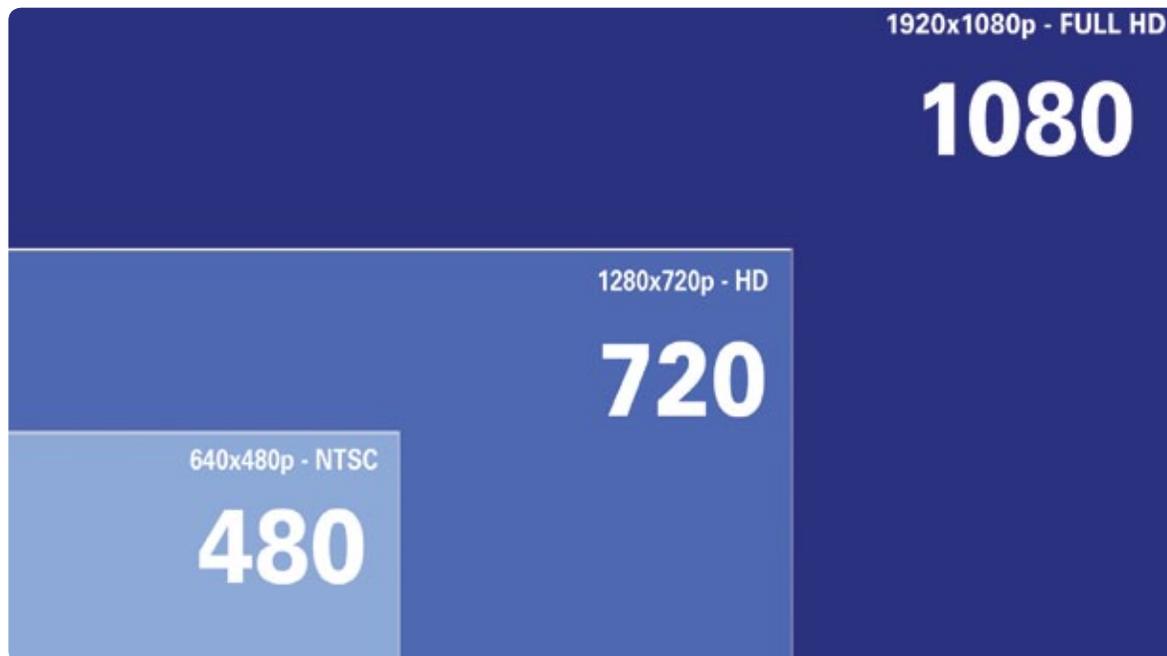

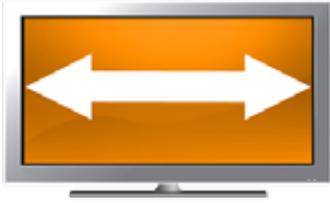

## Aspect Ratio

Use the Aspect Ratio card in Settings to control how programming content appears on your TV. For standard definition (SD) TVs, choose Standard (4:3) only. For Widescreen TVs, determine how standard content displays on your TV by first choosing Widescreen (16:9) and then selecting maintain (displays standard content as-is), or stretch (stretches the standard content to fill the TV screen).

## Audio Output

Use the Audio Output card in Settings to identify the type of audio connection to audio equipment. Choose from the options that the Moxi system can output: Dolby Digital, stereo, or mono.

AUDIO CONNECTION	PREFERRED SELECTION
S/PDIF (coaxial or optical)	Dolby Digital
RCA (red and white)	Stereo
RCA (white only)	Mono

## External Hard Drive

The external hard drive option in the Settings category is used to install an eSATA external drive for additional recorded TV storage space. See the Installation chapter for instructions on installing an external drive.



### EXTERNAL HARD DRIVE

You may connect one external hard drive at a time to the rear eSATA port on the Moxi system.

## Sound Effects

Use the Sound Effects card in Settings to adjust the volume of sounds that result from remote button presses: high, medium, low or mute.

## Front Panel Lights

The brightness of the three front panel LED lights can be set using the Front Panel LED Controls card in Settings. The options are high, medium, low, and off. If you set your Moxi unit to "off", the red recording lights will still appear when your DVR is actively recording.

# Channel List

All of the channels available for you to tune (either via a CableCARD or cable-only) are displayed in Channel List in the Settings category. You can remove channels from displaying in the Moxi Menu by scrolling to the desired channel and pressing OK to select or de-select the channel. If a channel appears in your Channel List that you do not subscribe to, you can also remove it in this way.

When a cable connection is used without a CableCARD, selecting Channel List displays two additional options:

- Channel Scan – select Channel Scan to initiate the process to discover tunable channels. Refer to the Installation chapter for Channel Scan instructions.
- Channel Mapping – tunable channels (discovered during a channel scan) that can not be automatically mapped to the electronic program guide are listed in this menu option in order to allow the user to manually map the channel to the EPG. Refer to the Installation chapter for Channel Mapping instructions.

# Moxi Setup

The Moxi Setup card in the Settings category includes the following options to manage your Moxi system:

- Diagnostics – another way to access the information in the Diagnostics option
- Reset –the ability to remove your EPG information, as well as other feature-specific information like your finetune radio custom playlists and Flickr photo sets from your Moxi device. Once you remove the Moxi device from your online Moxi account, the Moxi device can then be added to any Moxi account and activated. Refer to the Installation chapter for instructions to activate and complete the onscreen setup.
- Troubleshooting – the ability to view your selected channel lineup or update guide data.
- CableCARD – access to the CableCARD screens supplied by the CableCARD manufacturer.

# Moxi Tips

This category provides tips on using your Moxi system and Moxi Menu features.

## STORAGE INFORMATION

To quickly review and test the channels in your channel map, first visit a channel in the Channel List. Then press **info** and **watch** to bring the channel to live TV.

If you are not subscribed, you will receive a message in a few seconds. Press **zoom** to return to your place in the Channel List, ready to add or remove this channel from Moxi's List.

## CableCARD™

The CableCARD option displays important information about the installed CableCARD. You may need to provide some of this information to your cable service provider while provisioning your CableCARD. Press OK to view the details.




# 15

## Installation - Configuration Alternatives

Your Moxi HD DVR came with a Quick Start Guide. This Installation Chapter covers some of the additional configuration possibilities, such as video and audio alternatives.

# Moxi HD DVR Diagram

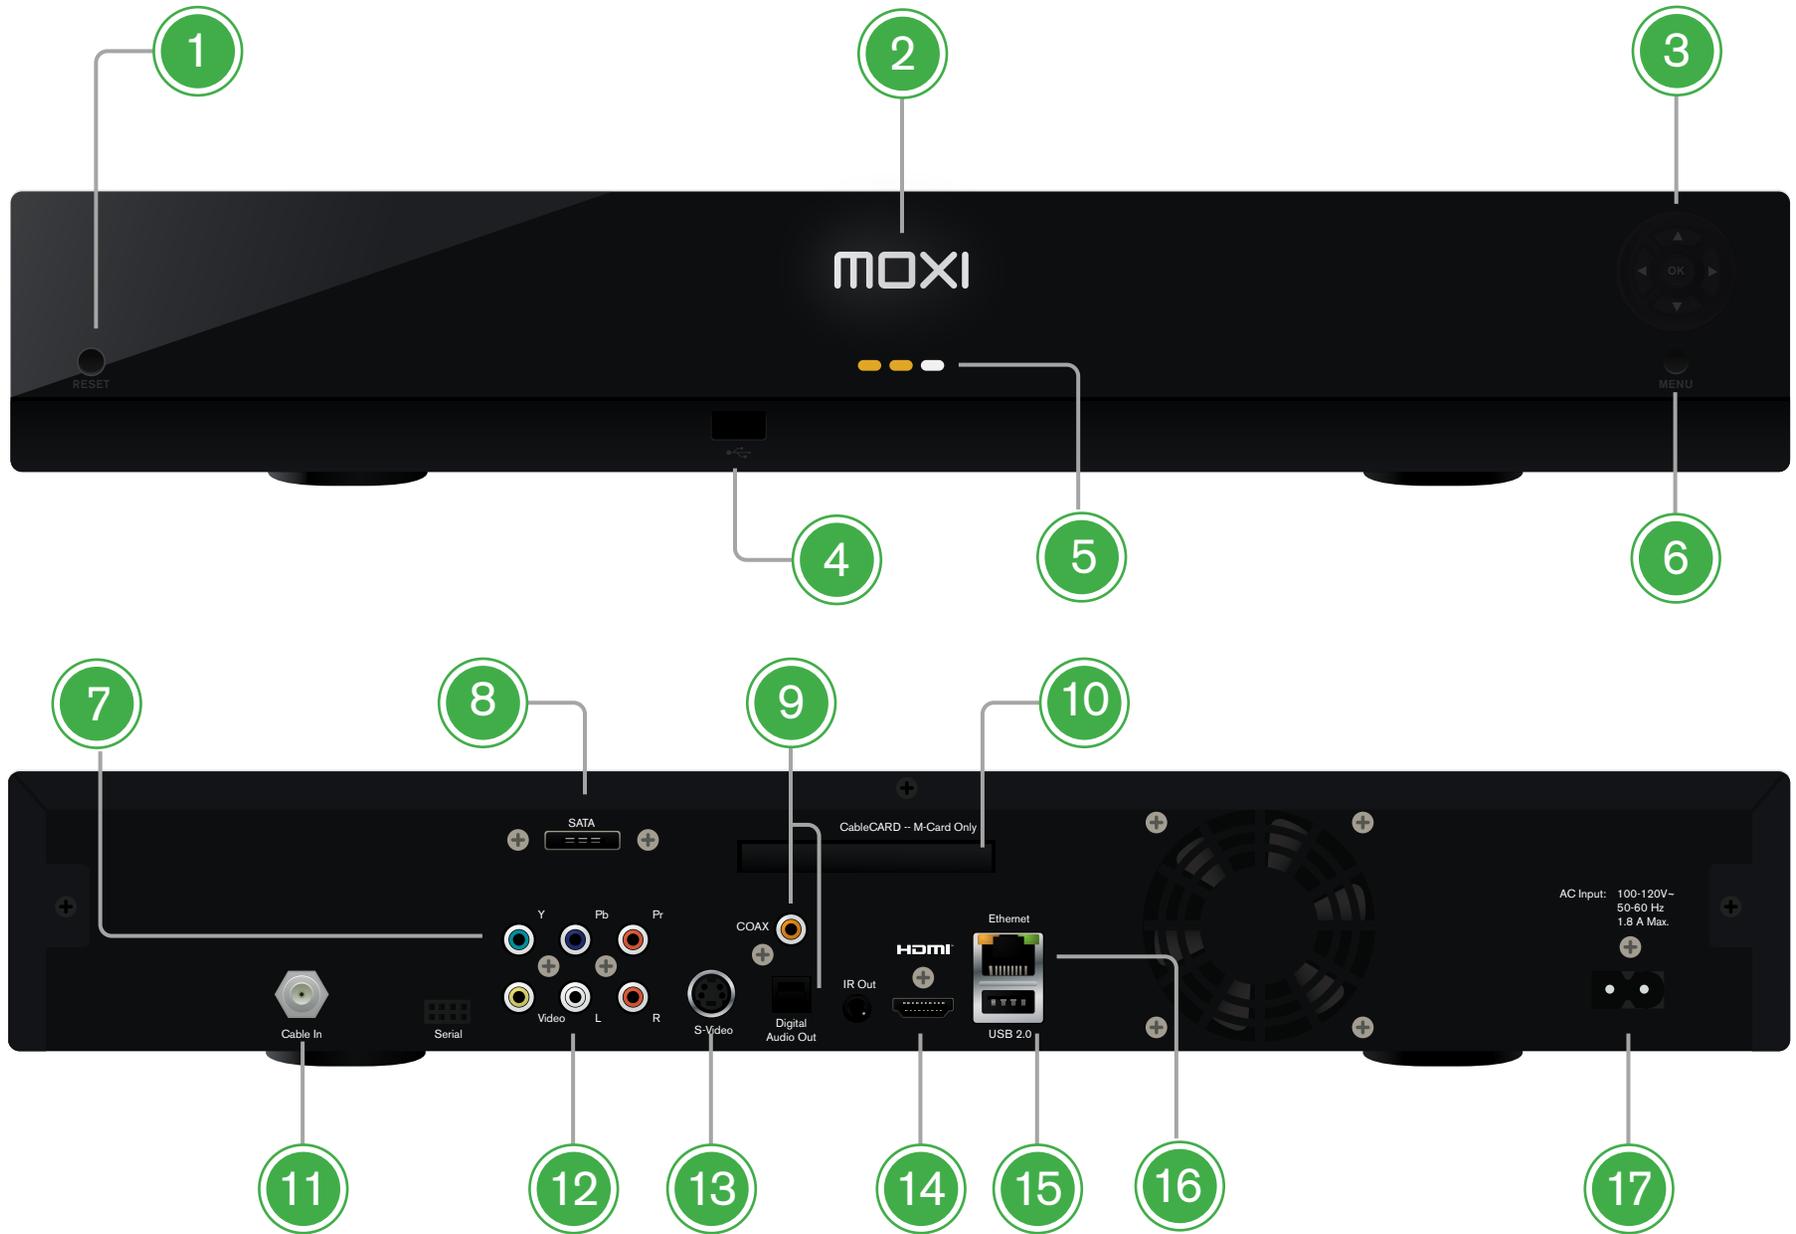

## Moxi HD DVR FRONT

- 1 RESET**  
Resets Moxi.
- 2 MOXI LED**  
A glowing white Moxi logo controlled by settings.
- 3 NAVIGATION**  
Left, right, up, down and OK arrows for direct button input.
- 4 FRONT USB PORT**  
USB port.
- 5 LEDs**  
If you are recording two programs, 2 red LED's will appear below the white Moxi logo.
- 6 MENU BUTTON**  
Works identically to the Moxi button on your remote, taking you to the Moxi menu.

## Moxi HD DVR REAR

- 7 COMPONENT OUTPUT**  
Outputs component video.
- 8 eSATA PORT**  
To connect an external hard drive.
- 9 COAXIAL & OPTICAL OUT**  
Audio out.
- 10 CABLECARD**  
Insert your CableCARD from your cable company.
- 11 COAXIAL IN**  
Cable Coax input.
- 12 COMPOSITE VIDEO**  
Outputs composite video and base-band audio.
- 13 S-VIDEO**  
Outputs S-video.
- 14 HDMI**  
Outputs HDMI audio/video.
- 15 USB 2.0**  
USB connection.
- 16 ETHERNET**  
Connect an ethernet cable to your broadband internet connection.
- 17 POWER**  
Connection for power.

## Ventilation

To prevent overheating of the Moxi device, allow adequate ventilation and airflow around the Moxi system. The Moxi system requires at least a two-inch (5cm) clearance on top and all sides, with airflow to the rear.

## CableCARD Setup Instructions

The Quick Start Guide outlines the basic and most common way to setup Moxi HD DVR with CableCARD. For additional CableCARD setup instructions visit the support section on [www.moxi.com](http://www.moxi.com)



## TV Signal

The Moxi HD DVR requires a cable TV signal; over the air TV and satellite signals are not supported.

## Analog Tuners

The Moxi HD DVR has two digital tuners. If you want to tune analog channels unavailable in digital format:

1. Sign in to your account at [moxi.com](http://moxi.com)
2. Under the account menu, choose Support.
3. If you've completed Moxi setup and there are analog channels available to you that are not showing up in the Moxi Menu, you will see a panel called "Missing Channels" Select Continue, and [moxi.com](http://moxi.com) will walk you through the process to determine whether you need an analog tuner.

Once you've received your analog tuner, follow these instructions to install it:

1. Plug in the USB connector from the external analog tuner to one of the USB ports. Note: it is not necessary to unplug the Moxi system prior to plugging in the analog tuner.
2. If the Moxi system was unplugged, plug it in now. If the Moxi system remained powered-on, respond to the confirmation note: A new tuner was detected. Moxi needs to restart to use this tuner. Restart now or later. Select restart now to immediately see available analog channels in your programming guide.

Any time the external analog tuner is disconnected from the Moxi system or loses power, you are notified by a confirmation note.

1. If the disconnection was accidental, check power-on and the USB connection and respond later to the request to restart the Moxi system.
2. If the disconnection is intentional, and you no longer want to use the analog tuner, respond now to the request to restart the Moxi system. Be aware that shows requiring this tuner will not be recorded. See a list of cancelled shows in the Moxi Menu, Find and Record/Canceled and Deleted option.

Remember that your analog tuner allows you to watch or watch and record one analog channel at one time. If you attempt to watch a different analog channel while an analog channel is recording, you will receive a conflict note.

## Setup Without CableCARD

### Channel Scanning

If you set up a Moxi HD DVR without a CableCARD inserted, you'll be asked during the onscreen setup process to conduct a scan for tunable channels. If you need to perform a channel scan at a later time because you do not have any program information data, you can initiate one by going to Settings, Channel List, selecting Channel Scan, and pressing OK. If you're in the middle of onscreen setup:

1. Select Begin Scan by highlighting the button and pressing OK on the Moxi remote. The scan can take around 20 minutes.
2. When the scan is complete, select Restart by highlighting the button and pressing OK on the Moxi remote.
3. Some tunable HD channels in your lineup, discovered during the channel scan, may not match the electronic program guide (EPG) due to the way cable service providers choose to list them. Moxi refers to the channels with incorrect or missing data as "unmapped". To map them, go to Settings, and choose Channel List. Select the Channel Mapping option.

### Channel Mapping

In the Moxi Menu, navigate to Settings, and then select the Channel List option.

If there are unmapped tunable channels, the Channel Mapping card appears. When you select it, the vertical list will display all tunable channels that were not associated with an EPG channel at the time of your channel scan. To map these channels:

1. With About Channel Mapping in center focus, press OK, and select Map All. This will map all of your analog channels.
2. For the remaining unmapped channels, navigate an unmapped channel into center focus. Press the right arrow and then use the up/down arrows to review the list of available unassociated EPG channels.
3. Determine which unmapped EPG channel applies to an unmapped scanned tunable channel by reviewing the current programming information presented or by watching the channel. When you find a match, press OK on the EPG channel and respond to the Map This Channel? confirmation. The channel will now display in the list as a mapped channel.
4. If you determine that you mapped an EPG channel to a tunable channel in error, from the Channel Mapping card, navigate to the mapped channel, press OK, and respond to the confirmation, Un-map this channel? Follow procedures in the steps above to map the channel correctly.

## Video Connection

We recommend using an HDMI cable to connect Moxi to your TV because it provides both HD video and digital audio with one cable.



If you have an HD TV that does not have an HDMI input, connect your component cable or an HDMI to DVI cable.

If you have an SD TV, connect the S-Video cable. When S-Video is not available, use the yellow portion of the composite cable for video.

Do not connect the unit through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the television.

## Configuration Alternatives



### WHAT IS HDMI?

HDMI stands for High Definition Multimedia Interface.

HDMI transfers uncompressed all-digital audio and video and eliminates losses associated with analog quality meaning that the image quality will be of the highest degree. This is in fact its primary benefit since it is able to transmit both audio and video in one cable. It also prevents the losses caused by digital to analog conversions.

## A/V DELAYS

Digital TVs have a noticeable delay in audio decoding, formatting, and preparing the video for the display.

Using the TV speaker output for the Moxi system output results in an audio delay to the speaker. If you use both the speaker and the Moxi system output, you get a noticeable echo or worse delay effect.

To avoid the delay and echo effects, We recommend using the TV's audio output or the Moxi system's audio output, but do not use both, simultaneously.

## Audio Cable Connection

If you're using any cable for video other than HDMI, you'll need to connect an additional cable to receive audio. For digital audio, connect an S/PDIF cable between Moxi and the TV.

For analog audio, connect the red and white R/L cable or the red and white portions of the composite/R/L cable bundle between Moxi and the TV.

## Audio Receiver Connection


If you choose to connect an audio receiver, you may need to purchase additional cables.

Follow the Moxi HD DVR Quick Start Guide through Step 3.

At Step 4, use one HDMI cable to connect your TV to your audio receiver. Then use an additional HDMI cable to connect your audio receiver to your Moxi HD DVR.

Alternately, you could use the following cables for an audio connection:

- For digital audio, connect an S/PDIF cable to the Moxi and the receiver
- For analog audio with a receiver, connect composite stereo cables between the receiver and the L and R ports of the Moxi HD DVR

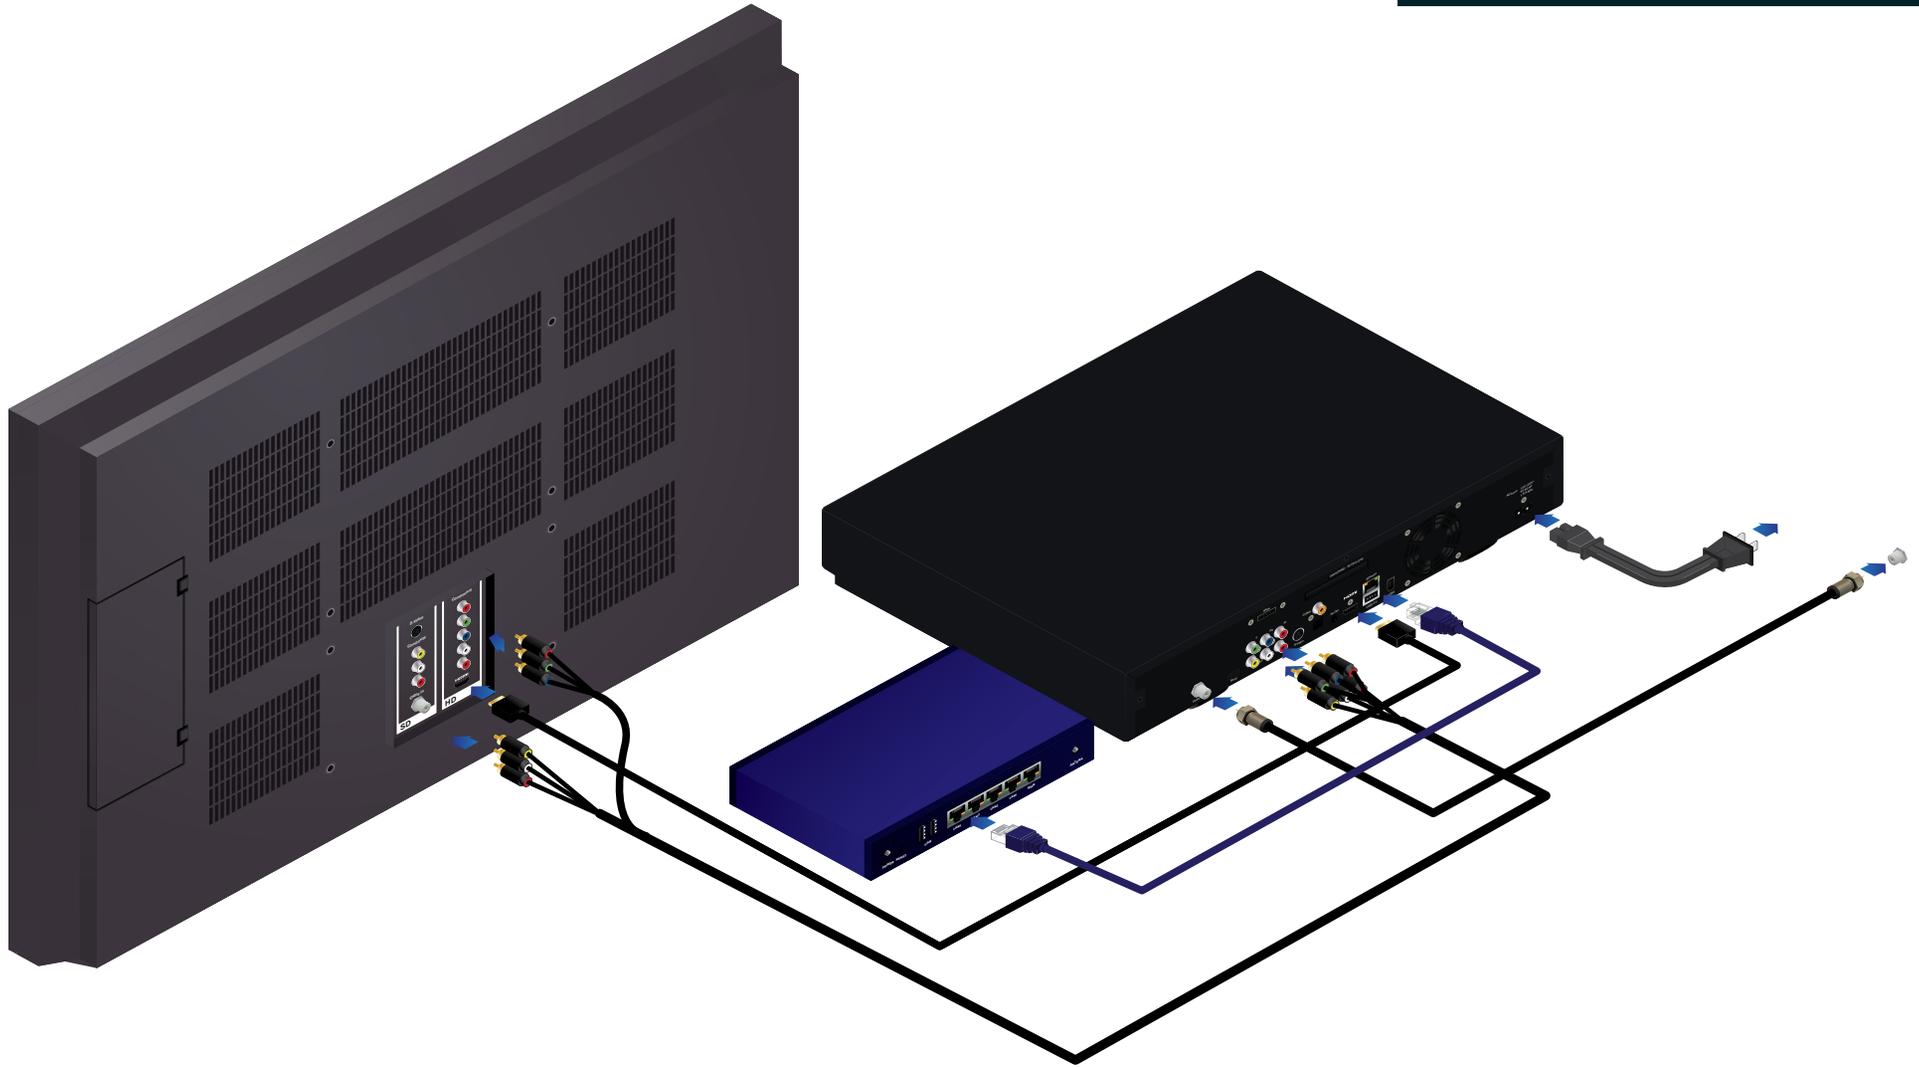

## Broadband Internet Connection

A wired connection with a ETHERNET network cable is the easiest way to connect Moxi to Broadband Internet access.



### Powerline Ethernet Adapter

If you do not have an Ethernet connection close to your Moxi HD DVR, you have the option of using powerline Ethernet adapters. Powerline adapters will use your electrical wiring as a transmission medium. Connect one adapter to your modem with a Ethernet cable, and plug it into an outlet. Connect the other adapter to Moxi with a Ethernet cable, and plug it into an outlet.

Note: For Powerline Adapters to work properly, make sure that both outlets are on the same electrical circuit.





# 16

## Installation - Feature Setup

There are several features available that take you beyond the basic Moxi HD DVR experience. This chapter will give you instructions on setting up features like Media Link, eControls, and more.

MY TV REMOTE CODE IS...

MY RECEIVER REMOTE CODE IS...

## Remote Control

The remote operates the Moxi Menu and features. You will need to program the remote to control the audio and power functions on the TV.

If you entered the code correctly for the device, the device will respond when you hit a remote button - i.e.: it will turn on or off when you hit the power.

The default settings for the vol+/- and mute buttons control the TV when there is not an audio device programmed. When an audio device is programmed, the vol+/- and mute buttons control the audio device.

### Program the remote

Before you begin, find the codes for your TV and receiver from the Remote Codes document at <http://www.moxi.com>, in the Documentation page of the Support section. If you've printed out the user guide, you can write them in the panel to the right.

Use one of the following procedures:

- Programming with codes
- Programming by search – use this if your brand is not listed or if the given codes do not work.

### Programming with codes

1. Point the remote toward the TV, then press and hold the Moxi and OK buttons simultaneously on the Moxi remote, until the LED light at the top of the remote blinks twice.
2. Using the number buttons on the remote, enter one of the codes for your device from the Remote Codes at [moxi.com](http://www.moxi.com), in the Documentation page of the Support section. When you enter a code correctly, the LED light blinks twice. If it blinks once, the code was invalid—try entering the code again. If the code is correct for your device, then the device responds automatically (turns on or off).
3. If the TV or device does not respond, start over using another listed code. Repeat until successful, or use the Programming by Search procedure.
4. Repeat the previous steps while pointing the remote toward the audio device using code for the that device. If you entered the code correctly for the device, then the device responds automatically (turns on or off). Repeat until successful, or use Moxi Remote Control User Guide accessible from [www.moxi.com/user](http://www.moxi.com/user) account.

## Subchannel separators

Many networks broadcast multiple digital subchannels. For example, some networks broadcast four standard definition subchannels identified using a decimal point (such as 09, 09.1, 09.2, and 09.3). When using the arrow buttons to navigate the electronic program guide, these channels appear in order in the channels listing. To button-press directly to these subchannels, use the jump button (which also has a dot) on the number pad to represent the decimal point. For example, to go directly to channel 09.2, on the remote control number pad press 0, 9, jump, and then 2.

## Infrared emitter

When a button on the Moxi remote is pressed, the infrared signal is sent to an IR receiver. The receiver then transmits the signal to the IR emitter (IR blaster), which sends commands to electronic components.

For the IR emitter to send its signals to the Moxi system, it must have a clear view of the infrared receiver on the front panel of the Moxi system (see the following figure). Refer to the documentation provided by the manufacturer of the IR emitter for proper installation and orientation.





## Media Link

Media Link will allow you to stream media from your computer to your Moxi HD DVR. Because Media Link is DLNA-based, it is completely plug and play; once you have connected your computer and Moxi HD DVR to a wired home network router and installed a DLNA server on your computer, you should see that computer listed in the Media Link category of the Moxi Menu.

### Requirements

To set up Media Link, you'll need:

- A DLNA server installed on your computer
- A wired home router connected to both your computer and your Moxi HD DVR
- A wired connection: 10/100 Mbit/s, Ethernet or Higher connection speed, RJ-45

### DLNA Servers


With the PlayOn Digital Media Server, you'll get access to Internet video content like Netflix, Hulu, and Amazon in addition to your computer's content. See the following section for instructions on installing PlayOn. Media Link will also work with any DLNA server you have installed on your computer, but the following servers, in addition to PlayOn, have been fully tested with your Moxi HD DVR:

- Windows Media Connect
- TVersion Media Server
- TwonkyMedia Manager

### Setup Details

For Media Link to function properly, make sure that:

- Your Moxi HD DVR is not connected through a Virtual Private Network(VPN) tunnel
- Your computer is set up to share content according to your server's instructions
- Your server software is not blocked by a Firewall

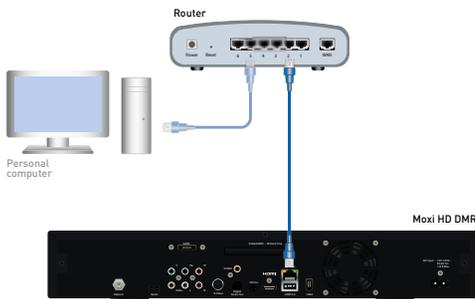

## Internet Video

The PlayOn Digital Media Server will give you access to great Internet video content, such as your Netflix(R) instant play movies, your Hulu(TM) account, YouTube(TM), various TV network sites, and more.

Here's how to get started:

1. Make sure that you have a wired home network router installed and connected to both your Moxi HD DVR and your computer.
2. Go to <http://www.moxi.com> and sign in to your account.
3. Select My Moxi Features from the menu on the left.
4. Select Media Link.
5. Choose Get PlayOn.
6. When prompted, choose run, and complete the installation wizard. The PlayOn software will then install on your computer, and you will have a 14 day trial license of PlayOn.
7. Within one business day, you'll receive a license key in email from Moxi Sales. If you would like to continue using PlayOn after the 14 day trial period, you'll need to enter this key into the PlayOn server. Click the PlayOn icon on your desktop; if the license is expired, you'll be prompted to enter it. If it hasn't, go to account information.

Once you've installed PlayOn, go to your Moxi HD DVR, and select the Media Link category. You should see the PlayOn server in the vertical list. Select it, and you will then be able to browse PlayOn's default content.

To add your Netflix and Hulu accounts as well as the YouTube users whose videos you enjoy, open PlayOn on your computer, and choose Accounts. You can then add your account information, which will determine what shows up on your Moxi HD DVR.





## External Storage Device

To expand the space you have for recorded programs, you can connect one external hard drive at a time to the rear eSATA port on the Moxi HD DVR.

When selecting an external drive, keep in mind that the Moxi HD DVR only supports eSATA storage devices marketed or certified for DVR use.

### To set one up:

1. Plug the eSATA connector into the eSATA port on the rear of the Moxi system.
2. Wait for the confirmation that Moxi recognizes the external hard drive.
3. If this is the first time this hard drive has been connected to this Moxi system, or if the hard drive is not properly formatted for any reason, the Moxi system will ask if you want to reformat the external hard drive. (Reformatting deletes all data on the hard drive). Select yes to confirm to reformat the external hard drive.
4. Once the external hard drive is recognized and properly formatted, the Moxi scheduler will include the additional space in scheduling decisions.

### To disconnect one:

Disconnecting an external hard drive while it is in use (playing a recording or recording a show), can result in corrupting stored data.

1. Manually stop all recordings in progress by selecting the program card in the Moxi Menu, and then choosing stop recording.
2. In the Settings category, select the External Hard Drive card.
3. Select disconnect, and then press OK.
4. You may be presented with a message that the drive is still busy. Please repeat the disconnect process at a later time.



### HARD DRIVE FORMAT WARNING!

Please note that any NEW eSATA hard drive plugged into your Moxi unit will be formatted and lose all of it's data.

# eControls

Your Moxi HD DVR's eControls will allow you to control lighting, A/V devices and IP cameras from the comfort of your TV. To get started with eControls, you first need to decide what kind of devices you would like to control and purchase supported devices.

## Supported Devices

### Lighting

- Functions supported: power, brightness level
- Transmitter needed: Z-Wave Intermatic HA 22 or 23
- Devices supported: Z-wave based light & light switches, and appliance modules

### A/V Devices

- Functions supported: power, volume, mute
- Transmitter needed: IR blaster cable
- Devices supported: all common televisions, projectors, amplifiers and receivers

### IP Cameras

- Functions supported: view, rotate, pan, zoom
- Requirements: home network router connected to each individual camera
- IP Cameras supported:

DLINK	PANASONIC	AXIS
DSC – 5300	BL-C10a	207
DSC-5300W	BL-C20	212
DSC – 900	BL-C20A	
	BL-CL30A	
	BL-C1A	
	BL-C111	
	BL-C131	
	BB-HCM381A	

## Installing Devices

First, you need to enable eControls from your account at moxi.com. Sign in to your account, choose My Moxi Features, and select eControls. Check the enable box. The next step is to install your devices and add them to your Moxi account.

### Lighting


To install a Z-Wave® device:

1. Connect your RF transmitter to your Moxi HD DVR
2. Connect a USB extension cable to the front USB port of your Moxi HD DVR
3. Plug the USB Z-Wave dongle into the other end of the USB extension cable
4. Connect or plug in the Z-Wave plug-in modules into electrical outlets within six feet of the RF transmitter



To add the Z-Wave device to your Moxi account: Note that any Z-Wave devices that are added to your Moxi Z-Wave network will be removed from any previous existing Z-Wave networks.


1. Go to <http://www.moxi.com> and choose Manage Moxi Features.
2. Select eControls and then Set Up Devices and Scenes.
3. Choose the Moxi HD DVR connected to the device
4. Choose Devices from the top menu
5. Choose Add New Device from the right panel
6. Choose Lighting and select the manufacturer
7. Select the model of your Z-Wave device and select Click to Begin, which starts a “listening” process.
8. When you see a note on the eControls Device Wizard that says “Z-Wave Is Listening,” make sure that your device is within six feet of your Z-Wave RF Transmitter, and begin the pairing process on your Z-Wave device by going to the Z-Wave device and pressing a button. In most cases, the Device Wizard advises the action you need to take. Refer to your Z-wave device manual for additional information about the pairing button of your appliance module or light switch.
9. When your Moxi HD DVR detects that the pairing button has been pressed on your Z-Wave device, the Device Wizard presents a status update that the pairing process has begun.
10. The Device Wizard advises “Found a new <device type>” when the pairing process is successful. Select to test the device now, or to change the settings before wrapping up the session. When done, click the right arrow.

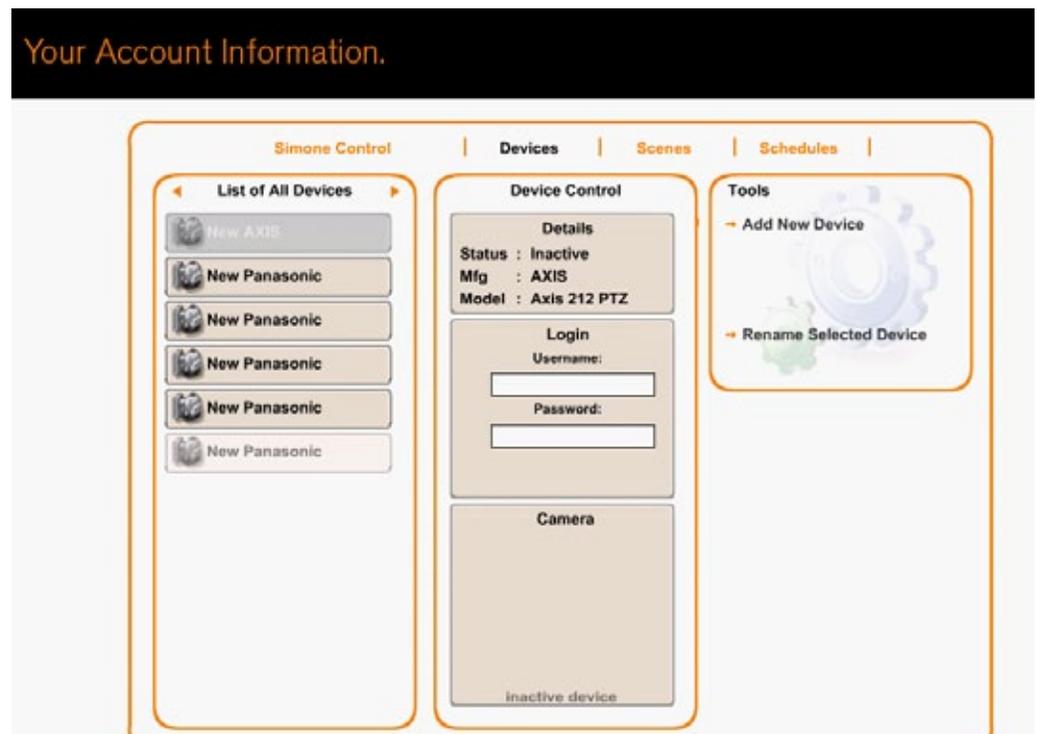

## Audio and Video Devices

To install an A/V device:

1. Insert the IR transmitter connectors into the IR jack on the back of the Moxi HD DVR.
2. Connect the IR transmitter LED to the IR receiver for the A/V device.

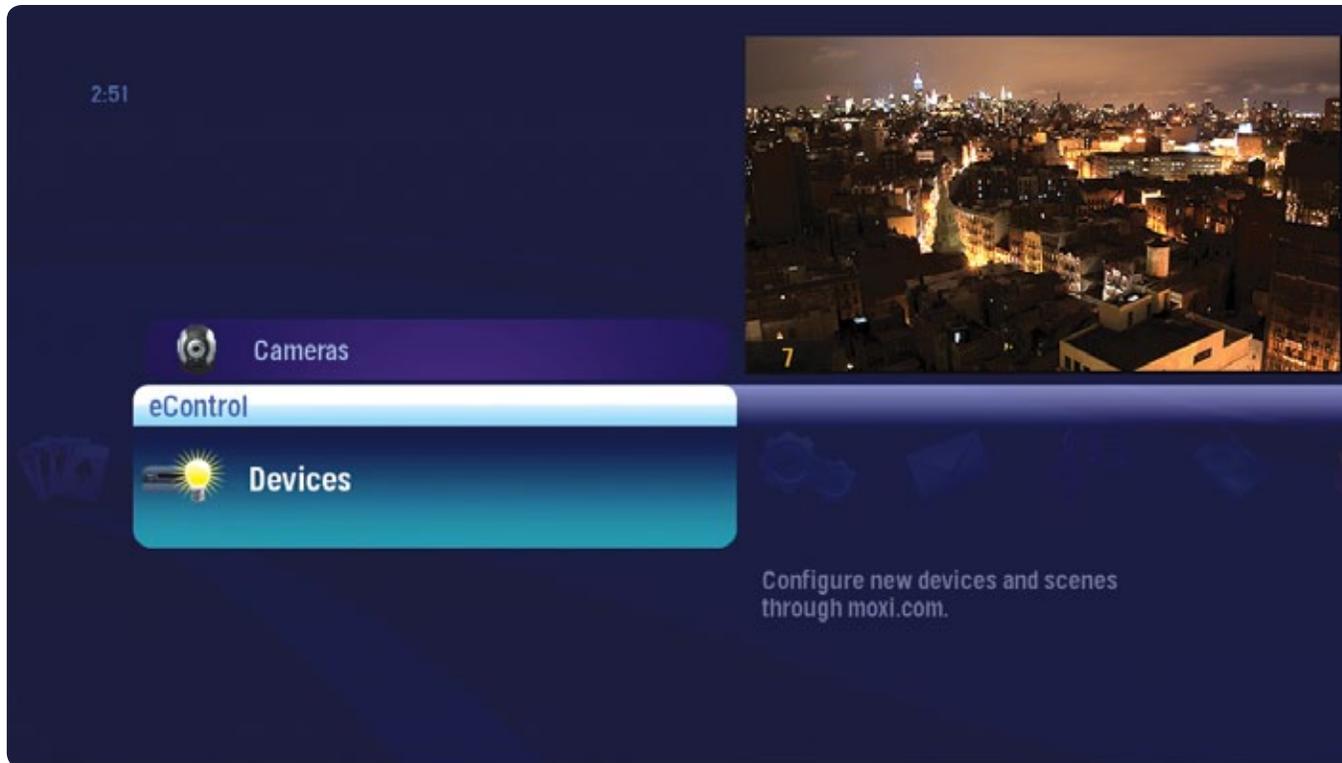


To add an A/V device to your Moxi HD DVR account:

1. Sign in to your account at <http://www.moxi.com>.
2. Select Manage Moxi Devices and then eControls.
3. Select Set up devices and scenes and select the right Moxi HD DVR.
4. Select Devices from the top menu and then Add New Device from the right panel
5. Select the A/V Gear option and choose the type of device.
6. Select the manufacturer of your device by first selecting the first letter and then choosing from the list. Only the first 100 manufacturers are visible in this list; if you do not see your manufacturer, select Show More at the end of the list.
7. Choose your device's model number.
8. Name your device, and select done.

## IP Cameras

To install an IP Camera:


1. Install your network camera, connect it to your home network, and enable UPnP according to the camera's manual. Username/password access to the camera is strongly encouraged.
  2. Your Moxi HD DVR will automatically detect the camera. The detection time varies between 3 and 10 minutes, depending on network conditions and your camera make and model.
  3. Sign in to your account at <http://www.moxi.com>.
  4. Select Manage Moxi Features and then eControls.
  5. Select Devices from the top menu.
  6. Use the arrows at the top of the left panel to select List of Cameras. If your camera was detected, you'll see it listed. If you don't see it listed, give it more time, and try again.
  7. When the camera is detected, if it is password protected, you will receive a login prompt on the dashboard, as shown in the screen below. After logging-in, click Rename selected device for a text entry field. Give the camera a nickname.
- You should now see your camera in the eControls category of the Moxi Menu.

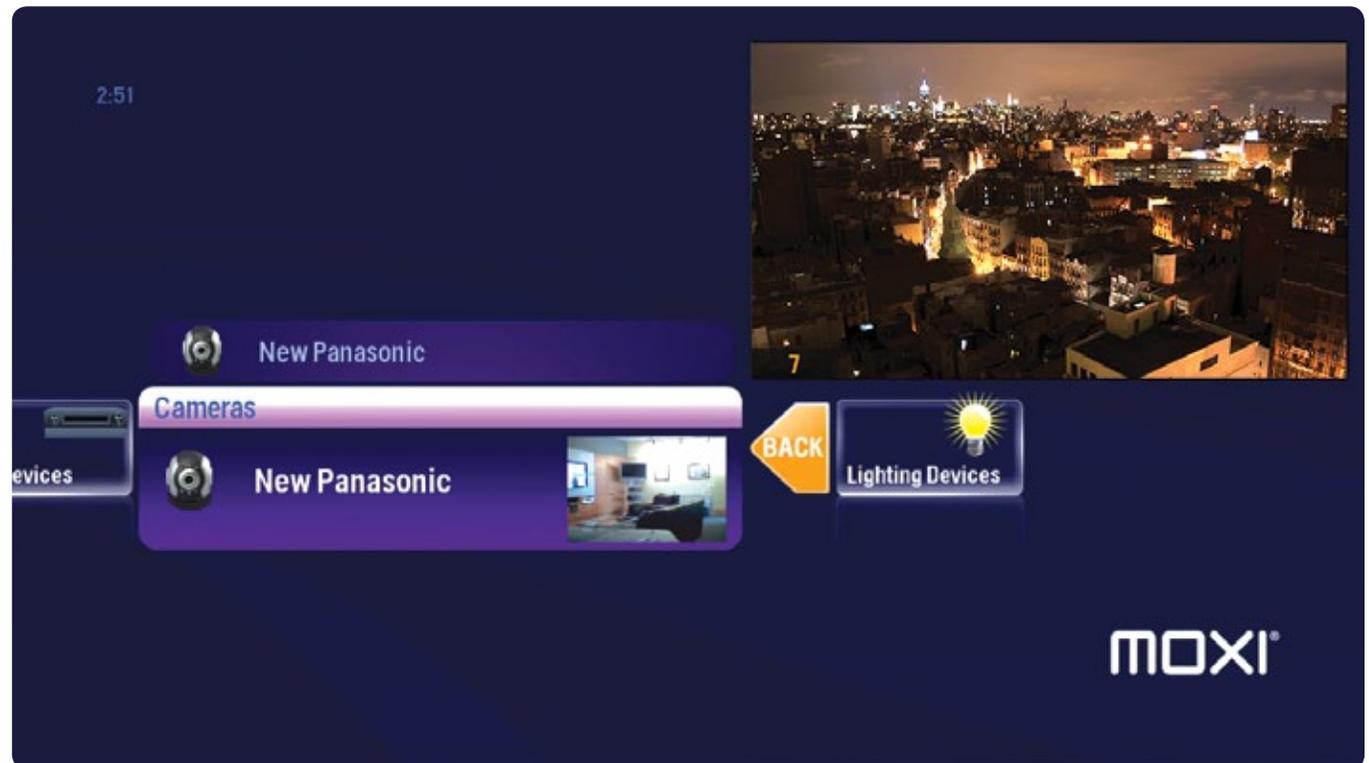

# Moxi.com

To access your Moxi user account, go to the same Website you used for registration: moxi.com. You can change any of the information associated with your account there.

If you select Manage Moxi Features from the menu on the left, you'll be able to add Moxi services like Finetune and Flickr.

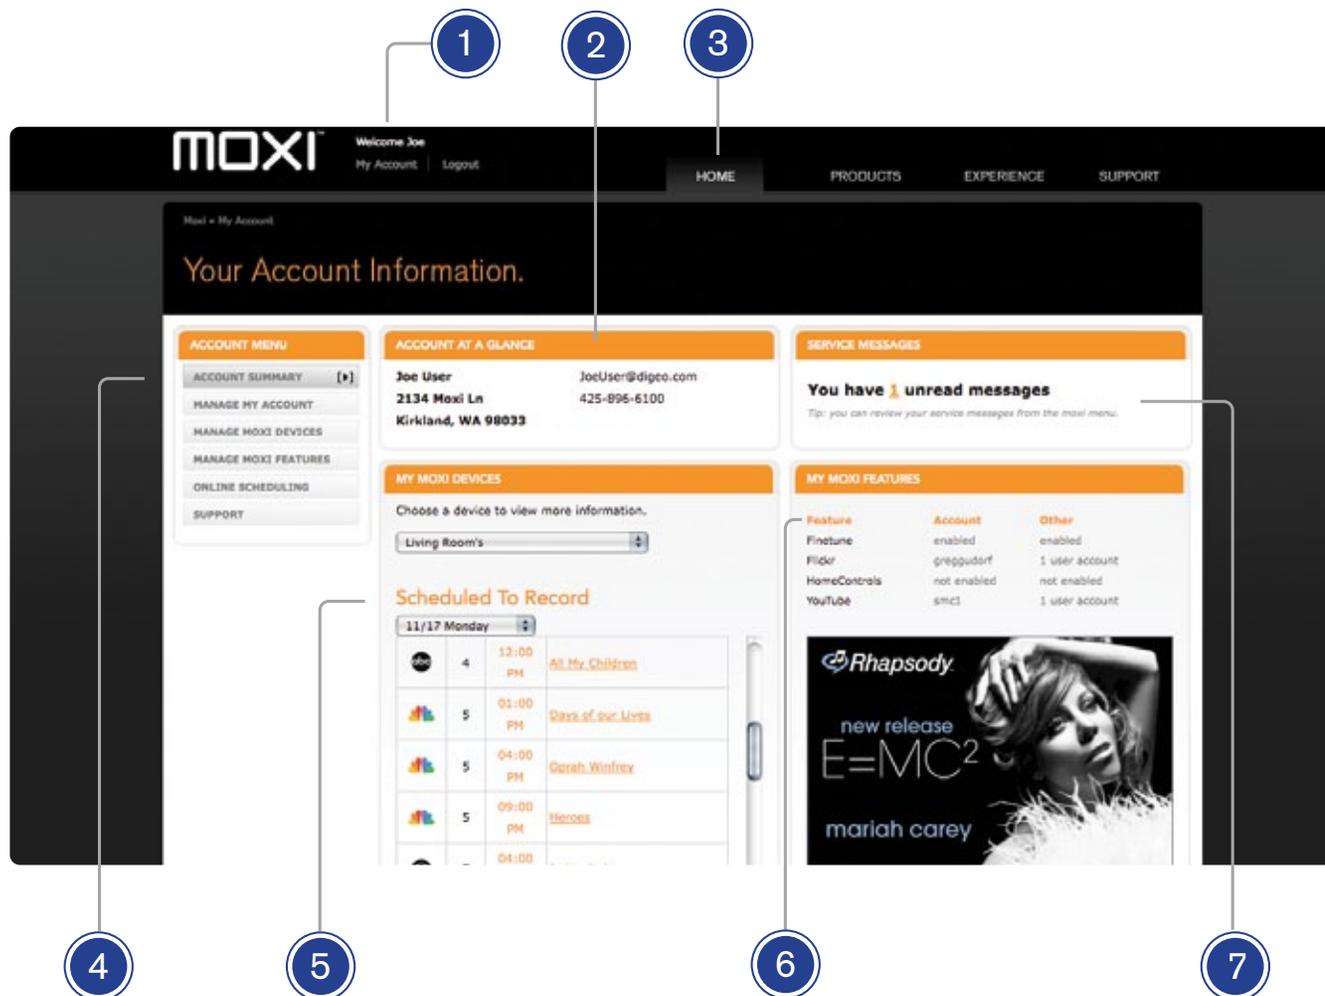

## Feature Setup

- 1 ACCOUNT LOGIN**  
Login to your account or activate your Moxi unit.
- 2 ACCOUNT INFORMATION**  
All of your account information. To edit click on the left side navigation (4).
- 3 WEB SITE NAVIGATION**  
Access all of Moxi.com with an easy to use drop down menu.
- 4 ACCOUNT MENU**  
Clicking on an item may open up additional items. Click on the item to load it into the main area.
- 5 SCHEDULE TO RECORD**  
Quickly see what your Moxi unit is set to record.
- 6 MOXI FEATURE STATUS**  
Enable Moxi features like Finetune and Flickr.
- 7 MESSAGES**  
Check out or delete your messages. Note these messages are the same messages in your Moxi menu.



# 17

## Safety Requirements and Proprietary Notices

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited consumer uses only, unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

The Moxi products feature the Macromedia Flash™ Player technology. For further information on the Macromedia Flash Player, visit <http://www.macromedia.com/software/flash/about/>.

Opera® Browser from Opera Software ASA. © 1995-2007 Opera Software ASA. All rights reserved. Opera is the trademark of Opera Software ASA.

'Dolby' and the 'double-D' symbol are trademarks of Dolby Laboratories. Manufactured under license from Dolby Laboratories.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Programming information provided

by ZAP2IT. The TV Listings by Zap2it logo is the trademark of Tribune Media Services, Inc.

CableCARD™ is a trademark of Cable Television Laboratories, Inc. "CableLabs Certified" is a certification mark of Cable Television Laboratories, Inc. and may not be used without authorization.

Flickr, the Flickr logo (as well as Yahoo!, Y! and Yahoo! and Y! logos) are the trademarks and/or registered trademarks of Yahoo! Inc.

Use of the trademarks and service marks of the National Television Academy ("NTA"), including the mark EMMY®, requires the prior express written permission of National Television Academy.

Rhapsody® is a registered trademark of RealNetworks, Inc.

USE OF MOXI HARDWARE PRODUCTS OTHER THAN CONSUMER PERSONAL USE IN ANY MANNER THAT COMPLIES WITH THE MPEG-2 STANDARD FOR ENCODING VIDEO INFORMATION FOR PACKAGED MEDIA IS EXPRESSLY PROHIBITED WITHOUT A LICENSE UNDER APPLICABLE PATENTS IN THE MPEG-2 PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, L.L.C., 250 STEELE STREET, STE 300, DENVER, CO, 80206.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson

Supply of this product does not convey a license nor imply any right to distribute MPEG Layer-3 compliant content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via Internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.

"DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance."

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS

OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Designed with UEI Technology™  
Under License from Universal Electronics Inc.  
US Pat Nos.: 5,288,077; 5,255,313;  
5,414,761; 5,552,917; 7,218,243  
Portions © UEI 2000 - 2009

Digeo, Inc. reserves the right to discontinue or change any product or service, or the documentation for any product or service, at any time, without notice. Digeo, the Digeo logo, Moxi, the Moxi logo, and combinations thereof are trademarks of Digeo, Inc. All other trademarks are the property of their respective owners.

## REGULATORY INFORMATION

Federal Communications Commission Radio and Television Interface Statement for a Class 'B' Device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in the residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modification not expressly approved by the party responsible for compliance could void compliance and the user's authority to operate the equipment.

This equipment contains no user-serviceable parts. Do not attempt to service the equipment yourself.

CAUTION,DISCONNECT ALL POWER CORDS TO COMPLETELY DE-ENERGIZE UNIT, IF REQUIRED FOR SERVICING.

### Declaration of Conformity

According to 47 CFR, Parts 2 and 15 for Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B Personal Computers, Digeo, Inc., 8815 122nd Avenue NE, Kirkland, WA 98033 declares under sole responsibility that the product identifies with 47 CFR Part 2 and 15 of the FCC Rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect that the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47 CFR 2.909. Operation is subject to the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.
- The above named party is responsible for ensuring that the equipment complies with the standards of 47 CFR, Paragraphs 15.107 to 15.109

### IMPORTANT WARNING INFORMATION

To prevent fire or shock hazard, do not expose the Moxi products to rain or moisture. Do not insert the Moxi products plug into an extension cord, receptacle, or outlet unless the blades can be fully inserted.

To prevent overheating, situate the products away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

The Moxi products contain no user serviceable parts. Do not remove cover or back.

Heed all warnings on the media center and in the operating instructions. The following warning label appears on the media center.



Each of these symbols are intended to alert you to the presence of uninsulated "dangerous voltage" within the Moxi products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## INSTALLATION

This installation should conform to all local codes.

This equipment operates over the marked Voltage and Frequency range without requiring manual setting of any selector switches. Different types of line cord sets may be used for connections to the main supply circuit and should comply with the electrical code requirements of the country of use.

Coaxial Connections – To reduce the risk of fire, use only No. 26 AWG or larger coaxial cable or equivalent

### Outdoor Grounding System

If the Moxi products connect to a cable system, be sure that the cable system is properly grounded in accordance with the National Electrical Code (NFPA/ANSI70) and any other applicable state or local regulation. Proper grounding provides some protection against voltage surges and built-up static charges. Cable systems should be grounded in accordance with Article 820 of the NEC., and outdoor antennas should be grounded in accordance with Article 810 of the NEC.

#### Note to Professional Installers

This reminder is provided to call the installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close as possible to the point of cable entry as practical.

See example of antenna grounding above.

Electric service equipment:

Ground clamp

Ground clamps

Grounding conductors(NEC Section 810-21)

Power service grounding electrode system

(NEC Article 250, Part H) Antenna lead in wire Antenna discharge unit (NEC Section 810-20)

NEC - National Electrical Code

## USAGE WARNING

### Warning About Photosensitive Seizures

Exposure to certain visual images, including flashing lights or patterns that may appear in online video games and other functions or applications, can cause a very small percentage of people to experience a seizure. Even people without a history of seizures or epilepsy may have an undiagnosed condition that can cause photosensitive epileptic seizures while watching or using video games. These seizures may have a variety of symptoms, such as eye or face twitching, lightheadedness, altered vision, shaking or jerking of arms or legs, confusion or disorientation, or momentary loss of awareness. Seizures may also cause a loss of consciousness or convulsions that can lead to injury from falling down or striking nearby objects. If you experience any of these symptoms, immediately stop using the service and consult a doctor.

Parents should watch for and ask their children about the above symptoms because children and teenagers are more likely than adults to experience these seizures.

Taking the following precautions may reduce the risk of photosensitive epileptic seizures:

- Avoid using any interactive features/services on large television screens
- View your television in a well-lit room
- Sit farther from the television screen
- Do not use any interactive features/services when drowsy or tired

If you or any of your relatives have a history of seizures or epilepsy, consult a doctor before using the interactive television services.

#### Additional Warnings for California

These products contains a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm.

#### Avoid Damaging Your Television or Other Audio/Video Equipment

Certain interactive television services or functions, such as tickers and online video games that remain static on the screen, can damage some televisions by “burning” the image into the screen. This results in a permanent shadow of the image, even when the service or feature is not used. Consult the owner’s manual for your television, the television dealer, or the manufacturer to determine if such features and functions can be used safely on your set.

Before connecting or disconnecting any audio / video device, make sure that you turn off power to the Moxi products and to the device. This reduces the risk of electrical damage.

To avoid damage to audio/video equipment or to the Moxi products, do not touch the audio / video cord’s terminals or the Moxi products audio/video ports with your fingers or allow metal parts to touch them.

### **SAFETY PRECAUTIONS**

Caution—Use of controls or adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure, fire, electric shock, damage to the Moxi products and other equipment, and other dangers.

Read and follow all instructions and safety information carefully before operating the device. Save the instructions for future reference.

Do not place liquid-filled containers, such as coffee cups or vases, on or near the Moxi products.

Do not use the Moxi products in or near wet or water-filled areas, such as a bathtub, sink, wet basement, or swimming pool.

Do not overload wall outlets and extension cords.

Do not defeat the safety purpose of the polarized plug on the Moxi products cord. It has one blade wider than the other, which allows it to fit into a power outlet only one way. If you cannot insert the plug fully, try reversing it. If that fails, contact your electrician to replace the outlet.

eControls are not intended for use in an environment where there may be any risk of personal injury or property damage, such as use to monitor moving vehicles, home healthcare, or heavy equipment.

### **Moxi Products Placement**

Use the Moxi products only with a cart, stand, bracket, or table recommended by the manufacturer, or sold with the equipment.

Place the Moxi products on a stable platform. If you mount the Moxi products on a bracket or stand, follow the manufacturer’s instructions and use mounting accessories recommended by the manufacturer.

Do not place the Moxi products near a heat source, such as a radiator or heat register, or another product that produces heat.

Do not run the power cord so it is likely to be walked on, tripped over, inadvertently pulled, accessible to a child, run over, or pinched by items placed on or against it.

Place the Moxi products in a location that is close enough to an electrical outlet and where the power cord is easily accessible to be disconnected from the wall outlet or from the rear panel of the Moxi products.

To prevent overheating, place the Moxi products in an area that allows adequate ventilation. Ensure at least two inches of unobstructed space around the

sides of the Moxi products. Never place it on a soft surface, such as a bed or sofa that might block the ventilation holes in the cabinet, or near any flammable material.

Do not stack any other component or electric device on top of the Moxi products.

### **Power Sources**

Operate the Moxi products only from the type of power sources indicated on the label. If you are not sure of the type of power supplied to your home, consult your local power company. For equipment intended to operate from battery power or other sources refer to the operating instructions for that equipment.

Do not place objects on the cords. Do not lean against the cords. Placing objects on or leaning objects against cords can damage the cords. Give particular attention to cords at the point at which the cord connects to plugs, at the electrical outlets, and where the cords exit the Moxi products.

### **Attachments**

Use only attachments recommended by the Moxi products manufacturer. Other attachments may cause hazards.

### **Care and Maintenance**

Unplug the Moxi products from the wall outlet before cleaning them. Wipe with a damp cloth only. Do not use liquid cleaners, water or aerosol cleaners. Do not use a magnetic/static cleaning device (dust remover) to clean the Moxi products.

During a lightning storm or when leaving the Moxi products unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the connection to the cable system. This will prevent damage caused by lightning and power line surges.

Never place or spill liquid of any kind on the Moxi products.

Never push objects of any kind into the Moxi products through openings in the cabinet. The objects may touch dangerous voltage points or cause a short circuit that could result in a fire or electrical shock.

The Moxi products do not contain any user-serviceable parts. Do not attempt to service the Moxi products yourself. Do not open the Moxi products or remove or unfasten, (fully or partially), any parts. Opening or removing covers will void your limited warranty, is prohibited by your End User Agreement, and might expose you to dangerous voltage or other hazards. Refer all servicing to Digeo Customer Service.

For damage that requires service, unplug the Moxi products from the AC outlet.

Contact Digeo Customer Service at 866-969-6694 if you observe any of the following conditions:

- Power supply cord or plug is damaged.
- The Moxi products have been exposed to rain or water.
- Liquid has spilled or objects have fallen into the Moxi products.
- The Moxi products have been dropped or cabinet has been damaged.
- The Moxi products exhibit a change in performance, indicating a need for service.
- The Moxi products do not operate normally by following the operating instructions. Adjust only the controls covered by the operating instructions, because an improper adjustment of other controls can result in damage and may likely require extensive work by a qualified technician to restore the equipment to its normal operation.

**Battery Use and Disposal**

The Moxi products do not contain any batteries that may be replaced or accessed by a consumer. Any remote control provided for use with the Moxi products may require that you install or replace batteries within the remote control.

CAUTION: replace any end-user accessible batteries only in accordance with the instructions. Incorrectly installed batteries may explode or leak causing risk of injury and property damage.

Notwithstanding any information provided by Digeo in this manual regarding the use of batteries, you assume all responsibility and liability for the use and disposal of end-user accessible batteries in accordance with all applicable laws, rules, and regulations.



